

ARCADE1UP 195570004142

Instruction Manual: Arcade1Up Marvel Super Heroes 2 Player Countercade

Brand: ARCADE1UP | Model: 195570004142

1. INTRODUCTION

The ARCADE1UP Marvel Super Heroes 2 Player Countercade brings classic arcade gaming into your home in a compact, tabletop design. This electronic game unit features an 8-inch color LCD screen and includes four pre-installed games, offering an immersive experience for two players. Designed for convenience, it requires no assembly and is ready to play right out of the box.



Figure 1: Front angled view of the Arcade1Up Marvel Super Heroes Countercade.

2. SETUP

This Countercade unit is designed for immediate use with no assembly required. Simply place the unit on a stable, flat surface such as a countertop or table.

2.1 Power Connection

1. Locate the power adapter included with your unit.
2. Plug the small end of the power adapter into the DC input port on the back of the Countercade.
3. Plug the other end of the power adapter into a standard electrical outlet.

2.2 Initial Power On

Once connected to power, locate the ON/OFF switch on the control panel. Flip the switch to the 'ON' position to power on the unit. The screen will display a loading sequence, and the marquee will illuminate.



Figure 2: Top-down view of the control panel, showing joysticks, buttons, and power/volume controls.

3. OPERATING INSTRUCTIONS

3.1 Controls Overview

The Countercade features two sets of arcade-style controls, each with a joystick and multiple action buttons (punch, kick). There are also dedicated buttons for 1-player and 2-player game starts, and volume controls.

3.2 Game Selection

Upon powering on, the unit will typically display a game selection menu. Use the joysticks to navigate through the available games. Press the designated 'Start' or 'Punch' button to select a game.

3.3 Volume Adjustment

The unit includes adjustable volume controls. Use the 'VOL+' and 'VOL-' buttons on the control panel to increase or decrease the sound level to your preference. For private listening, a headphone jack may be available (refer to physical unit for exact location).



Figure 3: Front view of the Countercade, highlighting the screen and control layout.

4. MAINTENANCE

To ensure the longevity and optimal performance of your Countercade, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the exterior surfaces. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by a dry cloth. Avoid abrasive cleaners or solvents.
- **Screen Care:** Clean the LCD screen with a soft, lint-free cloth specifically designed for electronics. Do not spray cleaning solutions directly onto the screen.
- **Storage:** When not in use for extended periods, store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you encounter any issues with your Countercade, refer to the following common solutions:

Problem	Possible Cause	Solution
Unit does not power on.	Power adapter not connected or faulty outlet.	Ensure power adapter is securely plugged into the unit and a working electrical outlet. Try a different outlet.
No sound or low volume.	Volume set too low or muted.	Adjust volume using the 'VOL+' button. Check if headphones are plugged in if applicable.
Controls are unresponsive.	Temporary software glitch or connection issue.	Power off the unit, wait 10 seconds, then power it back on. If the issue persists, contact customer support.
Screen is blank or distorted.	Power issue or internal display problem.	Ensure stable power supply. Power cycle the unit. If problem continues, seek professional assistance.

6. SPECIFICATIONS

Feature	Detail
Brand	ARCADE1UP
Model Number	195570004142
Controller Type	Joystick, Button Control
Screen Size	8 Inches
Display Type	LCD
Form Factor	Countertop
Item Dimensions (L x W x H)	11.42 x 9.57 x 15.78 inches
Item Weight	17 Pounds
Included Games	4 Games (specific titles not provided in input, but implied by "Marvel Super Heroes" and "4 Games 1")
Assembly Required	No

7. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official ARCADE1UP website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.
Official ARCADE1UP Website: www.arcade1up.com

