

[Manuals.plus](#) /

› [ARCADE1UP](#) /

› ARCADE1UP Ms. Pac-Man/Galaga Class of '81 Arcade Machine User Manual

ARCADE1UP 195570010716

ARCADE1UP Ms. Pac-Man/Galaga Class of '81 Arcade Machine User Manual

Brand: ARCADE1UP | Model: 195570010716

1. INTRODUCTION

The ARCADE1UP Ms. PAC-MAN / GALAGA Class of '81 arcade machine offers an authentic retro arcade experience in a home-friendly form factor. Redefining family game rooms, game caves, and even home offices, this machine is a must-have for retro-game enthusiasts and pop-culture collectors. It plays great, looks great, and serves as an instant conversation piece. This manual provides essential information for setting up, operating, and maintaining your arcade machine.



Figure 1: Front view of the ARCADE1UP Ms. Pac-Man/Galaga Class of '81 Arcade Machine.

2. KEY FEATURES

- Light-UP Marquee: Enhances the authentic arcade look.
- Riser: Included to provide additional height for comfortable play.
- Light-Up Deck Protector: Protects the control panel and adds visual flair with RGB LEDs.
- WIFI-LIVE for Leaderboards: Connects to Wi-Fi for online leaderboards, allowing you to compete with other players.
- 12 Games in 1: Features a collection of classic arcade titles.
- Real-Feel Arcade Controls: Provides an authentic arcade gaming experience.
- Adjustable Volume: Allows control over game audio levels.
- Clear Deck Protector: Durable protection for the control panel.

- Anti-Tip Over Strap: Ensures stability and safety.

3. INCLUDED GAMES

This arcade machine comes pre-loaded with 12 iconic classic games:

- Ms. PAC-MAN
- GALAGA
- GALAGA '88
- GALAXIAN
- DIG DUG
- DIG DUG II
- MAPPY
- RALLY-X
- ROLLING THUNDER
- ROMPERS
- TOWER OF DRUAGA
- KING AND BALLOON

4. SETUP GUIDE

4.1 Unboxing and Assembly

The ARCADE1UP machine is designed for relatively easy assembly. While the external packaging may show signs of transit, the internal components are typically well-protected. Ensure all parts are present and undamaged before beginning assembly.

- Carefully unpack all components, referring to the included assembly instructions.
- The matching riser is included and should be assembled with the main cabinet.
- When installing the clear deck protector, ensure protective films are removed from **both** sides for optimal clarity. This step is crucial and may not be explicitly highlighted in all instructions.
- Secure the cabinet to the riser using appropriate hardware. Some users may opt for additional reinforcement (e.g., 1/4 inch bolts) for enhanced stability.



Figure 2: The arcade machine in use, demonstrating its assembled height with the included riser.

4.2 Power Connection

Connect the power adapter to the machine and a standard electrical outlet. Ensure the power switch is in the 'off' position before connecting. Once connected, you can power on the machine using the designated switch on the control panel.

4.3 Network Setup (Wi-Fi)

To access online leaderboards and potential software updates, connect your machine to a Wi-Fi network. Navigate to the network settings menu on the machine's display. Enter your Wi-Fi password carefully. Note that some Wi-Fi networks with specific password length requirements (e.g., not 10, 26, or 58 characters) might encounter connectivity issues. A workaround could involve adjusting your router's password settings or using a mobile hotspot with a compatible password length.

5. OPERATING INSTRUCTIONS

5.1 Game Selection

Upon powering on, the machine will display a game selection menu. Use the joystick to navigate through the list of available games. Press the designated 'Start Game' button to select and launch your desired game. You can switch between games using the on-screen menus.



Figure 3: Detailed view of the control panel with joystick and buttons.

5.2 Gameplay Controls

The machine features real-feel arcade controls for an authentic experience:

- **Joystick:** Used for character movement in games like Ms. Pac-Man and Galaga.
- **Buttons:** Used for actions such as firing (Galaga) or other game-specific functions.

- **Volume Control:** An adjustable volume switch is located on the control panel to set the audio level.
- **Return to Menu:** Hold the 'Start' button for 5 seconds to return to the main game selection menu.
- **Reset Game:** Hold the 'Start' button for 10 seconds to reset the current game.



Figure 4: Ms. Pac-Man gameplay displayed on the 17-inch LCD screen.

5.3 Online Features (Leaderboards)

Once connected to Wi-Fi, you can access global leaderboards for various games. Compete with other ARCADE1UP owners and see how your high scores rank. Ensure a stable internet connection for optimal performance of this feature.

6. MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the cabinet and screen. Avoid abrasive cleaners or solvents that could

damage the finish or display.

- **Control Panel:** The clear deck protector helps keep the control panel clean. Periodically wipe it down to remove dust and fingerprints.
- **Ventilation:** Ensure adequate airflow around the machine to prevent overheating. Do not block ventilation openings.

7. TROUBLESHOOTING

Issue	Possible Cause	Solution
No Power / Machine Not Turning On	Power cable not connected, power switch off, faulty outlet.	Check power connections, ensure switch is ON, try a different outlet.
Display Issues (e.g., blurry, debris)	Protective film not fully removed from screen/deck protector, debris under screen protector.	Ensure all protective films are removed. For debris under screen protector, consult customer support or a qualified technician.
Wi-Fi Connectivity Problems	Incorrect password, incompatible password length, network interference.	Double-check password. Consider adjusting router settings for password length or using a mobile hotspot as a temporary solution.
Controls Unresponsive	Loose connections, internal component issue.	Ensure all internal connections are secure (if accessible). Contact customer support if issue persists.

8. PRODUCT SPECIFICATIONS

Specification	Detail
Platform	Electronic Game
Assembled Dimensions (D x W x H)	22.8 D x 20.9 W x 58.1 H inches
Item Weight	80 lbs
Screen Size	17 inches
Display Type	LCD
Material	Acrylonitrile Butadiene Styrene (ABS)
Controller Type	Joystick
Age Grading	14+

Specification	Detail
UPC	195570010716
Manufacturer	Arcade 1Up

9. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your ARCADE1UP Ms. Pac-Man/Galaga Class of '81 Arcade Machine, please refer to the official ARCADE1UP website or contact their customer support directly. Keep your proof of purchase for warranty claims.

© 2024 ARCADE1UP. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question