

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ARCADE1UP](#) /

› [ARCADE1UP Teenage Mutant Ninja Turtles 2 Player Countercade Instruction Manual](#)

ARCADE1UP 195570000519

ARCADE1UP Teenage Mutant Ninja Turtles 2 Player Countercade Instruction Manual

Model: 195570000519

INTRODUCTION

Welcome to the world of classic arcade gaming with your new ARCADE1UP Teenage Mutant Ninja Turtles 2 Player Countercade. This compact tabletop arcade machine brings the excitement of two iconic TMNT games directly to your home. Designed for two players, it offers an authentic arcade experience with an 8-inch color LCD screen and responsive controls. This manual will guide you through the setup, operation, and care of your Countercade to ensure years of enjoyment.

SETUP

Unpacking

- Carefully remove the Countercade from its packaging.
- Inspect the unit for any signs of damage. If damaged, contact customer support immediately.
- Retain all packaging materials for future storage or transport.

Placement

The ARCADE1UP Teenage Mutant Ninja Turtles Countercade is designed for tabletop use. Consider the following for optimal placement:

- Place the unit on a stable, flat surface.
- Ensure adequate space around the unit for comfortable two-player gameplay.
- Avoid direct sunlight or extreme temperatures.
- Product Dimensions: 16.54 inches (D) x 11.81 inches (W) x 15.75 inches (H).
- Product Weight: Approximately 17.54 lbs.

Power Connection

- Locate the power adapter included with your Countercade.

- Plug the adapter into the power input port on the back of the unit.
- Plug the other end of the adapter into a standard electrical outlet.



Image: Front-right view of the ARCADE1UP Teenage Mutant Ninja Turtles Countercade, showcasing its design and controls.

OPERATING INSTRUCTIONS

Powering On/Off

- To power on the unit, press the 'ON/OFF' button located near the screen. The screen will illuminate and the game will begin loading.
- To power off, press and hold the 'ON/OFF' button until the unit shuts down.

Volume Adjustment

- The Countercade features adjustable variable volume.
- Use the 'VOL+' and 'VOL-' buttons, typically located near the screen, to increase or decrease the game audio.

Game Selection

This Countercade includes two classic Teenage Mutant Ninja Turtles arcade games: Teenage Mutant Ninja Turtles (1989) and Teenage Mutant Ninja Turtles: Turtles in Time (1991).

- Upon powering on, you will typically be presented with a game selection menu.
- Use the joysticks and action buttons to navigate and select your desired game.

Controls

The Countercade is equipped with two sets of arcade-style controls for two-player action.

- **Joysticks:** Use the joysticks for character movement and menu navigation.
- **Action Buttons:** The colored buttons are used for various in-game actions such as attack, jump, and special moves. Refer to the on-screen game instructions for specific button functions.
- **Player Select Buttons:** Buttons are available to select your preferred Ninja Turtle character at the start of a game.



Image: Close-up view of the control panel, showing the two joysticks and multiple action buttons for two players.

MAINTENANCE

Cleaning

- Always power off and unplug the unit before cleaning.
- Use a soft, dry cloth to wipe down the cabinet and screen.
- For stubborn marks, lightly dampen the cloth with water. Avoid harsh chemicals or abrasive cleaners.
- Do not spray cleaning solutions directly onto the unit.

Storage

- Store the Countercade in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, consider using the original packaging to protect the unit.

TROUBLESHOOTING

If you encounter any issues with your Countercade, please refer to the following common solutions:

Problem	Possible Solution
Unit does not power on	Ensure the power adapter is securely connected to both the unit and a working electrical outlet. Try a different outlet.
No sound	Check the volume level using the 'VOL+' button. Ensure the volume is not muted.
Controls are unresponsive	Power off the unit, wait 10 seconds, then power it back on. If the issue persists, contact customer support.
Screen is blank or distorted	Power cycle the unit. Ensure the unit is not exposed to extreme temperatures.

For issues not listed here or if solutions do not resolve the problem, please contact ARCADE1UP Customer Support.

SPECIFICATIONS

Feature	Detail
Model Number	195570000519
Screen Type	8" Color LCD
Dimensions (D x W x H)	16.54" x 11.81" x 15.75"
Weight	17.54 lbs
Games Included	Teenage Mutant Ninja Turtles (1989), Teenage Mutant Ninja Turtles: Turtles in Time (1991)
Players	2 Player
Volume Control	Adjustable Variable Volume

WARRANTY INFORMATION

Your ARCADE1UP Teenage Mutant Ninja Turtles 2 Player Countercade is covered by a manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your product or visit the official ARCADE1UP website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please visit the official ARCADE1UP website or contact their customer service department. Contact information can typically be found on the manufacturer's website or in the documentation included with your product.

[Visit ARCADE1UP Official Website](#)