

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY Replacement Remote Control for Skyworth Smart TV (Model SKYWORTH-4-4) Instruction Manual

ALLIMITY SKYWORTH-4-4

ALLIMITY Replacement Remote Control Instruction Manual

Model: SKYWORTH-4-4

INTRODUCTION

This manual provides instructions for the ALLIMITY Replacement Remote Control, designed for use with various Skyworth Smart TV models. This remote control requires no programming and is ready for use after battery installation.

PRODUCT OVERVIEW

The ALLIMITY replacement remote control offers a full range of functions for compatible Skyworth Smart TVs. Its ergonomic design ensures comfortable handling and easy access to all buttons.



Figure 1: Front view of the ALLIMITY replacement remote control. This image displays the layout of all buttons, including power, number keys, navigation, volume, channel, and special function buttons.

SETUP: BATTERY INSTALLATION

To begin using your remote control, install two AAA alkaline batteries. No additional programming or setup is required.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.







Figure 2: Back view of the remote control with the battery compartment open, showing the correct orientation for AAA battery insertion.

OPERATION

Compatibility

This remote control is compatible with the following Skyworth Smart TV models:

- 43E2B, 43E2
- 32E2, 32E390
- 24E66A, 24E58A
- 32E66A, 42E66A
- 50E58, 32E57, 32E36
- 42E38, 39E36, 40E360
- Coocaa LED TV 32W4 Series

Basic Functions

Once batteries are installed, point the remote control directly at your Skyworth Smart TV. The remote provides standard functions such as:

- **Power:** Turns the TV on or off.
- **Number Keys (0-9):** Direct channel selection.
- **Volume Up/Down (+/-):** Adjusts the audio volume.
- **Channel Up/Down (PR+/-):** Changes TV channels.
- **Navigation (Arrow Keys, OK):** Navigates menus and confirms selections.
- **Menu:** Accesses the TV's main menu.
- **Source:** Selects input sources (HDMI, AV, etc.).
- **Return/Exit:** Goes back to the previous screen or exits a menu.

TROUBLESHOOTING

- **Remote not responding:**
Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA alkaline batteries. Check for any obstructions between the remote control and the TV's infrared sensor.
- **Intermittent response:**
This may indicate low battery power. Replace batteries. Ensure you are within the effective range of the TV's IR sensor.
- **Specific buttons not working:**
Verify that the remote control is compatible with your specific Skyworth TV model. While this remote is broadly compatible, some very specific functions might vary by TV model. Ensure the remote is clean and free from debris that might obstruct button presses.

SPECIFICATIONS

Feature	Detail
Model Number	SKYWORTH-4-4
Compatible Devices	Skyworth Smart TVs (various models), Coocaa LED TV 32W4 Series
Batteries Required	2 x AAA (not included)
Special Feature	No Programming Required
Color	Black
Product Dimensions	6 x 1.2 x 0.5 inches
Item Weight	2 ounces

WARRANTY AND SUPPORT

This product comes with a 30-day refund policy and a 60-day warranty from the date of purchase. For support or warranty claims, please contact your retailer or the manufacturer directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09B1X31WH>

More documents and user manuals: <https://manuals.plus/>