

Lewondr Christmas Tree Topper Projector

Lewondr Christmas Tree Topper Projector Instruction Manual

Model: Christmas Tree Topper Projector

1. INTRODUCTION

Thank you for choosing the Lewondr Christmas Tree Topper Projector. This 3D hollow glittering star is designed to enhance your holiday decorations with a rotating LED projector, casting a dynamic light effect onto your ceiling. Please read this manual carefully before use to ensure proper installation and operation.



Image 1.1: The Lewondr Christmas Tree Topper Projector in operation, casting vibrant light patterns.

2. SAFETY INFORMATION

- Ensure the product is unplugged before installation or maintenance.
- This product is intended for indoor use only. Do not expose to water or extreme temperatures.
- Keep out of reach of children and pets.
- Do not attempt to disassemble or modify the product. This may void the warranty and pose a safety risk.
- Use only the provided power adapter.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Lewondr Christmas Tree Topper Projector (Gold)
- 1 x Power Adapter

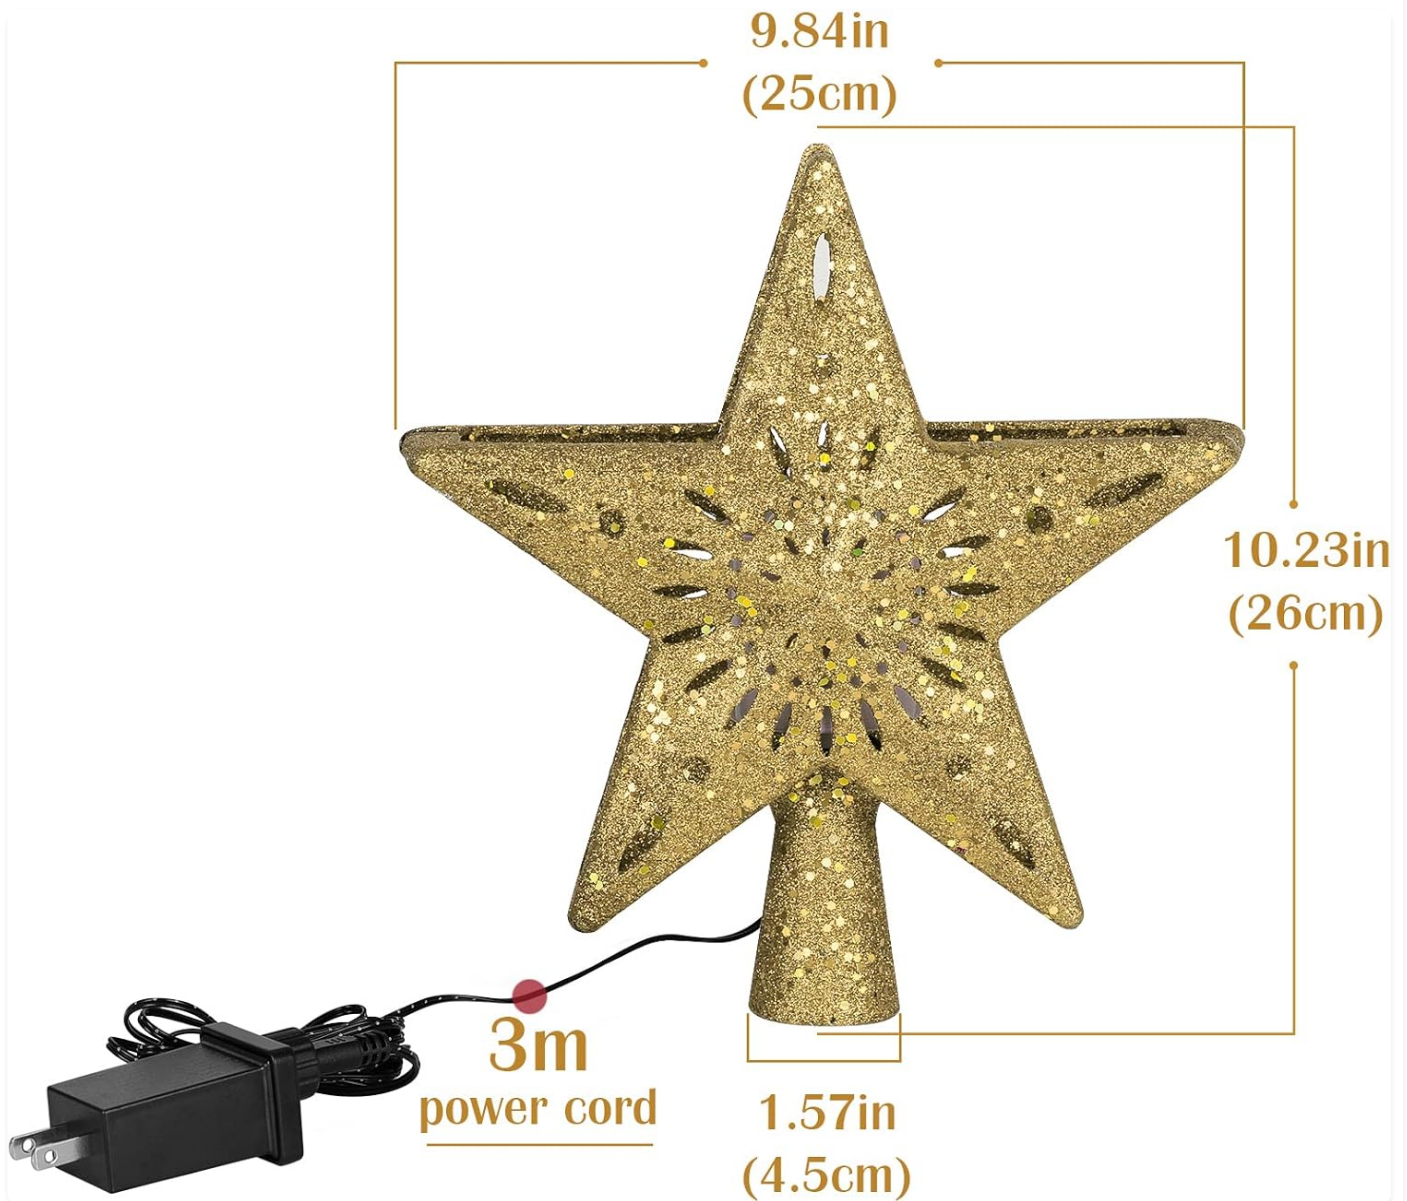


Image 3.1: Product dimensions and included power adapter.

4. SETUP INSTRUCTIONS

Follow these steps to install your Christmas Tree Topper Projector:

1. **Prepare the Tree:** Ensure your Christmas tree is stable and securely placed.
2. **Connect the Cable:** Locate the cable on the tree topper and connect it to the power adapter.
3. **Install on Tree:** Carefully place the tree topper onto the top branch of your Christmas tree. The base is designed to fit securely.
4. **Plug In:** Plug the power adapter into a standard electrical outlet. The projector will illuminate and begin rotating.



Image 4.1: Step-by-step installation guide for the tree topper.

5. OPERATING INSTRUCTIONS

The Lewondr Christmas Tree Topper Projector features a rotating LED light that projects a 3D star effect onto your ceiling. The projection range varies with distance from the ceiling:

- At a distance of 3 feet from the ceiling, the projection range is approximately 2 x 3 feet.
- At a distance of 4 feet from the ceiling, the projection range is approximately 3 x 4 feet.

The farther the topper is from the ceiling, the larger the projected pattern will appear.



Image 5.1: Examples of projection range based on distance from the ceiling.

6. MAINTENANCE

- **Cleaning:** Gently wipe the surface of the tree topper with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the tree topper in its original packaging or a protective container in a cool, dry place away from direct sunlight.
- **Inspection:** Periodically inspect the power cord and connections for any signs of damage. If damage is found, discontinue use and contact customer support.

7. TROUBLESHOOTING

- **No Light/Projection:**
 - Ensure the power adapter is securely plugged into both the tree topper and the electrical outlet.

- Check if the electrical outlet is functioning correctly by plugging in another device.

• **Projection is Dim/Unclear:**

- Ensure the room is sufficiently dark for optimal projection visibility.
- Verify that the projector lens is clean and free of dust or obstructions.

• **Rotation Not Working:**

- Check for any physical obstructions preventing the internal mechanism from rotating.
- If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Lewondr
Model	Christmas Tree Topper Projector
Material	Polyvinyl Chloride (PVC)
Color	Gold
Star Length	9.84 in / 25 cm
Total Height	10.23 in / 26 cm
Base Diameter	1.57 in / 4.5 cm
Item Weight	8.11 Ounces
Batteries Required	No
Projection Effect	3D Star Effect (Rotating)
Projection Range (3ft distance)	2 x 3 ft
Projection Range (4ft distance)	3 x 4 ft

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For warranty claims, technical support, or any questions regarding your Lewondr Christmas Tree Topper Projector, please contact our customer service team through the retailer's platform or visit the official Lewondr website.

Please retain your proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question