

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [LAMA](#) /
- › [LAMA Bluetooth Sport Headphones User Manual](#)

LAMA LX02 (A13-Nero)

LAMA Bluetooth Sport Headphones User Manual

Model: LX02 (A13-Nero)

Brand: LAMA

1. INTRODUCTION

Thank you for choosing LAMA Bluetooth Sport Headphones. This manual provides essential information for setting up, operating, and maintaining your new headphones. Please read it carefully before use to ensure optimal performance and longevity of the product.



Image 1.1: LAMA Bluetooth Sport Headphones (Model LX02, A13-Nero).

2. PACKAGE CONTENTS

Please check the package for the following items:

- LAMA Bluetooth Sport Headphones
- USB Charging Cable (Type-C)
- Multiple pairs of interchangeable ear tips (S/M/L)
- User Manual

3. PRODUCT OVERVIEW

The LAMA Bluetooth Sport Headphones feature an ergonomic neckband design with in-ear earbuds, integrated controls, and a Type-C charging port.

Easy to Control

① Switch Button

Long Press 2s: Power On

Long Press 3s: Power Off

② C Key:

Single Click:

Game/Music Mode Switch

Double Click:

Switch Sound Effect

Long Press 1s:

Wake Up Siri

③ Function Keys:

Single Click:

Play/Pause Music

Answer/Hang Up Call

Double Click:

Tail Number Redial

Long Press 1s:

Reject Call

④ Volume Keys:

Click "+": Volume +

Long Press "+": Previous Song

Click "-": Volume -

Long Press "-": Next Song



Image 3.1: Control Panel Layout and Functions.

1. **Switch Button:** Power On/Off.
2. **'C' Key:** Game/Music Mode Switch, Sound Effect Switch, Voice Assistant activation.
3. **Function Keys:** Play/Pause, Answer/Hang Up Call, Redial, Reject Call.
4. **Volume Keys:** Volume Up/Down, Previous/Next Song.



Image 3.2: Magnetic Earbud Design for secure storage.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the headphones. Connect the provided USB Type-C charging cable to the charging port on the control panel and a suitable USB power source. The battery indicator lights will show the charging status.

Battery Capacity Display

One	25%
Two	50%
Three	75%
Four	100%



Type-C Quick
Charge Interface

Image 4.1: Battery Capacity Display and Type-C Charging Port.

- Charging Time: Approximately 2 hours for a full charge.
- Battery Life: Up to 100 hours of continuous play time on a full charge.

4.2 Powering On/Off

- **Power On:** Long press the Switch Button (1) for 2 seconds.
- **Power Off:** Long press the Switch Button (1) for 3 seconds.

4.3 Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Long press the Switch Button (1) for 2 seconds to power on. The LED indicator will flash, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "LAMA LX02" (or similar name) from the list of found devices.
5. Once connected, the LED indicator will stop flashing and remain solid blue.

5. OPERATING INSTRUCTIONS

5.1 Music Playback

- **Play/Pause:** Single click the Function Key (3).
- **Volume Up:** Click the "+" Volume Key (4).
- **Volume Down:** Click the "-" Volume Key (4).
- **Next Song:** Long press the "-" Volume Key (4).
- **Previous Song:** Long press the "+" Volume Key (4).

5.2 Call Management

- **Answer/End Call:** Single click the Function Key (3).
- **Reject Call:** Long press the Function Key (3) for 1 second.
- **Redial Last Number:** Double click the Function Key (3).

5.3 Sound Effect and Mode Switching

3 Sound Effect Switches

Bass / Voice / 3D Balance

3 sound effect switching gives you a cinematic level beyond iMAX Vocal music experience!

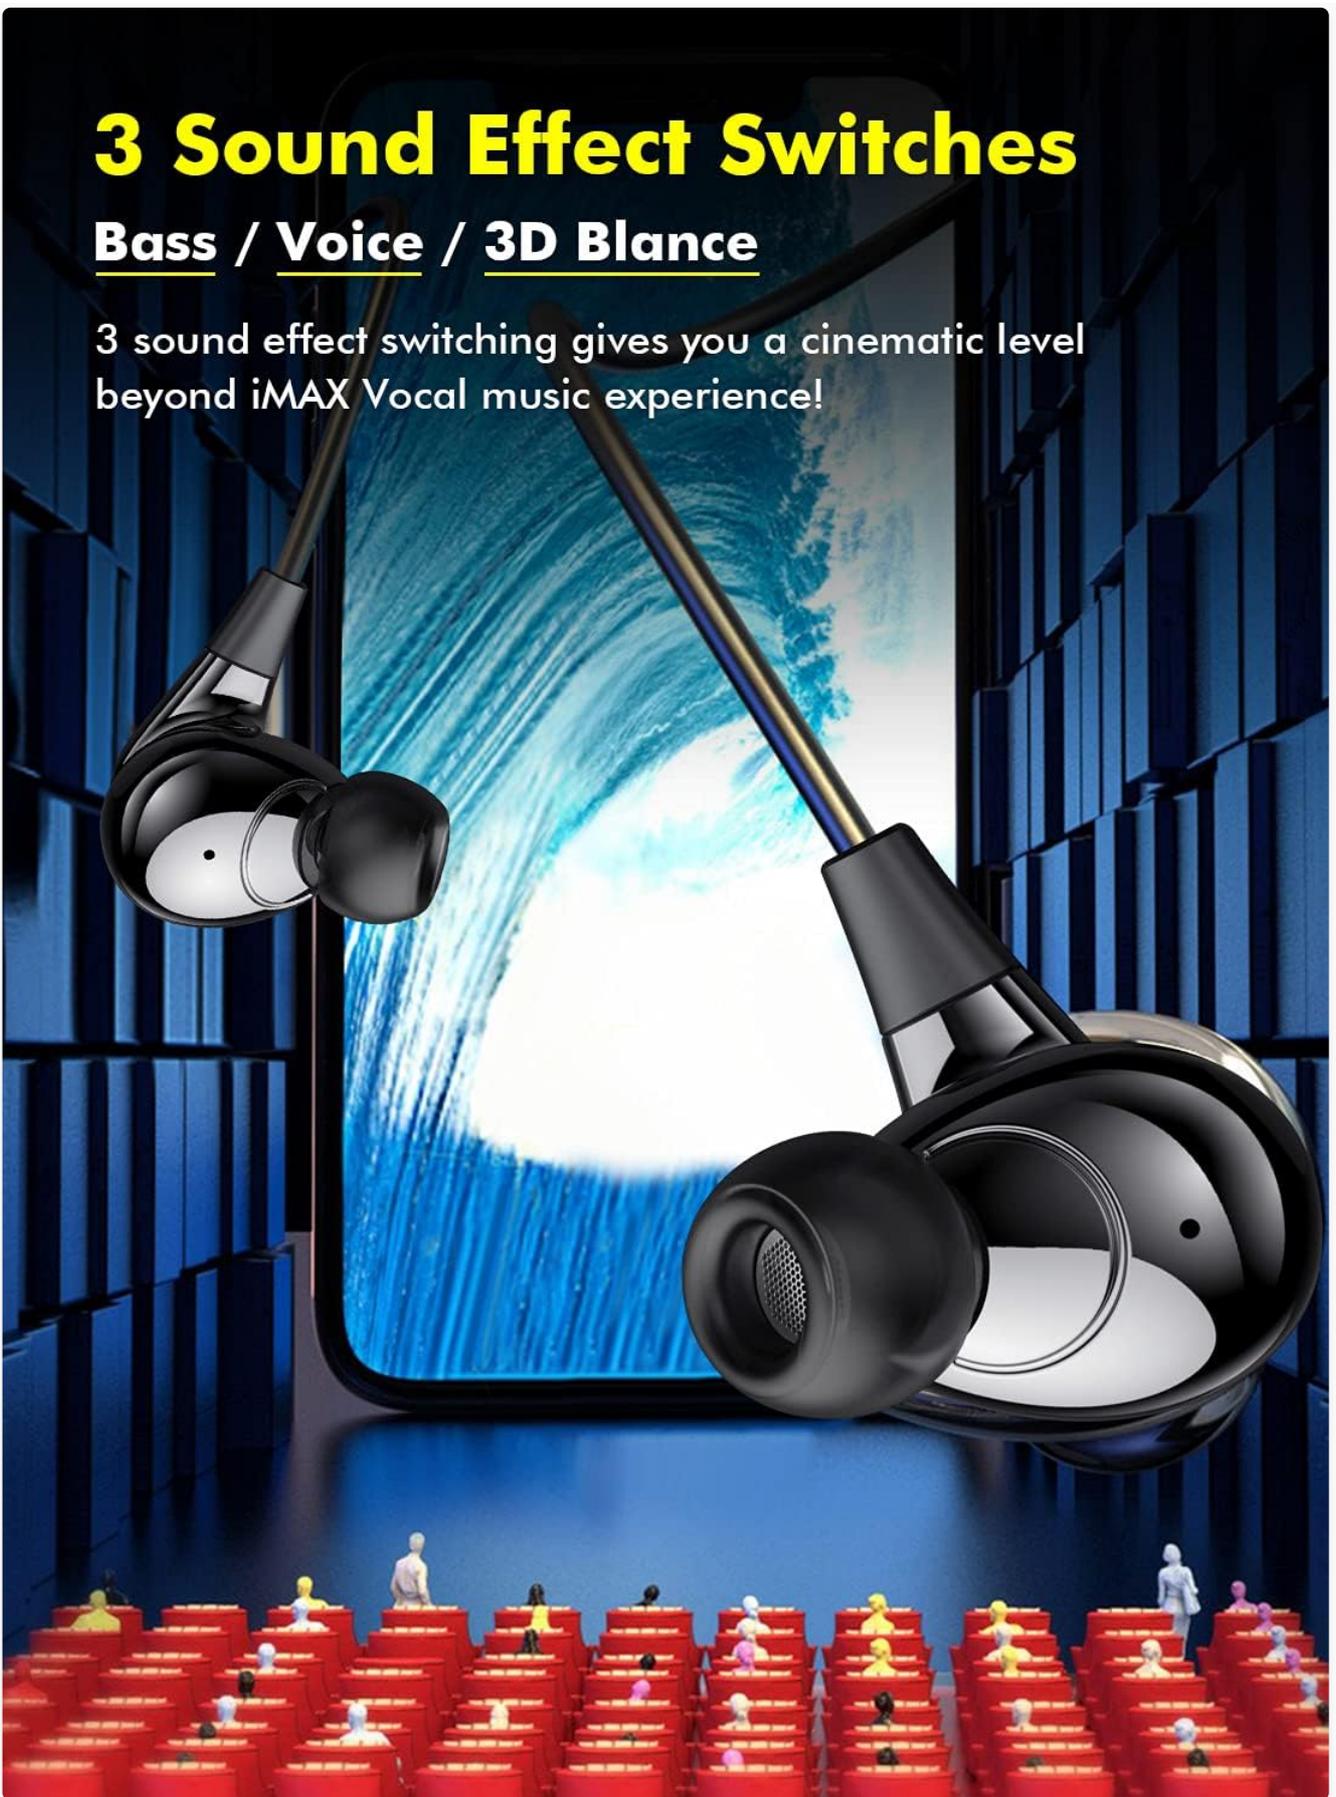


Image 5.1: Three Sound Effect Switches (Bass, Voice, 3D Balance).

- **Switch Sound Effect (Bass/Voice/3D Balance):** Double click the 'C' Key (2).
- **Switch Game/Music Mode:** Single click the 'C' Key (2).

Game / Music Modes Switched - Low Latency

$\leq 60\text{ms}$

Low Latency Mode

200ms

Regular Mode



Image 5.2: Game/Music Mode with Low Latency Feature.

5.4 Voice Assistant

- **Activate Voice Assistant (Siri, Google Assistant, etc.):** Long press the 'C' Key (2) for 1 second.

6. MAINTENANCE

6.1 Cleaning

- Wipe the headphones with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- Regularly clean ear tips to prevent wax buildup, which can affect sound quality.

6.2 Storage

- Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- The magnetic earbuds help prevent tangling and secure the headphones when not in use.

6.3 Water Resistance (IPX5)

The headphones are rated IPX5 water-resistant, meaning they can withstand splashes and sweat. They are suitable for sports and outdoor activities.

IPX5 Waterproof

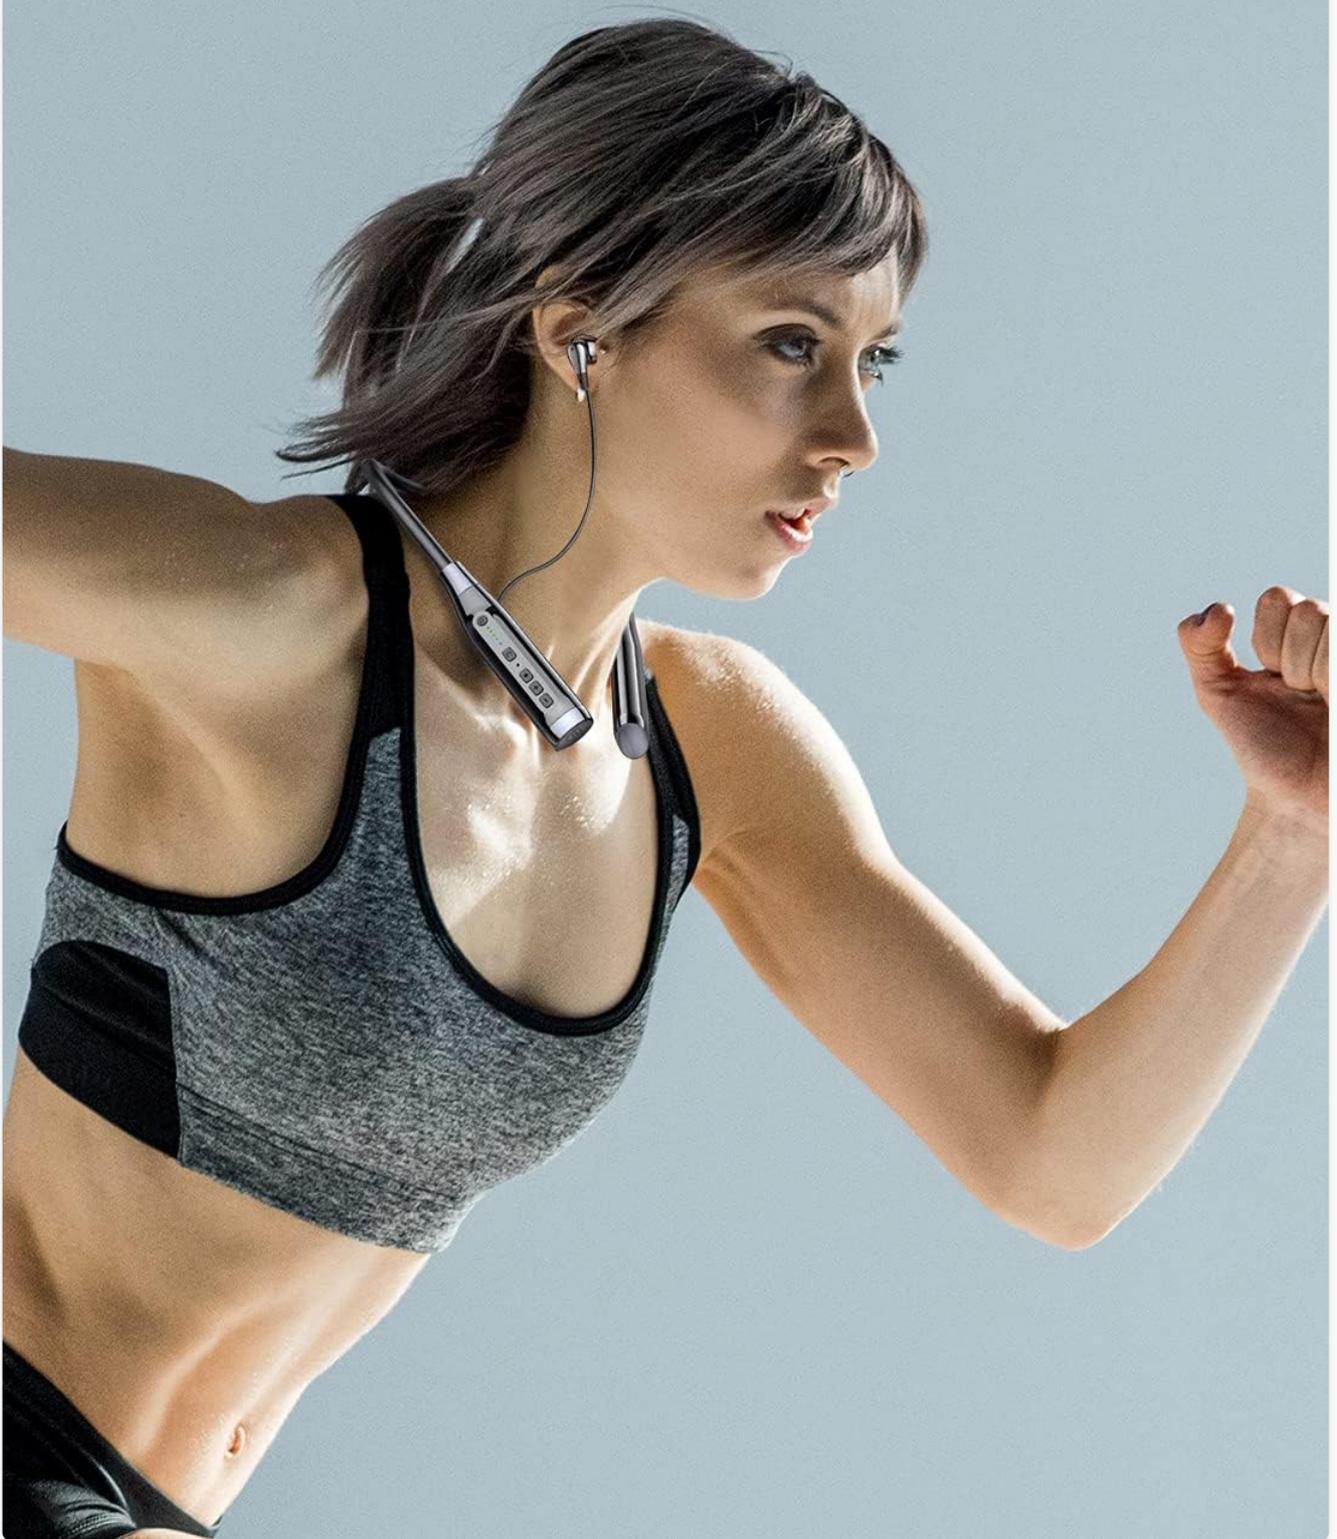


Image 6.1: IPX5 Water Resistance for active use.

Important: IPX5 rating does not mean the headphones are waterproof for submersion. Do not immerse them in water.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Bluetooth is off on device; headphones not in pairing mode; too far from device.	Ensure Bluetooth is enabled on your device. Put headphones in pairing mode. Move closer to the device (within 10 meters).
No sound or low volume.	Volume too low; headphones not connected; ear tips blocked.	Adjust volume on headphones and device. Reconnect headphones. Clean ear tips.
Sound quality is poor.	Poor connection; incorrect sound effect mode.	Ensure stable Bluetooth connection. Try switching sound effect modes (Bass, Voice, 3D Balance).
Microphone not working.	Microphone blocked; device settings.	Ensure microphone is not covered. Check device's audio input settings.

8. SPECIFICATIONS

- **Model:** LX02
- **Brand:** LAMA
- **Connectivity:** Bluetooth 5.0
- **Battery Capacity:** 1000 mAh
- **Charging Time:** Approximately 2 hours
- **Continuous Play Time:** Up to 100 hours
- **Charging Port:** USB Type-C (supports QC 3.0, QC2.0, QC1.0 fast charging protocols)
- **Water Resistance:** IPX5
- **Control Method:** Voice, Button
- **Microphone:** Integrated, Stereo technology
- **Material:** Plastic
- **Weight:** 200 g
- **Additional Features:** Noise Cancellation, Lightweight, Magnetic Design, Multiple Sound Effects (Bass, Voice, 3D Balance), Game/Music Low Latency Mode.

9. SAFETY INFORMATION

- Do not disassemble or modify the product.
- Keep away from extreme temperatures, humidity, and corrosive substances.
- Avoid prolonged listening at high volumes to prevent hearing damage.
- Do not use headphones while driving or in situations where you need to be aware of your surroundings.
- Dispose of batteries and electronic components responsibly according to local regulations.

10. WARRANTY AND SUPPORT

LAMA products come with a standard manufacturer's warranty. For detailed warranty information, product support, or service inquiries, please refer to the warranty card included in your package or visit the official LAMA website. For customer service, please contact your retailer or the LAMA support team.

