

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Gocheer](#) /

> [Gocheer 6-Inch 24V Cordless Mini Chainsaw Instruction Manual](#)

Gocheer DA11

Gocheer 6-Inch 24V Cordless Mini Chainsaw Instruction Manual

Model: DA11

[Safety Information](#)

[Product Components](#)

[Setup & Assembly](#)

[Operation](#)

[Maintenance](#)

[Warranty &](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

1. SAFETY INFORMATION

Always prioritize safety when operating the Gocheer Mini Chainsaw. Failure to follow safety instructions can result in serious injury.

General Safety Rules:

- **Read the Manual:** Understand all instructions and warnings before use.
- **Wear Protective Gear:** Always wear safety glasses, gloves, and appropriate clothing.
- **Keep Work Area Clear:** Ensure no bystanders, especially children, are near the operating area.
- **Inspect Before Use:** Check the chain, guide bar, and battery for any damage or loose parts.
- **Secure Workpiece:** Always secure the branch or wood you are cutting to prevent movement.
- **Maintain Firm Grip:** Hold the chainsaw firmly with one hand on the handle and the other supporting the body.
- **Avoid Kickback:** Be aware of the chainsaw's tip and avoid cutting with it to prevent sudden upward motion.
- **Use Safety Lock:** Engage the safety lock when the chainsaw is not in immediate use or during transport.
- **Battery Safety:** Use only specified batteries and chargers. Do not expose batteries to extreme temperatures or water.


WHY CHOOSE Gocheer MINI CHAINSAW



Traditional saws are time-consuming and laborious



Gasoline saws need to add gasoline, not environmentally friendly and bulky

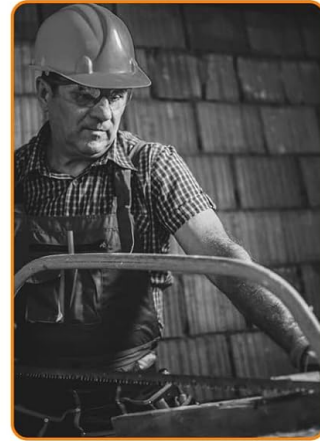

Bow saws are prone to injury and inefficient



- ✓ **Powerful brushless motor: 13.2ft/s High chain speed**
- ✓ **Flexible and lightweight: 1.65 lbs(0.7kg)**
- ✓ **High efficiency and Large capacity: 24V/2500mAh/45-60 min**

Image: Always wear protective gloves and maintain a firm grip during operation.

2. PRODUCT COMPONENTS

The Gocheer Mini Chainsaw package includes the following items:

- Gocheer 6-Inch Mini Chainsaw Unit
- 24V Lithium-Ion Battery (2 units)
- Battery Charger
- Guide Bar (2 units)
- Saw Chain (2 units)
- Screwdriver
- Protective Gloves
- Storage Case

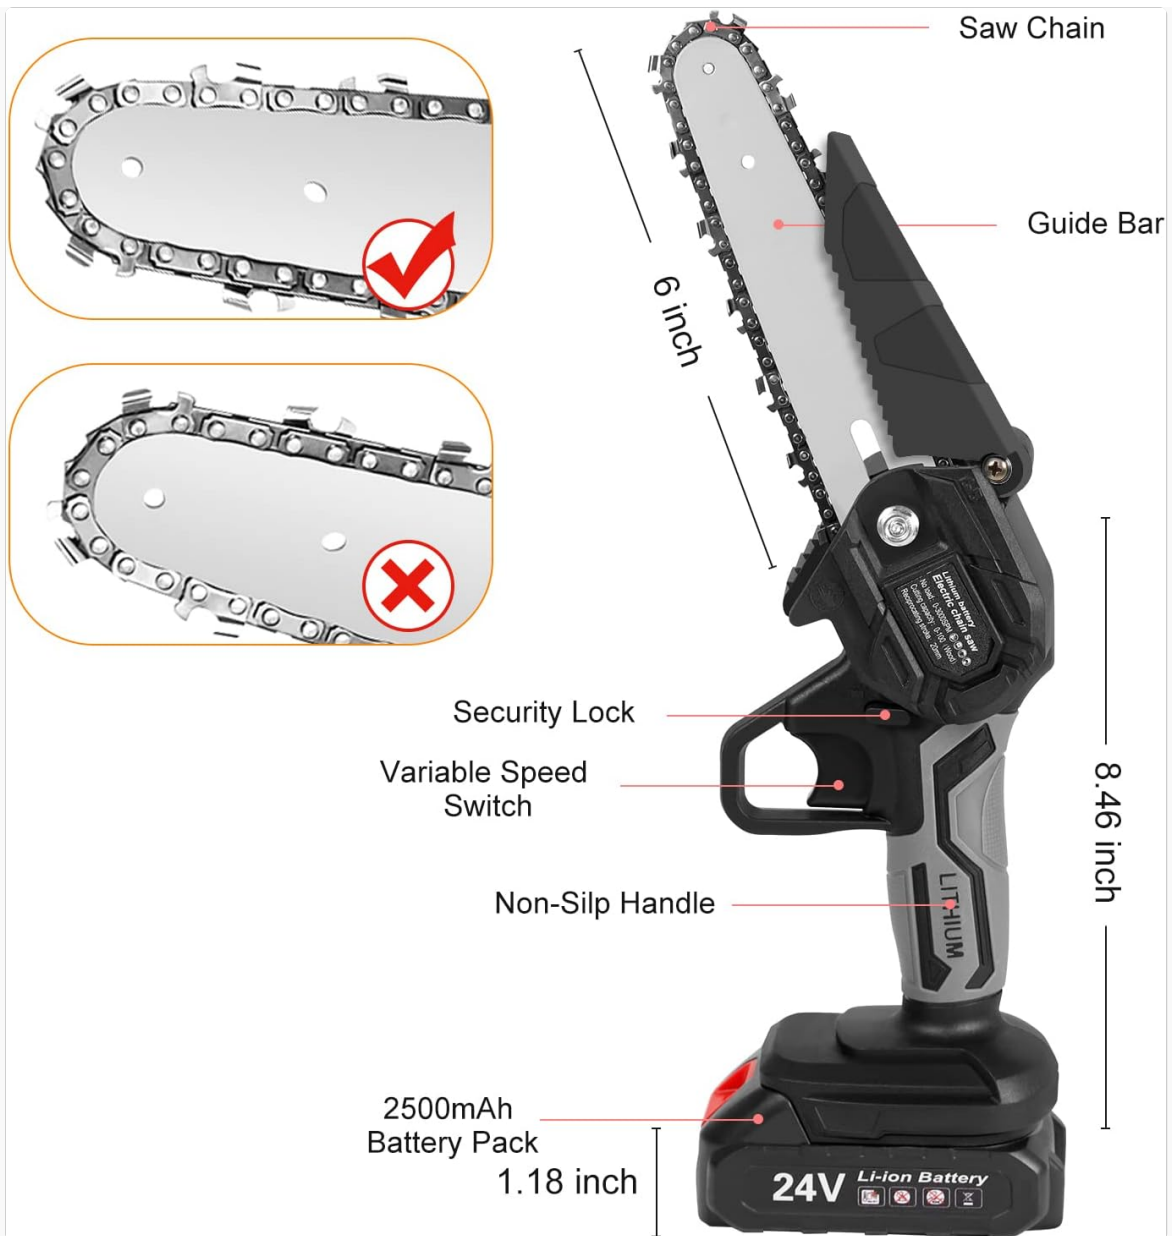


Image: Key components of the Gocheer Mini Chainsaw.

3. SETUP & ASSEMBLY

Follow these steps to assemble your Gocheer Mini Chainsaw before first use.

3.1. Battery Charging

- Insert the 24V Lithium-Ion battery into the charger.
- Plug the charger into a standard power outlet.
- Allow the battery to charge fully before first use. The indicator light on the battery will show charging status.

Light Weight & Larger Capacity

1.65 lbs(0.7kg) Portable One-Hand Handheld
Intelligent voltage protection
Rapid Heat Dissipation
Overcharge And Discharge Protection



Over current protection



Over voltage protection



Over temperature protection



Charging and discharging protection

Image: The 24V Lithium-Ion battery provides power for extended operation.

3.2. Chain and Guide Bar Installation

1. **Remove Sprocket Cover:** Use the provided screwdriver to remove the sprocket cover.
2. **Install Guide Plate and Chain:** Place the saw chain around the guide plate. Ensure the chain direction is correct (refer to the arrows on the chain and guide bar).
3. **Align and Install:** Align the small holes on the guide plate with the pins on the chainsaw body, then install the chain onto the gear.
4. **Reinstall Sprocket Cover:** Place the sprocket cover back and tighten the screws.
5. **Adjust Chain Tightness:** Adjust the chain tightness using the adjustment knob. The chain should be snug but still able to move freely. A recommended gap of approximately 3mm between the chain and the guide bar is ideal.
6. **Install Battery:** Once assembly is complete and the chain tension is correct, install the charged battery pack. Ensure the safety lock is engaged before installing the battery.

Your browser does not support the video tag.

Video: Detailed tutorial on how to install the chain and guide bar, and adjust chain tension for the Gocheer Mini Chainsaw.

4. OPERATION

Operating your Gocheer Mini Chainsaw effectively and safely.

4.1. Starting the Chainsaw

- Ensure the battery is fully charged and correctly installed.
- Disengage the safety lock by sliding it forward or backward, depending on the model.
- Press the variable speed switch (trigger) to start the chainsaw. The chain will begin to move.



24V Brushless Powerful Motor
Cutting More Efficiently And Faster.

Image: Proper hand placement and trigger operation for starting the chainsaw.

4.2. Cutting Techniques

- **Pruning Branches:** For smaller branches, position the chainsaw firmly against the branch and apply steady pressure.
- **Wood Cutting:** For larger pieces of wood (up to 6 inches in diameter), make a shallow cut first, then reposition the wood if necessary to complete the cut. Avoid forcing the saw.
- **Battery Life:** A fully charged 24V 2500mAh battery can provide approximately 40-60 minutes of continuous operation, depending on the material and cutting intensity.



Image: The chainsaw in action, demonstrating its capability for log cutting.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your chainsaw.

5.1. Cleaning

- Always remove the battery before cleaning.
- Use a brush or compressed air to remove sawdust and debris from the chain, guide bar, and motor vents.
- Wipe down the body of the chainsaw with a damp cloth. Do not use harsh chemicals.

5.2. Chain Care

- **Sharpening:** A sharp chain is crucial for efficient cutting. Sharpen the chain regularly or replace it when dull.
- **Lubrication:** This model does not feature an automatic oiler. Manually apply chain lubricant to the chain and guide bar before and during extended use to reduce friction and wear.
- **Replacement:** Replace the chain and guide bar if they become damaged or excessively worn. A spare chain is included with your purchase.



Image: Comparison of a sharp chain (left) and a dull chain (right). Ensure your chain is always sharp for best performance.

6. TROUBLESHOOTING

Common issues and their solutions.

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not charged or improperly installed; Safety lock engaged; Faulty switch.	Ensure battery is charged and clicked into place. Disengage safety lock. Contact support if switch is faulty.
Chain not cutting efficiently	Dull chain; Incorrect chain tension; Improper chain direction.	Sharpen or replace chain. Adjust chain tension. Reinstall chain in correct direction.
Chainsaw stops during operation	Battery low; Overload protection activated.	Recharge battery. Reduce cutting pressure or size of material.
Excessive vibration or noise	Loose chain; Damaged chain or guide bar; Loose components.	Adjust chain tension. Inspect and replace damaged parts. Tighten all screws.

7. SPECIFICATIONS

Feature	Detail
Brand	Gocheer
Model Number	DA11
Power Source	Battery Powered (24V Lithium-Ion)
Horsepower	550 Watts
Item Weight	1.54 Pounds (with battery)
Product Dimensions	3.7"L x 3.7"W x 15.39"H

Feature	Detail
Chain Length	6 Inches
Battery Capacity	2500mAh (per battery)
Motor Type	Brushless Motor

8. WARRANTY & SUPPORT

Gocheer offers a 3-year service life for this product, indicating a commitment to quality and durability. For any product inquiries, technical assistance, or warranty claims, please contact Gocheer customer support through their official channels or the retailer where the product was purchased.

Keep your purchase receipt and product model number (DA11) handy when contacting support.