

## AKOOTE RM-ADP029

# AKOOTE Replacement Remote Control Instruction Manual

Model: RM-ADP029 Series

## 1. INTRODUCTION

This manual provides instructions for the AKOOTE replacement remote control, designed for use with various Sony DVD Home Theater Systems. This remote is a direct replacement for original models such as RM-ADP029, RM-ADP034, and RM-ADP002, offering compatibility with a range of Sony DVD Theater System units.

The remote is pre-programmed and generally requires no setup other than battery installation to operate your compatible device.



Figure 1: Angled front view of the AKOOTE Replacement Remote Control.

## 2. PACKAGE CONTENTS

- 1 x AKOOTE Replacement Remote Control

**Note:** Batteries and a separate instruction manual are not included with this product. Please refer to this digital manual for operational guidance.

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Back view of the remote control, illustrating the battery compartment.

### 3.2 Initial Use

This replacement remote control is designed to work immediately with compatible Sony DVD Theater Systems upon battery installation. No programming or pairing is typically required. Point the remote directly at your DVD Theater System and begin operation.

## 4. OPERATING INSTRUCTIONS

The remote control features a comprehensive set of buttons for controlling your Sony DVD Theater System. Below is a general overview of common button functions.



Figure 3: Front view of the remote control, detailing button layout and labels.

- **Power (I/O):** Turns the system on or off.

- **TV Power (TV I/O):** Controls the power of a connected TV (if compatible with BRAVIA Sync).
- **Function (TV INPUT FUNCTION):** Switches input sources on the TV.
- **Number Buttons (0-9):** For direct track selection or inputting numbers.
- **Disc Skip:** Skips to the next or previous disc.
- **Picture Nav:** Navigates picture settings.
- **Audio:** Selects audio tracks or modes.
- **Subtitle:** Toggles subtitles on/off or selects subtitle languages.
- **Angle:** Changes camera angles during DVD playback.
- **D-Tuning:** Digital tuning for radio functions.
- **S-AIR Mode:** Activates S-AIR wireless functionality.
- **Sleep:** Sets a sleep timer.
- **Sound Mode:** Selects various sound modes (e.g., Cinema, Music).
- **Dynamic Menu:** Accesses dynamic menu options.
- **Bass:** Adjusts bass levels.
- **Enter:** Confirms selections.
- **DVD Top Menu / Menu:** Accesses the DVD's top menu or general menu.
- **Muting:** Mutes or unmutes audio.
- **Volume (+/-):** Adjusts the system volume.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **Return / Exit:** Returns to the previous screen or exits a menu.
- **Display:** Shows on-screen information.
- **Tools:** Accesses additional tools or settings.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Standard media playback functions.
- **Tuning (+/-):** Adjusts radio tuning.
- **Preset (+/-):** Selects radio presets.
- **Repeat:** Repeats playback.
- **Advance Preset (+/-):** Advances through radio presets.

## 5. COMPATIBILITY

---

This AKOOTE replacement remote control is compatible with a wide range of Sony DVD Home Theater Systems that originally used the following remote models:

- RM-ADP029
- RM-ADP034
- RM-ADP002

It is also compatible with the following Sony DVD Theater System models:

- DAV-F200
- DAV-I550
- HCD-F200
- DAVFX10
- DAVFX100W
- DAVFX80

- HCDFX100W
- HCD-IS10
- HCD-X10

This remote is designed for DVD/Blu-ray Player functionality within these systems.

## 6. MAINTENANCE

### 6.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

### 6.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction. Dispose of used batteries according to local regulations.

## 7. TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new ones.
- Check for any obstructions between the remote and the DVD Theater System's infrared sensor.
- Ensure you are within the effective range and pointing the remote directly at the system.

- **Some functions not working:**

- While this is a general replacement remote, it is designed to fit most functions. Verify that the specific function you are trying to use is supported by your particular Sony DVD Theater System model.
- Ensure the system is in the correct mode (e.g., DVD mode for DVD playback functions).

## 8. SPECIFICATIONS

<b>Brand</b>	AKOOTE
<b>Model Series</b>	RM-ADP029 Replacement
<b>Connectivity Technology</b>	Infrared
<b>Compatible Devices</b>	Sony DVD Theater Systems (DVD/Blu-ray Player functionality)
<b>Max Number of Supported Devices</b>	1
<b>Special Feature</b>	Ergonomic design
<b>Item Weight</b>	2.96 ounces (approx. 84 grams)
<b>Package Dimensions</b>	9.65 x 2.36 x 1.06 inches (approx. 24.5 x 6 x 2.7 cm)

## 9. WARRANTY AND SUPPORT

---

As a general replacement remote, specific warranty details may vary depending on the retailer or seller. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage and customer support.

For technical assistance or inquiries about compatibility, it is recommended to contact the AKOOTE customer support channel provided at the point of purchase.