

[Manuals.plus](#) /

› [Yueyinpu](#) /

› Yueyinpu K24-01 Classic Wireless Foot Pedal Page Turner User Manual

Yueyinpu K24-01 Pedal

Yueyinpu K24-01 Classic Wireless Foot Pedal Page Turner User Manual

Model: K24-01 Pedal

1. INTRODUCTION

The Yueyinpu K24-01 Classic Wireless Foot Pedal Page Turner is designed to provide hands-free control for turning pages on tablets, smartphones, and PCs. This device enhances your reading and music performance experience by allowing you to navigate digital content without using your hands.



Image 1.1: Overview of the Yueyinpu K24-01 Classic Wireless Foot Pedal Page Turner.

Key Features:

- **Hands-Free Operation:** Control page turns for sheet music, e-books, and images using foot pedals.
- **Wide Compatibility:** Supports iOS (version 11 and above), Android, and Windows devices. Compatible with various applications such as iBooks, Kindle, WPS, Foxit PDF, Adobe PDF, Piascore, and Forscore.
- **Wireless Range:** Stable and strong signal with a range of up to 33 feet (10 meters).
- **Rechargeable Battery:** Built-in rechargeable battery provides approximately 60 hours of use on a full charge.
- **Multiple Page Turning Modes:** Offers five distinct modes for versatile control.
- **Anti-Skid Design:** Equipped with rubber anti-skid pads for stability during use.

Wide Compatibility, Support various software



Image 1.2: The page turner supports a wide range of software applications for music and reading.

2. SETUP

2.1 Charging the Device

Before initial use, ensure the page turner is fully charged. The device features a built-in rechargeable lithium battery.

1. Locate the Type-C charging port on the side of the device.
2. Connect the provided USB Type-C cable to the charging port and the other end to a standard USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate during charging. Once fully charged, the indicator may change color or turn off, depending on the model. A full charge provides approximately 60 hours of usage.

60+ Hours of Battery Life & Rechargeable

Built-in large-capacity rechargeable lithium battery.



Image 2.1: Location of the Type-C charging port and reset switch.



Image 2.2: Detail of the Type-C charging port.

2.2 Bluetooth Connection

The page turner connects wirelessly via Bluetooth to your device.

1. Ensure your tablet, smartphone, or PC has Bluetooth enabled.

2. Turn on the page turner by sliding the 'Power' switch to the 'ON' position. The indicator light will flash, indicating it is in pairing mode.
3. On your device, go to Bluetooth settings and search for available devices.
4. Select "K24-01 Pedal" from the list of found devices to pair.
5. Once successfully paired, the indicator light on the page turner will typically stop flashing and remain solid, or turn off, depending on the device's status indication.

BLUETOOTH CONNECTION

Compatible with iOS, Windows and Android



Image 2.3: The page turner connects to iOS, Windows, and Android devices via Bluetooth.

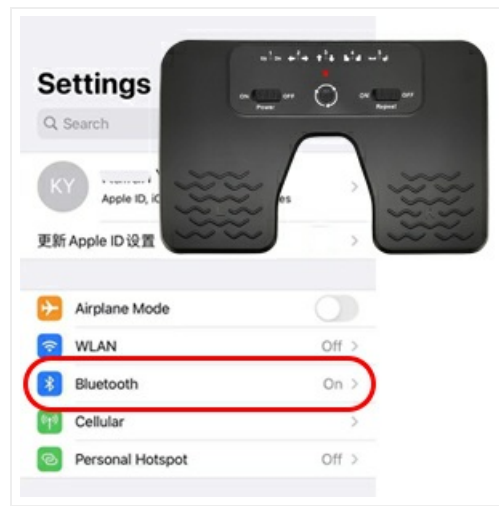 


Image 2.4: Ensure Bluetooth is enabled on your device.

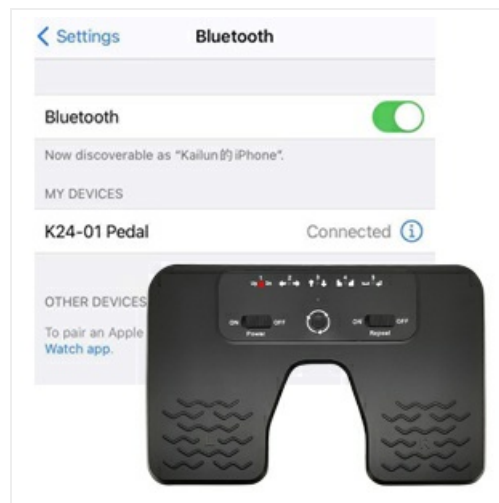 


Image 2.5: Confirm successful pairing in your device's Bluetooth settings.

3. OPERATING INSTRUCTIONS

The Yueyinpu K24-01 offers five distinct page-turning modes to suit various applications and preferences. Use the mode selection button (circular button in the center) to cycle through the modes.

5 Page Turning Modes

 
Mode	Pedal Left	Pedal Right
	Page Up	Page Down
	Left Arrow	Right Arrow
	Up Arrow	Down Arrow
	Left Mouse Click	Right Mouse Click
	Space	Enter



Image 3.1: The 5 Page Turning Modes and their functions.

Table 3.1: Page Turning Modes

Mode	Pedal Left Action	Pedal Right Action
1 (Up/Dn)	Page Up	Page Down
2 (Left/Right Arrow)	Left Arrow	Right Arrow
3 (Up/Down Arrow)	Up Arrow	Down Arrow
4 (Left/Right Mouse Click)	Left Mouse Click	Right Mouse Click
5 (Space/Enter)	Space	Enter

To change modes, press the central circular button. The corresponding indicator light (1-5) will illuminate to show the active mode.



Image 3.2: Control panel with power, repeat, and mode selection buttons.

The 'Repeat' switch allows you to enable or disable the repeat function for pedal presses. When 'Repeat' is ON, holding down a pedal may continuously send the command, which can be useful for fast scrolling or rapid page turns in some applications.



Image 3.3: Textured pedal surface for improved grip.

4. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use harsh chemicals, solvents, or abrasive cleaners.
- **Storage:** Store the page turner in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** This device is not water-resistant. Avoid exposure to liquids to prevent damage.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the device regularly, especially if it will not be used for an extended period.
- **Anti-Skid Pads:** Ensure the rubber anti-skid pads on the bottom are clean and free of debris to maintain stability.

Rubber Anti-Skid Pad



Image 4.1: The device features rubber anti-skid pads for stability.

5. TROUBLESHOOTING

Device does not power on:

- Ensure the 'Power' switch is in the 'ON' position.
- Charge the device using the Type-C cable. The battery might be depleted.

Cannot connect via Bluetooth:

- Make sure Bluetooth is enabled on your receiving device (tablet, smartphone, PC).
- Ensure the page turner is powered on and in pairing mode (indicator light flashing).

- Move the page turner closer to your device to ensure it's within the 33-foot (10-meter) range.
- Try turning off and on both the page turner and your receiving device's Bluetooth.
- If previously paired, try 'forgetting' or 'unpairing' the device from your Bluetooth settings and then re-pairing.
- For Apple devices, some users report a longer connection process. Ensure all steps are followed carefully.

Pedals do not turn pages:

- Verify that the page turner is successfully connected via Bluetooth to your device.
- Check the selected page-turning mode (1-5) and ensure it is appropriate for the application you are using. Some applications may respond better to specific modes (e.g., Page Up/Down, Left/Right Arrow).
- Ensure the application you are using supports external keyboard or page-turning commands.
- Try restarting the application or your device.
- If the device is unresponsive, locate the 'Reset Switch' (a small pinhole next to the charging port) and gently press it with a thin object (like a paperclip) to reset the device.

Battery life is shorter than expected:

- Ensure the device is fully charged before use.
- Operating in very cold environments can reduce battery performance.
- The 60-hour estimate is based on typical usage; heavy or continuous use may result in shorter battery life.

6. SPECIFICATIONS

Feature	Detail
Model Number	K24-01 Pedal
Brand	Yueyinpu
Connectivity Technology	Bluetooth
Compatible Devices	Smartphones, Tablets (iOS 11+, Android), PCs (Windows)
Power Source	Battery Powered (1 Lithium Polymer battery, included)
Battery Life	Approx. 60 hours (after full charge)
Charging Port	USB Type-C
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Black
Product Dimensions (L x W x H)	23 x 17 x 11 cm (9.06 x 6.69 x 4.33 inches)
Item Weight	280 g
Country of Origin	China



Image 6.1: Product dimensions.

7. WARRANTY INFORMATION

This product comes with a **1-Year Warranty** from the date of purchase. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

Please retain your proof of purchase for warranty claims.

8. SUPPORT

For technical support, warranty claims, or any questions regarding your Yueyinpu K24-01 Classic Wireless Foot Pedal Page Turner, please contact the manufacturer or your retailer.

Manufacturer Contact Information: Shenzhen Yuyin Electronic Co., Ltd

For the most up-to-date support information, please refer to the official Yueyinpu website or the platform where you purchased the product.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question