

[Manuals.plus](#) /

› [Ohniyou](#) /

› Ohniyou Cage 21 Inch Farmhouse Low Profile Ceiling Fan with Light Remote Control User Manual

Ohniyou MW4FW

Ohniyou Cage 21 Inch Farmhouse Low Profile Ceiling Fan with Light Remote Control

Model: MW4FW | Brand: Ohniyou

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Ohniyou Cage 21 Inch Farmhouse Low Profile Ceiling Fan. Designed for small to medium-sized rooms, this fan combines efficient air circulation with integrated lighting, controlled conveniently by a remote. Its quiet DC motor and reversible function ensure comfort across all seasons.



Figure 1: Ohniyou 21 Inch Farmhouse Low Profile Ceiling Fan with lights on. This image displays the fan's overall design, featuring a brown metal cage and visible light bulbs, suitable for various indoor settings.

SAFETY INFORMATION

For your safety, please read all instructions carefully before beginning installation. Ensure power is disconnected at the circuit breaker before any electrical work. Installation should be performed by a qualified electrician if you are not confident in your abilities.

A comprehensive Safety Information document is available for download: [Safety Information \(PDF\)](#).

PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation. The package should include:

- Ceiling Fan Unit (with integrated motor and blades)
- Metal Cage Lampshade
- Mounting Bracket
- Remote Control
- Remote Control Holder
- Hardware Pack (screws, wire nuts, etc.)
- Instruction Manual
- Downrod (if applicable for your model)

Note: E26 light bulbs are **NOT** included and must be purchased separately. A 10W LED light bulb is recommended for each socket, with a maximum load of 60 watts per socket.

PRODUCT DETAIL



Flush Mount Installation



Double Layer Metal Iron Lampshade



6 Powerful Speed Mute Motor



6*US Standard Lamp Base

Figure 2: Detailed view of key product components including the flush mount installation base, double-layer metal iron lampshade, 6 powerful speed mute motor, and 6 US standard lamp bases.

SETUP AND INSTALLATION

Follow these steps to install your ceiling fan. It is recommended to have a second person assist during certain stages of installation.

1. **Prepare the Installation Area:** Turn off power at the circuit breaker. Remove any existing light fixture from the ceiling junction box.
2. **Install the Mounting Bracket:** Secure the mounting bracket to the ceiling junction box using the provided screws. Ensure it is firmly attached and can support the fan's weight.
3. **Assemble the Fan Unit:** Attach the downrod (if applicable) to the fan motor assembly. Connect the necessary wires from the motor to the downrod wiring.
4. **Wire the Fan:** Carefully connect the fan's electrical wires to the household wiring according to the wiring diagram in the instruction manual. Typically, this involves connecting live, neutral, and ground wires. Ensure the remote control receiver unit is correctly wired and placed within the canopy. This step is crucial for proper remote functionality.
5. **Mount the Fan:** Lift the fan assembly and hang it onto the mounting bracket. Secure the fan to the bracket using the

designated screws.

6. **Attach the Canopy:** Slide the canopy up to the ceiling, covering the wiring and mounting bracket. Secure the canopy in place with the provided screws.
7. **Install the Light Bulbs:** Insert the E26 base light bulbs (not included) into the six sockets within the fan's cage.
8. **Attach the Metal Cage:** Secure the metal cage lampshade to the fan unit.
9. **Restore Power:** Turn the power back on at the circuit breaker.



Figure 3: This image illustrates the dimensions of the Ohniyou ceiling fan, showing its 21-inch diameter and 9-inch height, along with the 7.5-inch and 14-inch inner cage measurements. It also highlights compatibility with E26 bulbs up to 60W and the remote control.

OPERATING INSTRUCTIONS

Your Ohniyou ceiling fan is operated using the included remote control. Ensure 2x AAA batteries (not included) are installed in the remote.

- **Power On/Off:** Press the 'ON/OFF' button to turn the fan and light on or off.
- **Light Control:** Use the 'LIGHT ON/OFF' button to control the light independently.

- **Fan Speed:** Select from 6 different fan speeds using the numbered buttons (1-6). Speed 1-2 provides a low, smooth wind suitable for sleeping, 3-4 offers a medium, natural wind for working, and 5-6 delivers a high-speed airflow for cooling during summer.
- **Timing Function:** Set a timer for the fan to automatically turn off after 1, 2, or 4 hours using the '1H', '2H', '4H' buttons.
- **Reversible Motor:** The fan features a reversible DC motor. Use the 'R' (Reverse) button to change the direction of the fan blades. In summer, the downdraft mode circulates air downward to create a cooling effect. In winter, the updraft mode enhances upward air circulation to distribute warm air evenly.
- **Natural Wind Mode:** Press the 'F' (Forward) button to activate the natural wind mode, which simulates a gentle, varying breeze.



Figure 4: This image highlights the remote control and its functions, including fan speed settings (1-6), timing options (1/2/4 hours), natural wind mode, reversible motor, and quiet airflow.

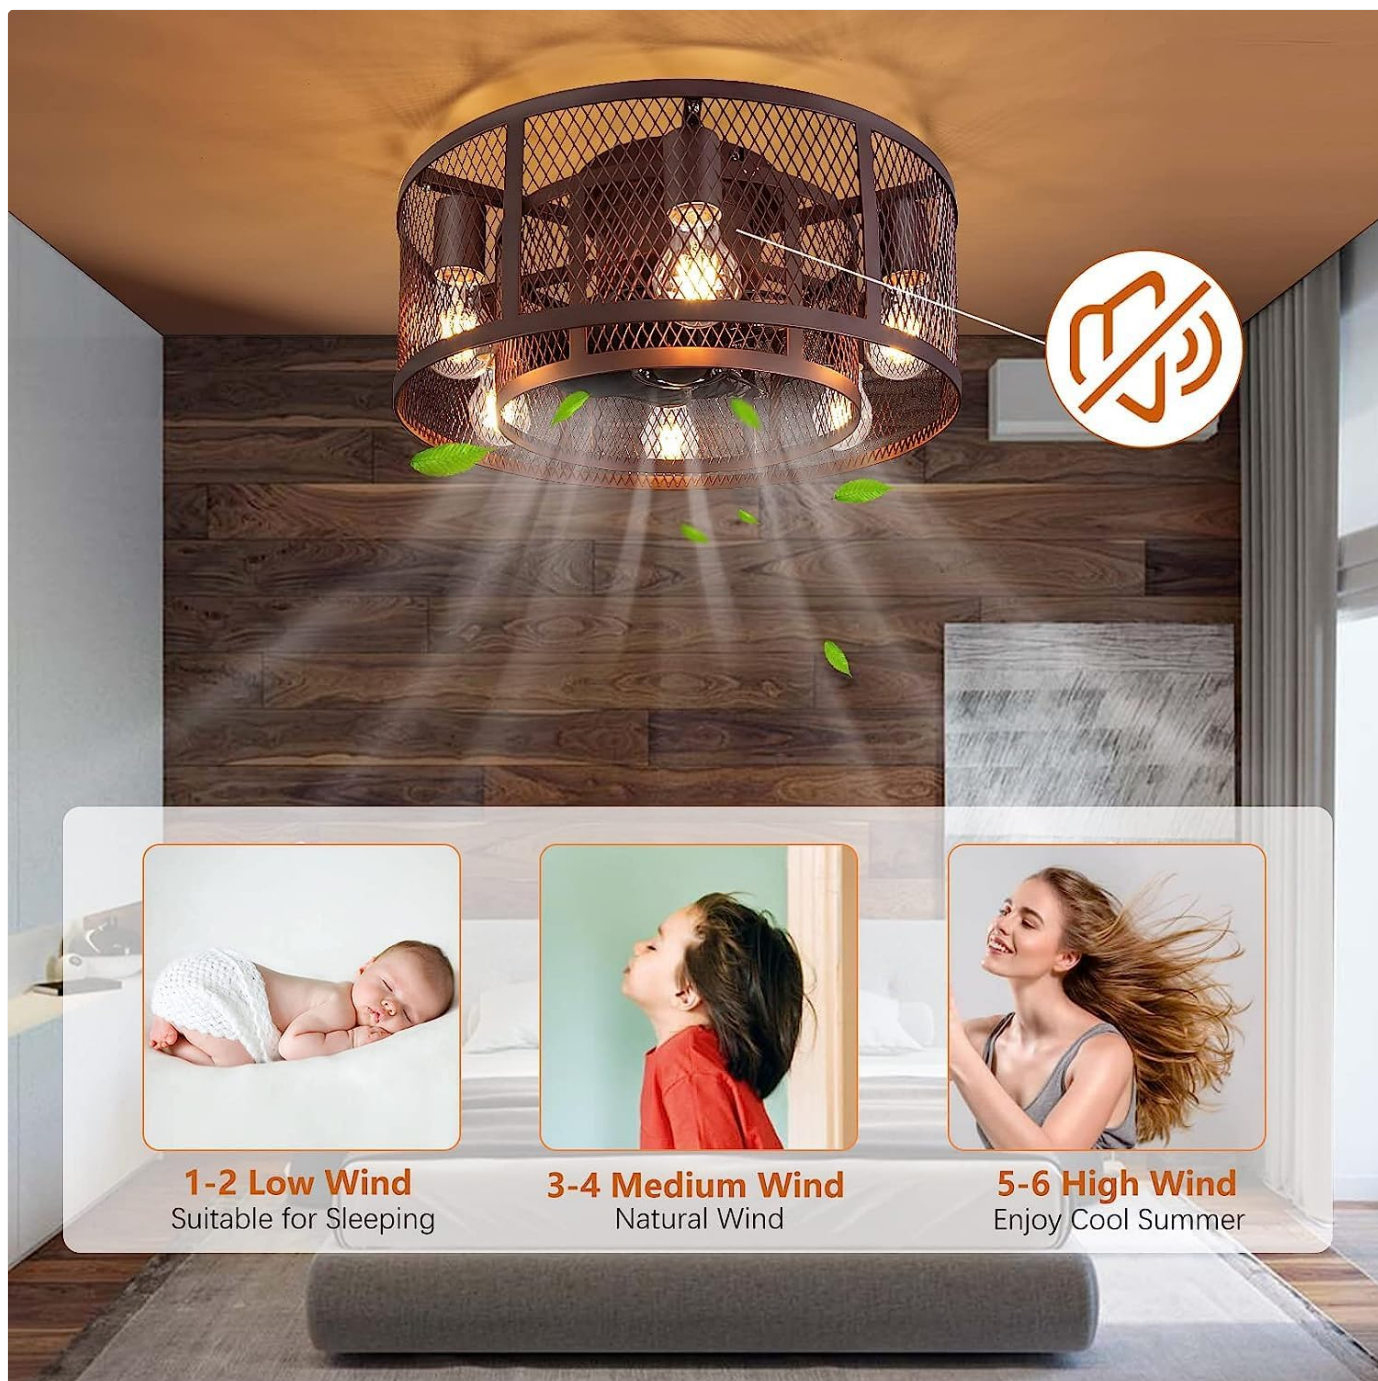


Figure 5: Illustration of the fan's reversible function, showing airflow for Summer downdraft mode (cooling) and Winter updraft mode (air circulation).

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** To clean the fan, wipe surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents. The semi-open design allows for easy access to the fan blades for cleaning.
- **Bulb Replacement:** Ensure power is off before replacing bulbs. The fan uses 6 E26 light sockets. Replace bulbs as needed.
- **Tighten Fasteners:** Periodically check and tighten all screws and fasteners on the fan and mounting hardware to ensure secure operation.

TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not operate	No power to the fan; loose wire connections; remote control battery low.	Check circuit breaker. Ensure all wire connections are secure. Replace remote control batteries.
Light does not turn on	Light bulbs faulty or loose; incorrect wiring.	Check and replace light bulbs. Verify light wiring connections.
Fan wobbles	Loose mounting screws; unbalanced blades.	Ensure mounting bracket and fan screws are tight. Check for any bent or damaged blades.
Remote control not working	Batteries dead or incorrectly inserted; remote receiver issue.	Replace batteries, ensuring correct polarity. Re-pair remote with receiver if necessary (refer to manual for pairing instructions).

SPECIFICATIONS

Feature	Detail
Brand	Ohniyou
Model Name	MW4FW
Color	Brown
Material	Iron, Acrylonitrile Butadiene Styrene, Metal
Style	Farmhouse, Rustic
Product Dimensions	21"L x 21"W x 9"H
Item Weight	12.97 pounds (5.9 Kilograms)
Installation Type	Flush Mount
Control Method	Remote Control
Number of Light Sources	6
Bulb Base	E26
Max Wattage per Bulb	60 watts (10W LED recommended)
Voltage	120 Volts
Fan Speeds	6
Timer Settings	1H, 2H, 4H
Motor Type	Quiet DC Motor, Reversible
Indoor/Outdoor Usage	Indoor
Recommended Room Size	15-30 (161-323 sq ft)

WARRANTY AND SUPPORT

Ohniyou stands behind the quality of its products. For any questions regarding installation, control, or product issues, please contact Ohniyou customer support. Refer to your purchase documentation for specific warranty details and contact information. You can also visit the official Ohniyou Store for more information and support:[Ohniyou Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09B3MW4FW>

More documents and user manuals: <https://manuals.plus/>