

[Manuals.plus](#) /

> [AKOOTE](#) /

> AKOOTE Replacement AC Remote Control User Manual for Midea Air Conditioners (Models RG57B2/BGE, RG57/BGE, RG57A/BGE, O1MVI-12WFR, O1MVI-09WFR, RG57B1/BGE, RG57B/BGE, RG57A6/BGEF, RG57A3/BGEF)

AKOOTE RG57B2/BGE, RG57/BGE, RG57A/BGE, O1MVI-12WFR, O1MVI-09WFR, RG57B1/BGE, RG57B/BGE, RG57A6/BGEF, RG57A3/BGEF

AKOOTE Replacement AC Remote Control User Manual

Compatible with Midea Air Conditioner Models: RG57B2/BGE, RG57/BGE, RG57A/BGE, O1MVI-12WFR, O1MVI-09WFR, RG57B1/BGE, RG57B/BGE, RG57A6/BGEF, RG57A3/BGEF

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your AKOOTE replacement AC remote control. This remote is designed to be compatible with various Midea air conditioner models, ensuring seamless control over your unit's functions. Please read this manual thoroughly before using the remote control to ensure proper operation and to maximize its lifespan.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.

Note: Remove batteries if the remote control will not be used for an extended period to prevent leakage and damage.

2.2 Initial Use

This replacement remote control is pre-programmed for the specified Midea air conditioner models. No additional pairing or setup is typically required. Simply point the remote at your air conditioner and begin operation.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. An image of the remote is provided below for reference.



Image 1: Front view of the AKOOTE Replacement AC Remote Control. The remote is white with an LCD screen at the top displaying current settings. Below the screen are various circular and oval-shaped buttons for functions such as ON/OFF, MODE, FAN, TEMP adjustment, ECO, TIMER ON/OFF, SLEEP, SWING, DIRECT, TURBO, SELF CLEAN, LED, and MY TEMP.

3.1 Button Functions

- **ON/OFF:** Press to turn the air conditioner unit on or off.
- **MODE:** Cycles through available operating modes: Auto, Cool, Dry, Fan, Heat (if supported by your AC unit).
- **FAN:** Adjusts the fan speed (Auto, Low, Med, High).
- **TEMP (Up/Down Arrows):** Adjusts the desired temperature setting. The display shows temperature in Celsius only.
- **ECO:** Activates or deactivates the energy-saving mode.
- **TIMER ON:** Sets a timer for the unit to turn on automatically.
- **TIMER OFF:** Sets a timer for the unit to turn off automatically.
- **SLEEP:** Activates the sleep mode, which adjusts temperature and fan speed for comfortable sleep and

energy saving.

- **SWING:** Controls the horizontal swing of the air deflector.
- **DIRECT:** Adjusts the vertical position of the air deflector.
- **TURBO:** Activates maximum cooling or heating capacity for rapid temperature change.
- **SELF CLEAN:** Initiates the self-cleaning function of the indoor unit (if supported by your AC unit).
- **LED:** Turns the display light on the indoor unit on or off.
- **MY TEMP:** Recalls a pre-set preferred temperature setting.

Important Note: This remote control displays temperature readings in **Celsius only**. It does not support Fahrenheit display.

4. MAINTENANCE

4.1 Battery Replacement

Replace the batteries when the remote control's display becomes dim or its operating range decreases. Follow the battery installation steps outlined in Section 2.1.

4.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these may damage the remote's surface or internal components.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Confirm the remote is pointed directly at the air conditioner.
- **Display is dim or blank:**
 - This usually indicates low battery power. Replace the batteries.
- **Air conditioner not responding to specific functions:**
 - Some functions may not be supported by all Midea air conditioner models. Refer to your air conditioner's original manual for its specific features.

6. SPECIFICATIONS

Feature	Detail
Brand	AKOOTE
Compatible Devices	Midea Air Conditioner (Models: RG57B2/BGE, RG57/BGE, RG57A/BGE, O1MVI-12WFR, O1MVI-09WFR, RG57B1/BGE, RG57B/BGE, RG57A6/BGEF, RG57A3/BGEF)
Connectivity Technology	Infrared

Feature	Detail
Controller Type	Button Control
Special Feature	Ergonomic design
Temperature Display	Celsius only
Power Source	2 x AAA Batteries (not included)
Package Dimensions	1.97 x 1.18 x 0.39 inches
Item Weight	0.032 ounces

7. WARRANTY AND SUPPORT

Specific warranty information for this AKOOTE replacement remote control is not provided in the product data. For any support inquiries or further assistance, please refer to the seller or manufacturer's contact information provided at the point of purchase.