

ALLIMITY GA841WJSA

ALLIMITY GA841WJSA Remote Control User Manual

Replacement Remote Control for Sharp HDTVs

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your ALLIMITY GA841WJSA replacement remote control. This remote is designed to be compatible with various Sharp HDTV models, offering a direct replacement without the need for programming.

2. COMPATIBILITY

The ALLIMITY GA841WJSA remote control is compatible with the following Sharp HDTV models:

- LC-40LE810ERU, LC-40LE812ERU, LC-52LE822E, LC-60LE822E
- LC-46LU820E, LC-46LU822E, LC-40LE810E, LC-40LE811E, LC-40LE821E
- LC-40LU822E, LC-40LX810E, LC-40LX812E, LC-46LE810E, LC-46LE811E
- LC-46LE812E, LC-46LE820E, LC-46LE821E, LC-46LE822E, LC-46LX810E
- LC-46LX812E, LC-52LE820E, LC-40LE820ERU, LC-40LE822ERU, LC-40LX812ERU
- LC-46LE810ERU, LC-46LE822ERU, LC-46LX812ERU, LC-52LE820ERU
- LC-52LE822ERU, LC-60LE822ERU, LC-40LE822E, LC-40LU820E
- LC-40LE812E, LC-40LE820E, LC-46LE812ERU, LC-46LE820ERU

If your TV model is not listed, please verify compatibility with your product vendor.

3. PACKAGE CONTENTS

Your package should contain the following item:

- 1 x ALLIMITY GA841WJSA Remote Control

Note: Batteries are not included and must be purchased separately.

4. SETUP

4.1 Installing Batteries

To begin using your remote control, you need to install two AAA alkaline batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



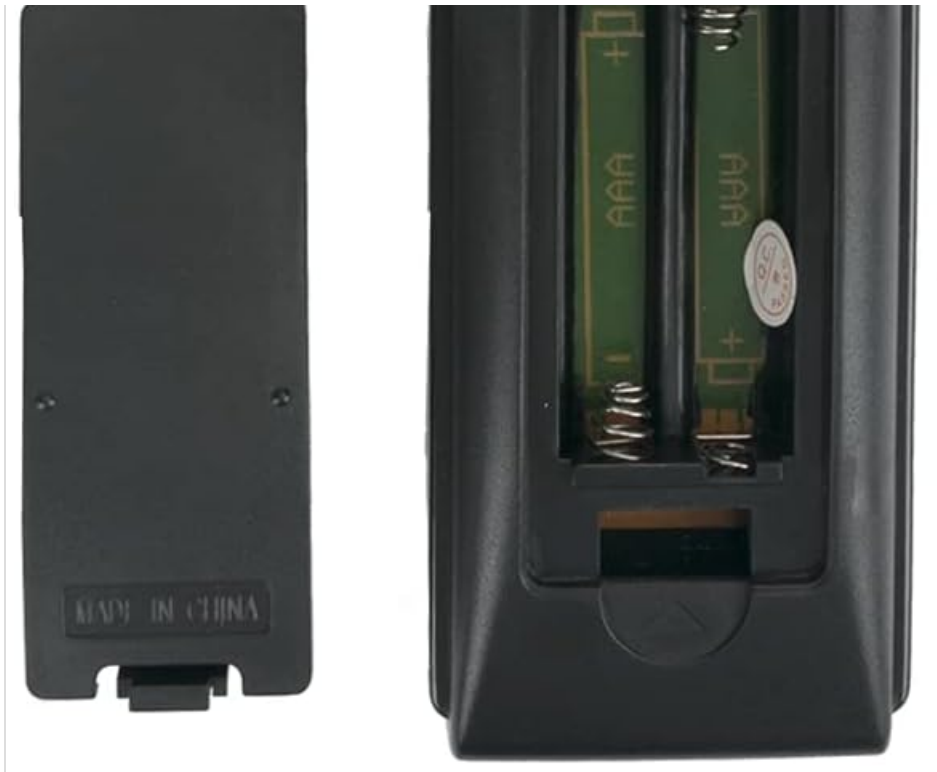


Image 1: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

The remote control is now ready for use with your compatible Sharp HDTV. No additional programming is required.

5. OPERATING THE REMOTE CONTROL

The ALLIMITY GA841WJSA remote control features standard buttons for navigating your Sharp HDTV. Below is a general overview of common button functions.



Image 2: Front view of the ALLIMITY GA841WJSA remote control, displaying its layout and button functions.

5.1 Key Functions Overview

- **TV / Power:** Turns the television on or off.
- **ATV / DTV / SAT / RADIO:** Selects input sources or modes.
- **SOURCE:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Directly enters channel numbers.
- **CH +/-:** Changes channels up or down.
- **VOL +/-:** Adjusts volume up or down.
- **MUTE:** Mutes or unmutes the television sound.
- **MENU:** Accesses the TV's main menu.
- **OK / Directional Arrows:** Navigates through menus and confirms selections.
- **EXIT / END:** Exits the current menu or function.
- **EPG:** Displays the Electronic Program Guide.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain menus or applications, as indicated on the TV screen.
- **Playback Controls (REC, STOP, PLAY, PAUSE, FF, REW):** Controls media playback if supported by your TV and connected devices.

Refer to your Sharp HDTV's user manual for specific functions related to your television model.

6. MAINTENANCE

6.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

6.2 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

6.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	<ul style="list-style-type: none">Batteries are dead or incorrectly inserted.Obstruction between remote and TV.Remote control is out of range.Infrared sensor on TV is blocked.	<ul style="list-style-type: none">Replace batteries with new AAA alkaline batteries, ensuring correct polarity.Remove any objects blocking the line of sight between the remote and the TV.Move closer to the TV. The remote typically works within 20 feet (6 meters).Ensure the TV's infrared sensor is not covered.
Some buttons do not respond.	<ul style="list-style-type: none">Batteries are low.Button is stuck or dirty.Function not supported by your specific TV model.	<ul style="list-style-type: none">Replace batteries.Clean the remote control.Consult your TV's manual to confirm if the function is available.

If troubleshooting steps do not resolve the issue, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	GA841WJSA (BJKJ-GA841WJSA-JKJB)
Brand	ALLIMITY
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	6 x 2 x 0.6 inches (approximately)
Item Weight	2 ounces (approximately, without batteries)
Special Feature	Ergonomic design

9. SUPPORT

For any questions or assistance regarding your ALLIMITY GA841WJSA remote control, please contact your vendor or refer to the product listing for customer support information.