

[Manuals.plus](#) /

› [Arafuna](#) /

› Arafuna Mini DVD Player User Manual

## Arafuna MD-1014

# Arafuna Mini DVD Player User Manual

Model: MD-1014

## 1. INTRODUCTION

---

Thank you for purchasing the Arafuna Mini DVD Player. This compact and versatile device is designed to provide a high-quality viewing experience for your favorite DVDs, CDs, and media files. With its region-free playback, HDMI and RCA connectivity, and support for USB/TF card media, it offers flexible entertainment options for your home or on the go.

Key features include:

- 1080P HD output via HDMI for lifelike image quality.
- Region-free playback, supporting DVDs from any region (1-6).
- Support for various disc formats: CD, DVD, DVD-R/+R, DVD-/RW, CD-R/-RW, VCD, SVCD.
- Built-in USB and TF card ports for media playback (AVI/DIVX/MPG/FLV/VOB video, MP3/MP2/PCM audio, JPG images).
- Anti-shock and fast reading functions with noise reduction and error correction.
- Last memory function to resume playback from where you left off.

## 2. PACKAGE CONTENTS

---

Please verify that all items listed below are included in your package:

- 1 x Arafuna Mini DVD Player
- 1 x HDMI Cable
- 1 x DC (USB) Cable
- 1 x AV Cable (RCA)
- 1 x Remote Control
- 1 x Power Adaptor
- 1 x User Manual (this document)



Image: Arafuna Mini DVD Player shown with its remote control, HDMI cable, AV cable, USB cable, and power adapter.

## 3. SETUP

---

### 3.1 Connecting to Your TV or Projector

The Arafuna Mini DVD Player offers multiple connectivity options to suit your display device.

#### 3.1.1 HDMI Connection (Recommended for HD Quality)

1. Ensure both the DVD player and your TV/projector are powered off.
2. Connect one end of the provided HDMI cable to the HDMI OUT port on the back of the DVD player.
3. Connect the other end of the HDMI cable to an available HDMI IN port on your TV or projector. Note the HDMI input number (e.g., HDMI 1, HDMI 2).
4. Power on your TV/projector and select the corresponding HDMI input source.

## Region DVD Player with HDMI & RCA Connection



Image: Illustration demonstrating how to connect the DVD player to a Smart TV or projector using the supplied HDMI cable, showing a group of people enjoying a movie projected outdoors.

### 3.1.2 RCA Connection (for Older TVs)

1. Ensure both the DVD player and your TV are powered off.
2. Connect the yellow plug of the provided AV (RCA) cable to the Video Out (yellow) port on the DVD player.
3. Connect the red and white plugs to the Audio Out (red for right, white for left) ports on the DVD player.
4. Connect the other end of the yellow, red, and white plugs to the corresponding Video In and Audio In ports on your TV.
5. Power on your TV and select the AV input source.



Image: Illustration demonstrating how to connect the DVD player to a TV using the supplied RCA cable, showing a family watching a movie.

### 3.2 Powering On the Device

1. Connect the DC (USB) cable to the DC IN port on the DVD player.
2. Connect the other end of the DC (USB) cable to the provided power adaptor.
3. Plug the power adaptor into a standard wall outlet.
4. Press the **POWER** button on the DVD player or the remote control to turn on the device. The front display will illuminate.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Disc Playback

1. With the player powered on, gently insert a DVD or CD into the disc slot on the front of the player, label side up. The player will automatically detect the disc.
2. The disc will begin loading, and playback should start automatically. If a menu appears, use the arrow keys and **OK** button on the remote control to navigate.
3. Use the **PLAY/PAUSE**, **STOP**, **FF/REW** buttons on the remote for playback control.
4. This player is region-free, allowing you to play DVDs from any region (1-6) without restrictions.



Image: A globe surrounded by film strips, symbolizing the player's region-free capability.

## 4.2 USB and TF Card Playback

The player supports media playback from USB drives and TF (Micro SD) cards up to 32GB, formatted in FAT32.

1. Insert your USB drive into the USB port or your TF card into the TF CARD slot on the side of the player.
2. The player should automatically detect the media and display a file browser. If not, use the **SOURCE** button on the remote to select USB or TF Card mode.
3. Navigate through your files using the arrow keys and **OK** button on the remote.
4. Supported file formats:
  - Video: AVI, DIVX, MPG, FLV, VOB
  - Audio: MP3, MP2, PCM
  - Image: JPG



Image: Close-up of the DVD player's side ports with a USB drive and TF card inserted, indicating media playback capabilities. Headphones are shown but not included.

## 4.3 Last Memory Function

The Arafuna Mini DVD Player features a convenient last memory function. If you stop playback or power off the device during a movie or song, it will automatically resume from the exact point where you left off when you power it back on and select the same media.



Image: A visual representation of the last memory function, showing a video paused, the device powered off, and then resuming playback from the same point when powered back on.

## 4.4 Remote Control Usage

The included remote control provides full functionality for navigating menus, controlling playback, and adjusting settings. Ensure two AAA batteries (not included) are inserted correctly. Point the remote directly at the front of the DVD player for optimal response.

- **POWER:** Turns the player on/off.
- **PLAY/PAUSE:** Starts or pauses playback.
- **STOP:** Stops playback.
- **FF/REW:** Fast forward/rewind.
- **NEXT/PREV:** Skips to the next/previous track/chapter.
- **VOL+/-:** Adjusts volume (if supported by the player's output).
- **MENU/SETUP:** Accesses disc or system menus.
- **ARROW KEYS & OK:** Navigates menus and confirms selections.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Player

To maintain optimal performance and appearance:

- Always unplug the player from the power outlet before cleaning.
- Wipe the exterior of the player with a soft, dry, lint-free cloth.
- Do not use liquid cleaners, aerosol sprays, or harsh chemicals, as they may damage the finish or internal components.

### 5.2 Cleaning Discs

For best playback quality, keep your discs clean and free of dust and fingerprints.

- Hold discs by their edges to avoid touching the playback surface.
- Wipe discs gently from the center outwards with a soft, lint-free cloth.
- Do not use abrasive cleaners or solvents.

### 5.3 Storage

When not in use, store the DVD player in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Keep discs in their cases to prevent scratches and dust accumulation.

## 6. TROUBLESHOOTING

---

If you encounter any issues with your Arafuna Mini DVD Player, please refer to the following table for common problems and their solutions.

| Problem  | Possible Cause                                       | Solution                                                                |
|----------|------------------------------------------------------|-------------------------------------------------------------------------|
| No power | Power cable not connected; Power outlet not working. | Ensure power cable is securely connected. Try a different power outlet. |

| Problem                         | Possible Cause                                                                                                  | Solution                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| No picture on TV                | Incorrect input source selected on TV;<br>Loose HDMI/RCA cable connection;<br>TV/projector compatibility issue. | Select the correct HDMI or AV input on your TV.<br>Check all cable connections. Try connecting directly to TV if using a switch. |
| No sound                        | TV/player volume too low or muted; Loose audio cable connection.                                                | Increase volume on both player and TV. Check audio cable connections (red/white RCA).                                            |
| Disc not playing / "NOCD" error | Disc inserted incorrectly; Disc is dirty or scratched; Unsupported disc format.                                 | Re-insert disc correctly (label side up). Clean the disc. Ensure the disc format is supported (CD, DVD, etc.).                   |
| USB/TF card not recognized      | Incorrect format (not FAT32); Unsupported file types; Card/drive capacity too large.                            | Ensure USB/TF card is formatted to FAT32. Check if media files are supported. Max capacity is 32GB.                              |
| Remote control not working      | Batteries are dead or inserted incorrectly; Obstruction between remote and player.                              | Replace batteries. Ensure correct polarity. Remove any obstructions and point remote directly at the player.                     |

## 7. SPECIFICATIONS

---

| Feature                         | Detail                                                                                              |
|---------------------------------|-----------------------------------------------------------------------------------------------------|
| Brand                           | Arafuna                                                                                             |
| Model Name                      | MD-1014                                                                                             |
| Dimensions (L x W x H)          | 0.39 x 0.39 x 0.39 inches (approx.)                                                                 |
| Item Weight                     | 9.9 ounces (approx. 280 grams)                                                                      |
| Color                           | Black                                                                                               |
| Resolution                      | 1920 x 1080 pixels (1080P)                                                                          |
| Connectivity Technology         | HDMI, RCA, USB                                                                                      |
| Connector Type                  | USB 2.0                                                                                             |
| Supported Media Types           | CD, SVCD, DVD, VCD, DVD-R/+R, DVD-/+RW, CD-R/-RW                                                    |
| USB/TF Card Support             | Up to 32GB, FAT32 format                                                                            |
| Supported File Formats (USB/TF) | Video: AVI/DIVX/MPG/FLV/VOB; Audio: MP3/MP2/PCM; Image: JPG                                         |
| Special Features                | Compact, Portable, Region-Free, Last Memory Function, Noise Reduction, Anti-Shock, Error Correction |

## 8. WARRANTY AND SUPPORT

Arafuna is committed to providing high-quality products and customer satisfaction. For any questions, technical assistance, or warranty inquiries regarding your Mini DVD Player, please contact our customer support team. Details for contacting support are typically found on the product packaging or our official website. Please retain your proof of purchase for warranty claims.

© 2024 Arafuna. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question