

[Manuals.plus](#) /

› [Madesa](#) /

› Madesa Lux 60 cm Hot Tower with 1 Door and 3 Drawers - White/Gray Instruction Manual

Madesa G236559RLX

Madesa Lux 60 cm Hot Tower with 1 Door and 3 Drawers - White/Gray Instruction Manual

Model: G236559RLX

1. INTRODUCTION

The Madesa Lux 60 cm Hot Tower is a versatile and spacious kitchen cabinet designed to enhance your kitchen's organization and aesthetic. It features a dedicated space for an oven and microwave, a single door, and three drawers, providing ample storage for various kitchen items. The elegant design includes gray glass fronts and durable aluminum handles, complemented by a high-resistance Polyester paint finish. This manual provides essential information for the safe assembly, proper use, and maintenance of your new kitchen tower.



Image 1.1: Front view of the Madesa Lux 60 cm Hot Tower.

2. SAFETY INSTRUCTIONS

- Always follow assembly instructions carefully. Incorrect assembly can lead to instability and injury.
- Ensure the cabinet is **securely fixed to the wall** to prevent tipping. Wall mounting hardware suitable for your wall type may be required and is not always included.
- Keep small parts and hardware away from children during assembly to prevent choking hazards.
- Use appropriate tools for assembly as specified in the included manual.
- Do not overload shelves or drawers. Distribute weight evenly to maintain stability.
- Avoid climbing on or leaning heavily against the cabinet.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged.

- One (1) Madesa Lux 60 cm Hot Tower unit (225 cm H x 60 cm W x 60 cm D)
- One (1) door with gray glass front
- Three (3) drawers with gray glass fronts
- One (1) oven niche
- One (1) smaller niche
- All necessary hardware for installation (screws, dowels, hinges, telescopic slides, aluminum handles, adjustable feet)
- Assembly manual (separate document)

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly requires careful attention to detail. It is recommended to have two people for assembly. Madesa does not provide assembly services.

4.1 Tools Required

- Screwdriver (Phillips head)
- Hammer
- Measuring tape
- Level
- Drill (for wall mounting)

4.2 Preparation

- Unpack all components and verify against the parts list in the separate assembly manual.
- Ensure you have sufficient clear space for assembly.
- Protect your floor with a blanket or cardboard during assembly.

4.3 Assembly Steps


1. **Assemble the Frame:** Follow the diagrams in the included assembly manual to connect the side panels, top, and bottom pieces. Ensure all connections are secure.
2. **Install Shelves and Niches:** Insert shelves into the designated slots. Position the oven and smaller niches as indicated in the manual.
3. **Assemble Drawers:** Construct the three drawers. Attach the telescopic slides to the drawer sides and the cabinet frame, ensuring they are correctly oriented for smooth operation.
4. **Attach Door:** Mount the door using the metallic hinges. Adjust the hinges for proper alignment and smooth opening/closing.
5. **Install Handles and Feet:** Attach the aluminum handles to the door and drawer fronts. Install the adjustable feet at the base of the cabinet.
6. **Wall Mounting:** This cabinet **must be fixed to the wall** for stability and safety. Mark the wall according to the cabinet's dimensions and drill pilot holes. Secure the cabinet to the wall using appropriate fasteners for your wall type.



Image 4.1: Internal dimensions of the Madesa Lux 60 cm Hot Tower.



**ALTURA MODELO
FEMININO: 165cm**

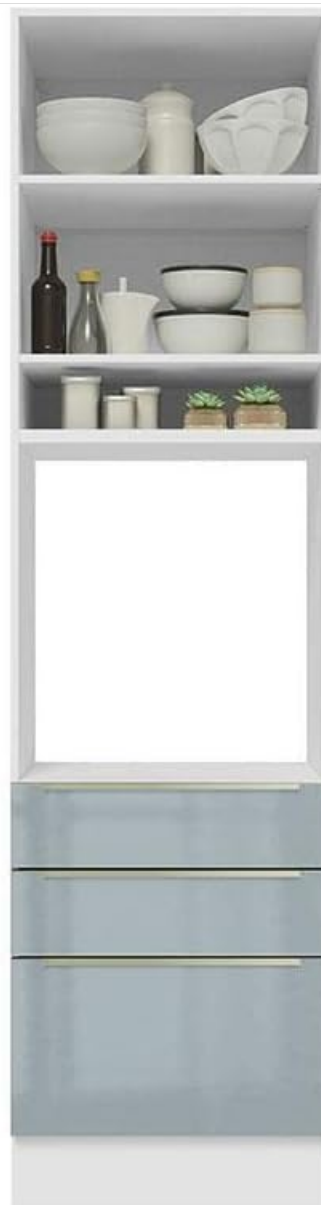

**ALTURA DO
PANELEIRO: 225cm**


Image 4.2: Overall dimensions of the Madesa Lux 60 cm Hot Tower, showing 225cm height, 60cm width, and 60cm depth.



Image 4.3: View of the Madesa Lux 60 cm Hot Tower with the upper door and three lower drawers open.

5. OPERATING INSTRUCTIONS

- **Door Operation:** Open and close the door gently using the handle. Avoid forcing it or allowing it to swing open violently.
- **Drawer Operation:** The drawers feature telescopic slides for smooth, full extension. Pull and push drawers evenly. Do not slam them shut to prevent damage to the slides and contents.
- **Adjustable Shelf:** The upper shelf can be adjusted to different heights to accommodate various items. To adjust, remove all items from the shelf, lift the shelf, and reposition it in the desired slots. Ensure it is securely seated before placing items back.

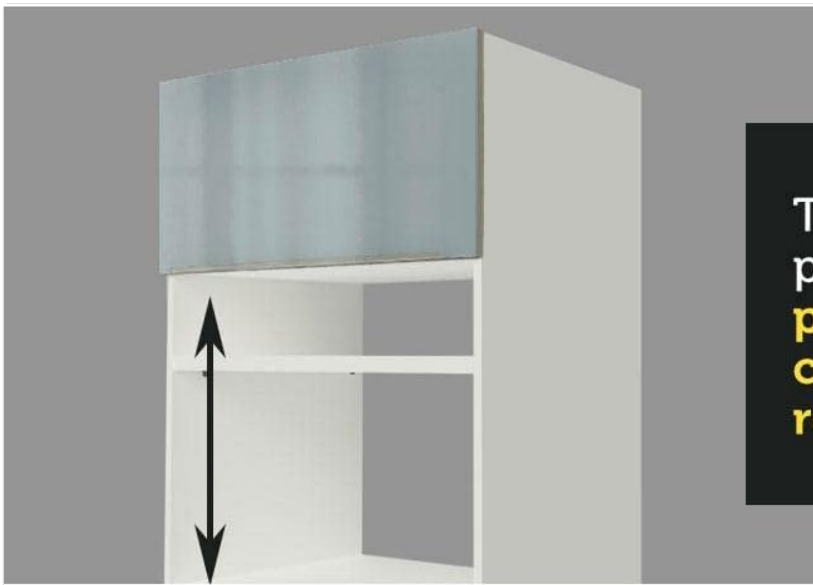

Torre quente
possui
**prateleira
com altura
regulável**



Image 5.1: Detail showing the adjustable shelf feature in the upper compartment.



Possui
**Corrediças
telescópicas**
de extração
total

Image 5.2: Close-up view of the full-extension telescopic drawer slides.



Portas com
vidro
sobreposto e
revestimento
metálico

Image 5.3: Detail of the aluminum handle on the door/drawer fronts.

6. MAINTENANCE

- **Cleaning:** Clean the cabinet surfaces with a soft, damp cloth. Use mild soap if necessary. Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the Polyester paint finish and glass.
- **Glass Care:** For glass surfaces, use a glass cleaner and a soft, lint-free cloth.
- **Hardware:** Periodically check all screws and fasteners for tightness. Tighten if necessary to ensure structural integrity.
- **Avoid Moisture:** Do not expose the cabinet to excessive moisture or direct sunlight for prolonged periods, as this can cause warping or fading.

7. TROUBLESHOOTING

- **Problem:** Drawer does not slide smoothly.
 - **Solution:** Check if the telescopic slides are properly aligned and free of obstructions. Ensure the drawer is not overloaded. Lubrication with a silicone spray may help if slides are stiff.

- **Problem:** Door is misaligned or does not close properly.
 - **Solution:** Adjust the metallic hinges. Refer to the detailed assembly manual for specific hinge adjustment instructions.
- **Problem:** Cabinet feels unstable or wobbly.
 - **Solution:** Ensure the cabinet is securely fixed to the wall as per assembly instructions. Verify that the adjustable feet are properly set on an even surface. Adjust feet as needed to level the cabinet.



Image 7.1: Detail of the adjustable feet for leveling the cabinet.

8. SPECIFICATIONS

Brand	Madesa
Model Number	G236559RLX
Color	White/Gray
Material	MDP (Medium Density Particleboard), Glass
Dimensions (H x W x D)	225 cm x 60 cm x 60 cm (approx. 88.6 in x 23.6 in x 23.6 in)
Weight	71.1 kg (approx. 156.7 lbs)
Number of Doors	1
Number of Drawers	3
Finish Type	Polyester Paint (7 layers of protection)
Mounting Type	Wall Mount (required)
Special Features	Aluminum handles, telescopic drawer slides, adjustable feet, gray glass door/drawer fronts, dedicated oven/microwave space.

9. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation provided at the time of purchase or contact Madesa customer service directly through their official channels. Please note that Madesa does not provide assembly services for this product.