

[Manuals.plus](#) /

› [SURKER](#) /

› SURKER SK-S22 All-in-One Grooming Kit User Manual

SURKER SK-S22

SURKER SK-S22 All-in-One Grooming Kit User Manual

Model: SK-S22

1. INTRODUCTION

Thank you for choosing the SURKER SK-S22 All-in-One Grooming Kit. This versatile grooming tool is designed for comprehensive personal care, offering solutions for beard trimming, hair clipping, mustache grooming, body hair removal, and nose/ear hair trimming. Its cordless design, powerful motor, and waterproof capabilities ensure a convenient and efficient grooming experience.

Please read this manual thoroughly before first use to ensure proper operation, maintenance, and to maximize the lifespan of your device.

2. PRODUCT CONTENTS

The SURKER SK-S22 All-in-One Grooming Kit includes the following components:

- Main Trimmer Unit with LED Display
- Precision Trimmer Head
- Foil Shaver Head
- Nose/Ear Hair Trimmer Head
- Detail Trimmer Head (for modeling/design)
- 4 Guide Combs (3mm, 6mm, 9mm, 12mm)
- Charging Stand
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil



Image: Complete SURKER SK-S22 Grooming Kit with charging stand and various attachments.



Image: Detailed view of all included components and accessories.

3. KEY FEATURES

- **All-around Cutting & Cord-free Convenience:** Enjoy up to 120 minutes of powerful, cordless runtime on a single charge.
- **USB Rechargeable:** Convenient USB charging allows you to power up the device anywhere, making it ideal for travel.
- **Worldwide Voltage Compatibility:** Designed for use globally.
- **Carbon Stainless Steel Blades:** Safe, sharp, and durable blades for precise and efficient cutting.
- **IPX7 Waterproof:** The device is fully washable, allowing for easy cleaning under running water and safe for wet or dry use.
- **6000 PRM Heavy-duty Powerful Rotary Motor:** Provides strong and consistent power for quick and quiet cutting, saving up to 20% cutting time.
- **LED Display:** Clearly shows battery life and charging status.





Precision Blades



100% Waterproof



Ultra-Lightweight



Five in One

6000 PRM

- Heavy-duty powerful Rotary motor
- For quick and quiet cutting
- Saving 20% cutting Time

Image: Visual representation of key features including IPX7 waterproof rating and powerful motor.

Carbon Stainless Steel Blade

Safe, sharp and durable



Image: Close-up of the Carbon Stainless Steel Blade and various guide comb sizes.

4. SETUP

4.1 Charging the Device

1. Ensure the device is turned off before charging.
2. Connect the USB charging cable to the charging stand or directly to the trimmer's charging port.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port on a computer.
4. Place the trimmer securely in the charging stand. The LED display on the trimmer will indicate the charging status and battery percentage.
5. A full charge provides up to 120 minutes of cordless runtime.

4.2 Attaching and Detaching Trimmer Heads

1. To attach a head: Align the desired trimmer head with the main unit and push it down firmly until it clicks into place.

2. To detach a head: Hold the main unit firmly and gently pull the attached head upwards to remove it.

4.3 Attaching and Detaching Guide Combs

1. Ensure the desired trimmer head (e.g., precision trimmer head) is attached to the main unit.
2. Select the appropriate guide comb (3mm, 6mm, 9mm, or 12mm) for your desired hair length.
3. Slide the guide comb onto the trimmer head until it securely locks into position.
4. To remove, gently pull the guide comb off the trimmer head.

5. OPERATING INSTRUCTIONS

The SURKER SK-S22 is designed for both wet and dry use. For optimal results, ensure your skin and hair are clean before use.

5.1 General Operation

- Press the power button once to turn the device on. The LED display will illuminate.
- Press the power button again to turn the device off.

5.2 Specific Grooming Functions

Refer to the images below for visual guidance on different uses.



Image: Overview of the five primary functions of the grooming kit.



Image: Multiple scenarios demonstrating the versatility of the trimmer.

- **For Shaving (Foil Shaver Head):**

Attach the foil shaver head. Hold the shaver at a right angle to your skin and move it against the direction of hair growth using light pressure. This head is ideal for a close, smooth finish on facial hair or body hair.



Image: Using the foil shaver head.

- **For Beard Trimming (Precision Trimmer Head with Guide Combs):**

Attach the precision trimmer head. Select and attach a guide comb (3mm, 6mm, 9mm, or 12mm) based on your desired beard length. Trim against the direction of hair growth, moving slowly and evenly. For detailing, remove the comb and use the precision trimmer head directly.



Image: Trimming a beard.

- **For Haircuts (Precision Trimmer Head with Guide Combs):**

Attach the precision trimmer head and the appropriate guide comb. Move the trimmer against the direction of hair growth, ensuring smooth, overlapping strokes for an even cut. Use different comb lengths for fading or tapering.



Image: Using the trimmer for a haircut.

- **For Modeling/Detailing (Detail Trimmer Head):**

Attach the detail trimmer head. This head is designed for precise lines, sharp edges, and intricate designs. Use it without a comb for close trimming around the neckline, sideburns, or for creating patterns.



Image: Performing hair modeling with the detail trimmer head.

- **For Nose/Ear Hair Trimming (Nose/Ear Hair Trimmer Head):**

Attach the nose/ear hair trimmer head. Gently insert the trimmer tip into your nostril or ear canal. Move it slowly in a circular motion to trim unwanted hair. Do not insert too deeply.



Image: Using the nose hair trimmer head.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the life of your SURKER SK-S22 grooming kit.

6.1 Cleaning the Trimmer Heads

Due to its IPX7 waterproof rating, the trimmer heads can be easily cleaned:

1. Turn off the device and detach the trimmer head.
2. Rinse the trimmer head under running water to remove hair clippings and debris.
3. Use the included cleaning brush to remove any stubborn hair from the blades.
4. Shake off excess water and allow the head to air dry completely before reattaching or storing.



Image: The trimmer being cleaned under running water.



Image: The trimmer's waterproof design with water droplets.

6.2 Oiling the Blades

To maintain optimal cutting performance, it is recommended to oil the blades regularly, especially after cleaning or if the trimmer feels sluggish:

1. Apply a few drops of the included lubricating oil onto the teeth of the trimmer blade.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

6.3 Storage

Store the grooming kit and all its accessories in a dry place, away from direct sunlight and extreme temperatures. Use the charging stand for organized storage and easy access.

7. TROUBLESHOOTING

If you encounter any issues with your SURKER SK-S22 grooming kit, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on or has low power.	Battery is low or depleted.	Charge the trimmer fully. Ensure the USB cable and power adapter are working correctly.
Trimmer pulls hair or cuts poorly.	Blades are dull, dirty, or not oiled. Hair buildup in the head.	Clean the trimmer head thoroughly. Apply lubricating oil to the blades. Ensure the correct head and comb are used for the task.
Trimmer head detaches easily during use.	Head not properly attached.	Ensure the trimmer head is pushed down firmly until it clicks into place.
LED display is not working.	Device is off or battery is completely dead.	Turn on the device. If still off, attempt to charge it. If the issue persists, contact customer support.

If the problem persists after trying these solutions, please contact SURKER customer support for further assistance.

8. SPECIFICATIONS

- **Model:** SK-S22
- **Product Dimensions:** 9 x 2.75 x 2.6 inches
- **Weight:** 1.35 Pounds
- **Power Source:** Battery Powered, Corded Electric (via USB)
- **Battery Type:** 1 AAA battery required (internal rechargeable battery)
- **Runtime:** Up to 120 minutes (cordless)
- **Blade Material:** Carbon Stainless Steel
- **Body Material:** Rubber
- **Waterproof Rating:** IPX7
- **Manufacturer:** Topkech
- **Recommended Uses:** Mustache, Nose, Beard, Trimming, Shaving, Grooming
- **Hair Type:** All

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the seller/manufacturee directly. Keep your proof of purchase for any warranty claims.

