

Zojirushi NW-MA07

Zojirushi NW-MA07-BA Pressure IH Rice Cooker

Instruction Manual

Model: NW-MA07-BA | Brand: Zojirushi

1. INTRODUCTION

Thank you for purchasing the Zojirushi NW-MA07-BA Pressure IH Rice Cooker. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before use and keep them for future reference.

Important Note: This product is designed for 100V domestic use in Japan only. It cannot be used overseas where power voltage or frequency differs. Manufacturer's warranty and after-sales service are not applicable if used overseas.

2. SAFETY PRECAUTIONS

- Always ensure the power outlet matches the appliance's voltage (100V).
- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children.
- Do not block the steam vent during operation.
- Unplug the rice cooker when not in use or before cleaning.
- Use only the provided inner pot and accessories.

3. PRODUCT OVERVIEW

The Zojirushi NW-MA07-BA is a compact 4-cup Pressure IH Rice Cooker designed for delicious rice with easy

maintenance. It features advanced cooking technology and user-friendly design.



Figure 3.1: Zojirushi NW-MA07-BA Pressure IH Rice Cooker (Black)

Video 3.1: Product Overview of the Zojirushi NW-MA07-BA Rice Cooker. This video demonstrates the compact size, ease of use, and simple cleaning process of the rice cooker.

4. SETUP

1. **Unpacking:** Carefully remove the rice cooker and all accessories from the packaging. Check for any damage.
2. **Initial Cleaning:** Before first use, wash the inner pot, inner lid, and rice scoop with mild dish soap and warm water. Wipe the exterior of the main unit with a damp cloth. Ensure all parts are completely dry.
3. **Placement:** Place the rice cooker on a stable, flat surface away from direct sunlight, heat sources, and moisture. Ensure adequate ventilation around the unit.
4. **Power Connection:** Plug the power cord securely into a 100V AC outlet.

5. OPERATING INSTRUCTIONS

Basic Rice Cooking:

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. For best results, do not overfill.
2. **Wash Rice:** Wash the rice thoroughly until the water runs clear. Drain well.
3. **Add Water:** Place the washed rice into the inner pot. Add water up to the corresponding water level mark for the type and amount of rice.
4. **Place Inner Pot:** Insert the inner pot into the main unit, ensuring it sits correctly.
5. **Close Lid:** Close the outer lid firmly until it clicks.
6. **Select Menu:** Press the 'Menu' button to select your desired cooking course (e.g., White Rice, Brown Rice, My Home Cooking).
7. **Start Cooking:** Press the 'Start' button to begin cooking. The cooking indicator will light up.
8. **Completion:** Once cooking is complete, the rice cooker will switch to 'Keep Warm' mode and an alert sound will play.
9. **Serve:** Open the lid, fluff the rice with the rice scoop, and serve.

Cooking Modes:

The NW-MA07-BA offers various cooking modes to suit different rice types and preferences.

- **White Rice:** Standard setting for perfectly cooked white rice.
- **Brown Rice:** Optimized for cooking brown rice.
- **My Home Cooking (49 settings):** This unique feature allows you to fine-tune the cooking process based on your previous experience and desired texture. Answer a simple questionnaire about the rice's taste and texture, and the rice cooker will adjust the cooking for future batches.
- **Barley Rice (Regular/Chewy):** Dedicated settings for cooking barley rice to two different textures.
- **Pressure Cooking (7 settings):** Adjust the pressure level to achieve rice textures from firm to chewy.

高温で炊くからごはんが 甘くてもちもち!

おいしさを引き出す「大火力&高圧力」



※イメージ

一気に大火力を加え、激しい対流を起こします。

高圧力で水中に溶け出した還元糖を一粒ずつに染み込ませます。

Figure 5.1: Illustration of High Heat and High Pressure cooking technology.

これ1台でわが家に合わせて 炊き方自由自在



49通りの
食感

「わが家炊き」メニュー

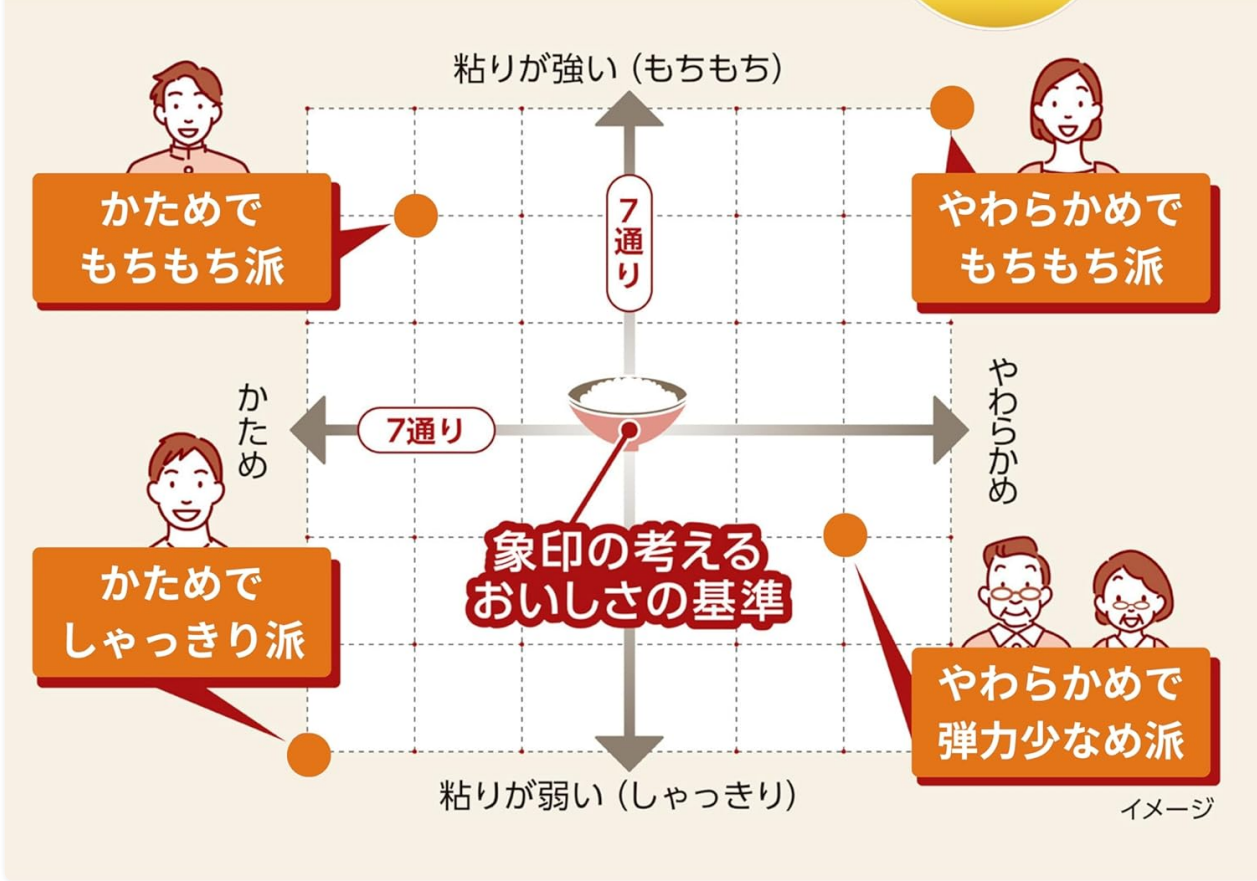


Figure 5.2: Diagram explaining the 49 'My Home Cooking' menu options for texture customization.

Keep Warm Function:

The rice cooker automatically switches to 'Keep Warm' mode after cooking. You can choose between two settings:

- **Uru-tsuya Keep Warm:** Maintains optimal moisture and temperature for up to 30 hours, preventing drying and discoloration.
- **High Keep Warm:** Keeps rice at a slightly higher temperature.

忙しい毎日にとっても便利



おいしさ長く続く
30時間保温

※メニューによって異なります。
取扱説明書をご確認ください。

手間なく炊ける
無洗米専用の
メニューも選べる

Figure 5.3: Visual representation of the 30-hour keep-warm function and rinse-free rice menu.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene. The NW-MA07-BA is designed for easy cleaning with only two main parts requiring daily washing.

Daily Cleaning:

1. **Inner Pot:** Remove the inner pot and wash it with mild dish soap and a soft sponge. Rinse thoroughly and dry.
2. **Inner Lid:** Detach the inner lid from the main unit. Wash it with mild dish soap and a soft sponge. Rinse thoroughly and dry.

お手入れもカンタン

毎回洗うのは、たったの2点

※その他のお手入れに関しては取扱説明書をご確認ください。

内ぶた



内釜



毎日使うものだから
お手入れは
しやすいほうがいい



Figure 6.1: The inner lid and inner pot are the primary components for daily cleaning.



Figure 6.2: Detachable inner lid and inner pot for easy washing.



Figure 6.3: The flat interior design simplifies wiping down the main unit.

Cleaning Function:

Use the 'Cleaning' function when odors are a concern, such as after cooking mixed rice or other flavored dishes. Refer to the detailed instructions in the full user manual for how to activate and use this function.

7. TROUBLESHOOTING

If you encounter any issues with your rice cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is undercooked/hard	Insufficient water, old rice, incorrect cooking mode.	Add correct amount of water, use fresh rice, select appropriate cooking mode.
Rice is overcooked/mushy	Too much water, incorrect cooking mode.	Reduce water slightly, select appropriate cooking mode.
Odor during cooking	Food residue, new product smell.	Clean thoroughly, use 'Cleaning' function. New product smell will dissipate.
Keep warm function not working	Power interruption, setting error.	Check power connection, ensure keep warm mode is selected.

For issues not listed here, please consult the comprehensive troubleshooting section in the full user manual or contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Zojirushi

Feature	Specification
Model Number	NW-MA07-BA
Capacity	0.72 Liters (4 cups)
Product Dimensions (D x W x H)	30.5 cm x 23 cm x 20.5 cm
Item Weight	5.5 kg
Color	Black
Power Source	Corded Electric
Voltage	100 Volts
Power Consumption	1140 W
Care Instructions	Hand Wash
Included Accessories	Instruction Manual, Measuring Cup, Rice Scoop

9. WARRANTY AND SUPPORT

Your Zojirushi NW-MA07-BA Pressure IH Rice Cooker comes with a manufacturer's warranty. Please refer to the warranty card included in the packaging for specific terms and conditions. Keep your proof of purchase for warranty claims.

For product support, spare parts, or service inquiries, please contact Zojirushi customer service. Contact information can be found on the official Zojirushi website or in the warranty documentation.

Reminder: The manufacturer's warranty and after-sales service are not applicable if the product is used outside of Japan (100V domestic use only).