

[Manuals.plus](#) /

› [XP-PEN](#) /

› XPPen Artist Pro 16 Drawing Display User Manual

## XP-PEN Artist Pro 16

# XPPen Artist Pro 16 Drawing Display User Manual

Model: Artist Pro 16

## 1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your XPPen Artist Pro 16 Drawing Display. Please read this manual thoroughly to ensure proper use and to maximize the performance of your device.



The XPPen Artist Pro 16 drawing display, featuring a large screen, customizable shortcut keys, and the X3 Elite Plus Stylus.

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your product package:

- XPPen Artist Pro 16 Drawing Display
- X3 Elite Plus Stylus
- 3-in-1 USB Cable
- Extension Cord
- Power Adapter
- Pen Case (including 9 replacement pen nibs)
- Cleaning Cloth
- Black Drawing Glove
- Quick Guide



An overview of all items included in the product package: the Artist Pro 16 display, X3 Elite Plus Stylus, 3-in-1 USB cable, extension cord, power adapter, pen case with nibs, cleaning cloth, drawing glove, and quick guide.

### 3. PRODUCT FEATURES

#### 3.1. X3 Elite Plus Stylus

The Artist Pro 16 is equipped with the X3 Elite Plus Stylus, featuring advanced chip technology for enhanced performance. It offers 8192 levels of pressure sensitivity and supports a 60-degree tilt function, providing a natural and precise drawing experience. The stylus is battery-free and includes a digital eraser for convenience.

# X3 Elite Plus Stylus



**10-fold\*** increase in sensitivity  
**3 grams\*** initial activation force



**0.6mm\*** retraction distance  
**1/2\*** of our previous stylus



 
**8192** pressure sensitivity levels



**60°** tilt function



Digital eraser

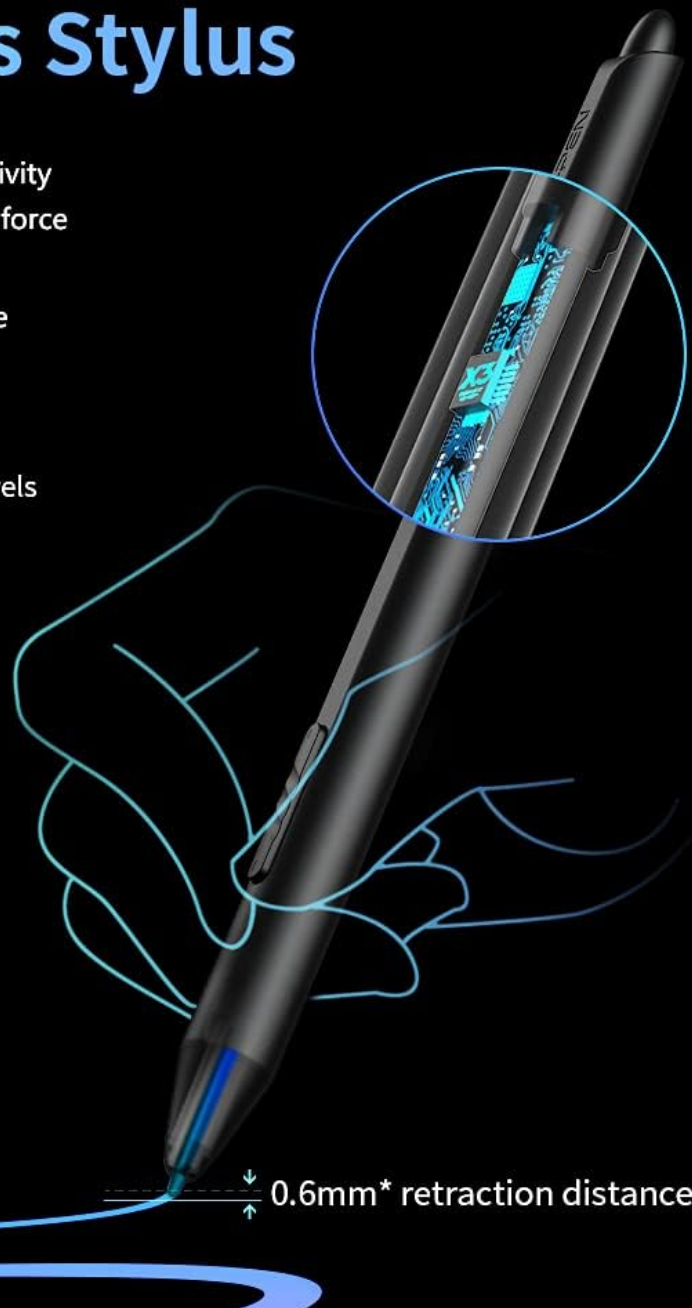

**0.6mm\*** retraction distance

This image illustrates the key features of the X3 Elite Plus Stylus, highlighting its 8192 pressure sensitivity levels, 60-degree tilt function, and digital eraser.

## 3.2. Display Technology

The 15.4-inch Full HD (1920x1080) IPS display features full-laminated technology, which seamlessly combines the glass and the screen to minimize parallax. An anti-glare film is applied to reduce reflections and eye strain, providing a clear and comfortable viewing experience. The display offers a wide color gamut (94% NTSC, 133% sRGB) and a 178-degree visual angle for vibrant and accurate colors.

# Full Lamination & Anti-glare Screen



Other Display



Anti-glare display



The full-laminated and anti-glare screen technology minimizes parallax and reduces reflections for a more natural drawing experience.



99% Adobe RGB



94% NTSC



133% sRGB



178° Viewing Angle


The 15.4-inch IPS display offers a wide color gamut (94% NTSC, 133% sRGB) and a 178-degree viewing angle for vibrant and consistent colors.

### 3.3. Customizable Controls

The Artist Pro 16 features eight fully customizable shortcut keys and two innovative dual dials. These controls can be programmed to suit your preferred workflow, allowing for quick access to functions such as zooming, scrolling, and tool selection.

# Dual Dials
 
## 8 Customizable Shortcut Keys

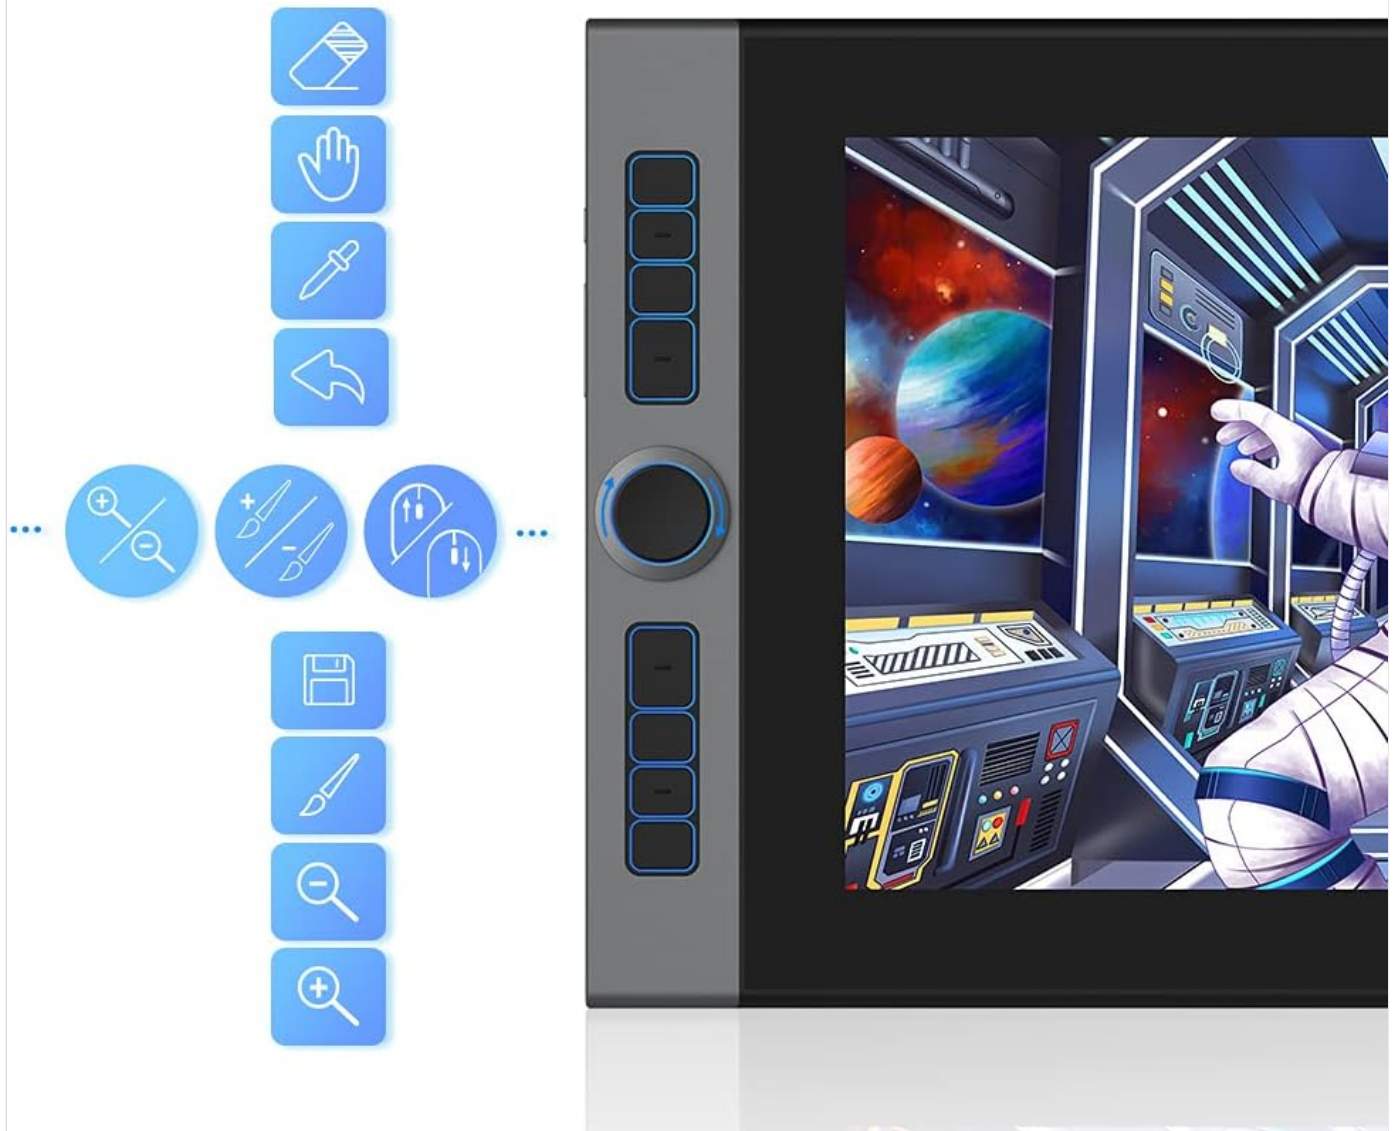


The Artist Pro 16 features eight customizable shortcut keys and two innovative dials for efficient workflow and quick adjustments.

## 4. SETUP GUIDE
 
### 4.1. Connecting the Device

1. Connect the 3-in-1 USB cable to the Artist Pro 16 display's USB-C port.
2. Connect the HDMI and USB-A ends of the 3-in-1 cable to your computer.
3. If additional power is required, connect the power adapter to the extension cord, and then to the 3-in-1 USB cable. Plug the power adapter into a wall outlet.
4. Press the power button on the side of the display to turn it on.

# Easy to Connect via 3-in-1 Cable

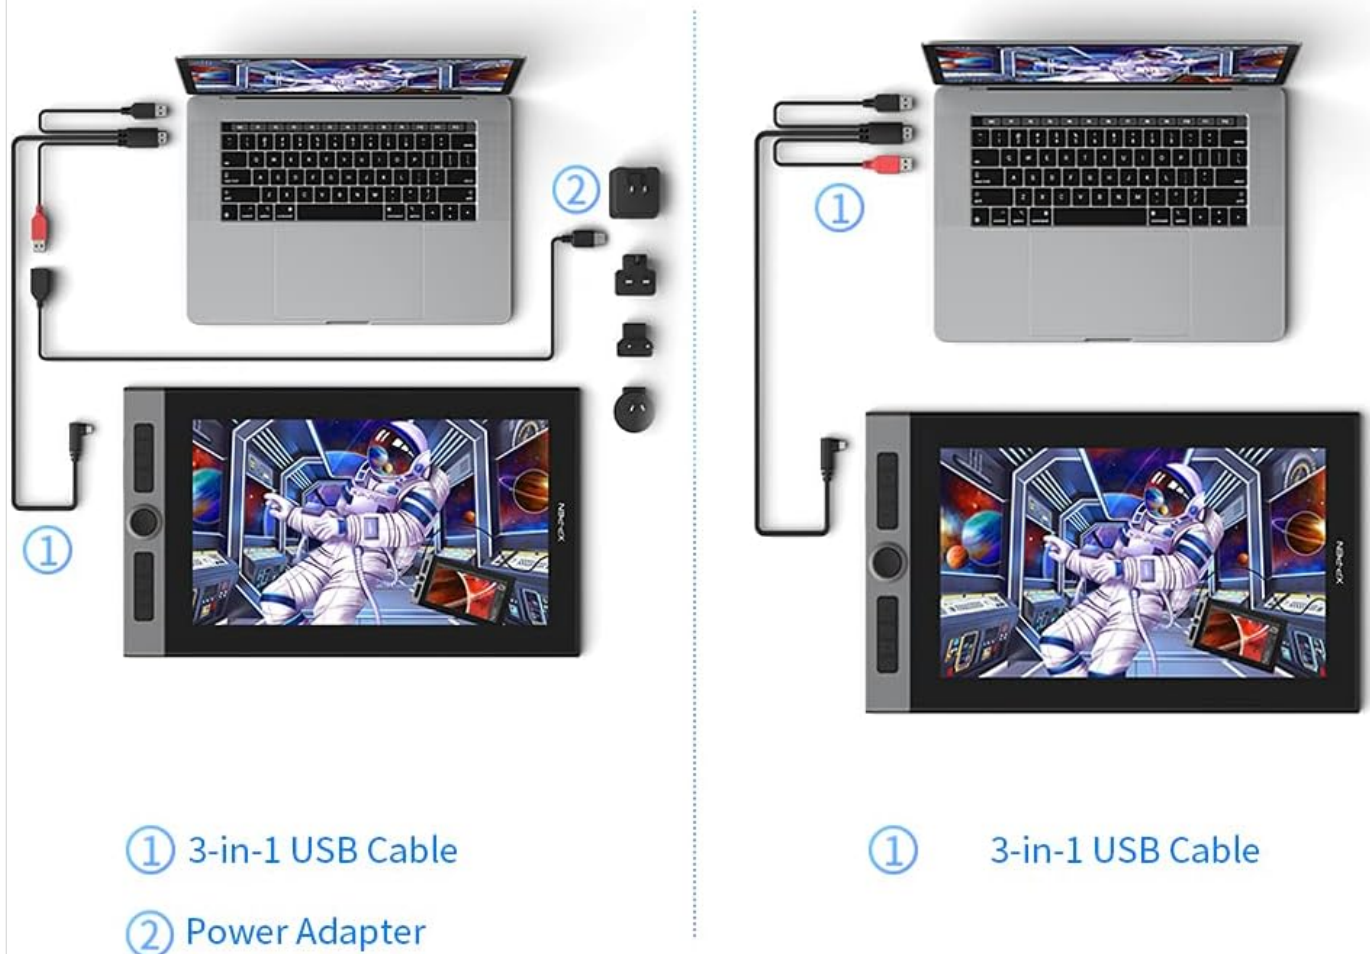

Connection methods for the Artist Pro 16, showing how to connect to a computer using the included 3-in-1 USB cable and power adapter.

## 4.2. Driver Installation

1. Before installing new drivers, uninstall any existing tablet drivers from your computer.
2. Download the latest driver for the Artist Pro 16 from the official XPPen website ([www.xp-pen.com](http://www.xp-pen.com)).
3. Run the installer and follow the on-screen instructions.
4. Restart your computer after installation is complete.

## 4.3. Initial Configuration

After driver installation, open the XPPen driver software. Here you can:

- Calibrate the screen to align the stylus tip with the cursor.
- Customize the functions of the shortcut keys and dual dials.
- Adjust pressure sensitivity settings for the stylus.

## 5. OPERATING INSTRUCTIONS

### 5.1. Basic Drawing

Once connected and drivers are installed, open your preferred drawing software. The Artist Pro 16 will function as an

extended display and input device. Use the X3 Elite Plus Stylus directly on the display surface to draw, paint, and navigate.

 
## 5.2. Using Shortcut Keys and Dials

The eight shortcut keys and two dials on the side of the display can be customized through the XPPen driver software. Assign frequently used functions (e.g., undo, zoom, brush size) to these controls for a more efficient workflow.

## 5.3. Software Compatibility

The XPPen Artist Pro 16 is compatible with a wide range of operating systems and creative software:

- **Operating Systems:** Windows 7/8/10 (or later), Mac OS X 10.10 (or later), Chrome OS 88 (or later), Linux.
- **Software:** Adobe Photoshop, Illustrator, SAI, CDR, GIMP, Krita, MediBang, FireAlpaca, Blender3D, and many others.

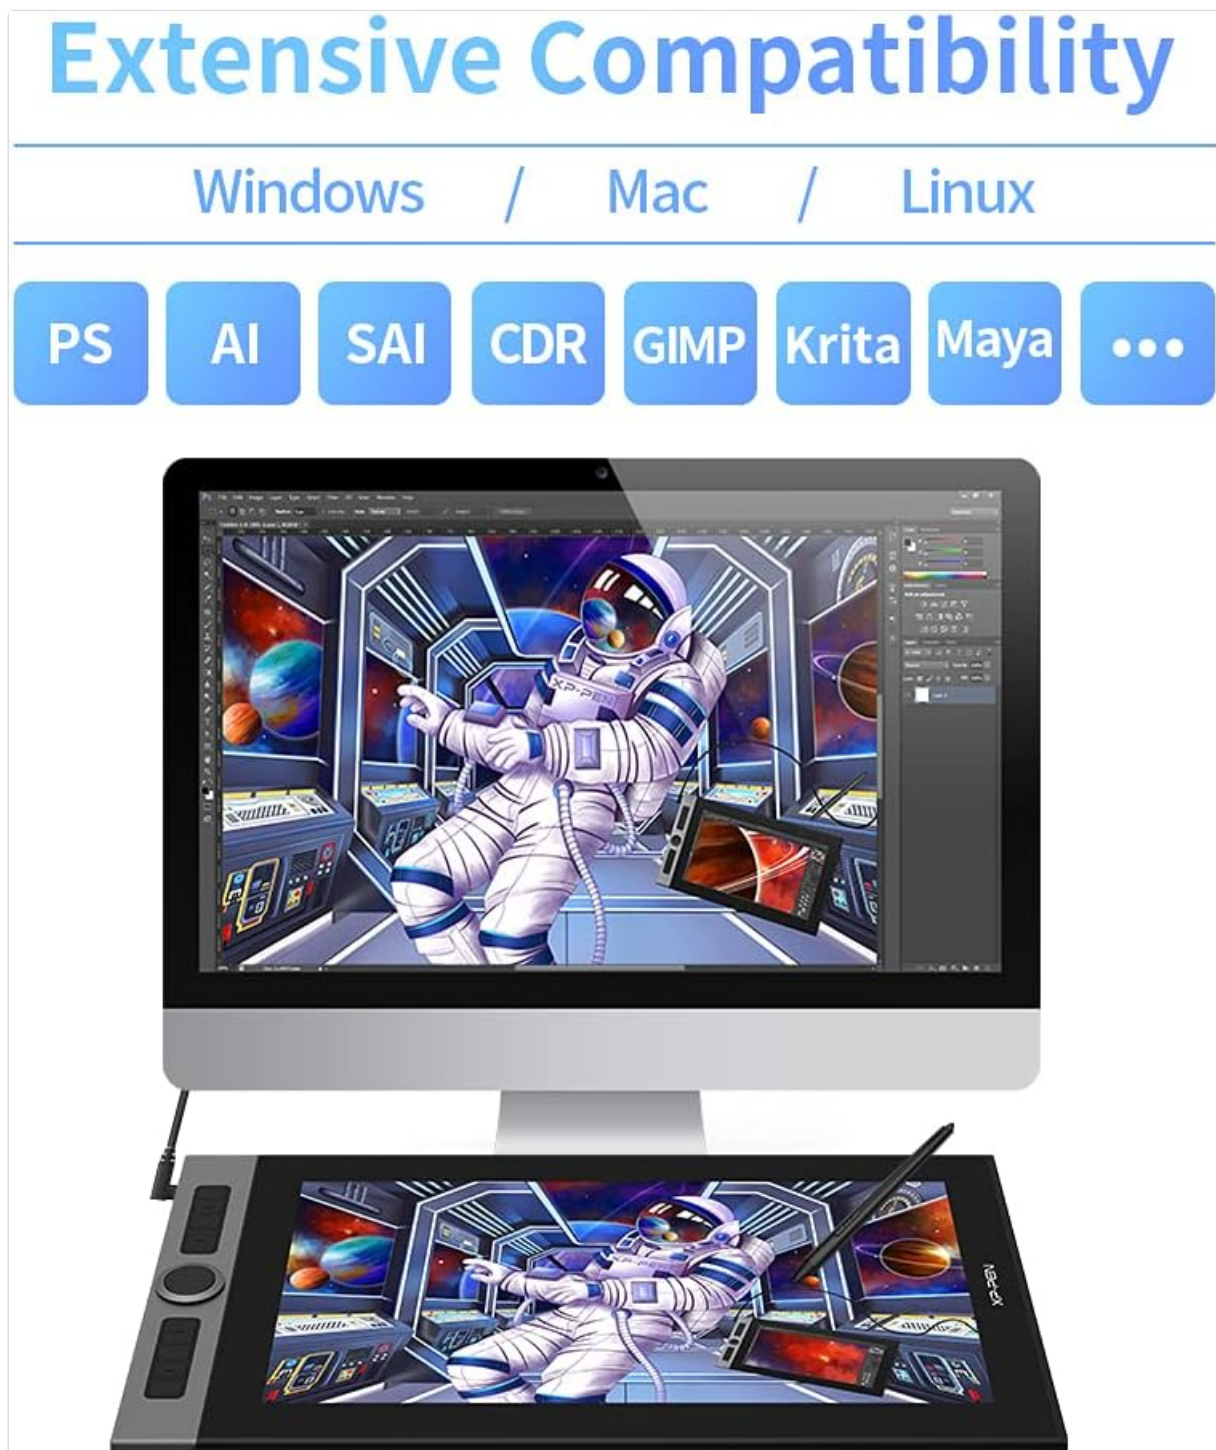

The Artist Pro 16 is compatible with Windows, Mac, Linux, and Chrome OS, supporting popular creative software like Photoshop, Illustrator,

## 6. MAINTENANCE

### 6.1. Cleaning the Display

Use the provided cleaning cloth or a soft, lint-free cloth to gently wipe the display surface. Do not use harsh chemicals, abrasive cleaners, or excessive moisture, as this may damage the screen or anti-glare film.

### 6.2. Replacing Stylus Nibs

The X3 Elite Plus Stylus comes with 9 replacement nibs. When the stylus nib wears down, use the nib removal tool (usually found in the pen case) to carefully pull out the old nib and insert a new one. Ensure the new nib is fully seated.

## 7. TROUBLESHOOTING

- No Display/Signal:**  
Ensure all cables (HDMI, USB, Power) are securely connected. Check if your computer's display settings are configured to extend or duplicate the display. Try restarting both the tablet and your computer.
- Stylus Not Working/Inaccurate:**  
Verify that the drivers are correctly installed and updated to the latest version. Re-calibrate the screen through the XPPen driver software. Check for any physical damage to the stylus or if the nib needs replacement.
- Driver Issues:**  
Completely uninstall existing tablet drivers, restart your computer, then download and install the latest drivers from the official XPPen website. Ensure no other tablet drivers are running simultaneously.
- Display Flickering/Lines:**  
Check cable connections. Ensure your computer's graphics drivers are up to date. If using as a secondary display, ensure display settings are correctly configured. Contact support if the issue persists.
- Shortcut Keys/Dials Not Responding:**  
Open the XPPen driver software and ensure the keys and dials are properly configured. Test with different applications.

## 8. SPECIFICATIONS

| Feature                        | Detail                                                                          |
|--------------------------------|---------------------------------------------------------------------------------|
| Product Dimensions             | 10.1 x 17.45 x 0.04 inches                                                      |
| Item Weight                    | 6.49 pounds                                                                     |
| Model Number                   | Artist Pro 16                                                                   |
| Brand                          | XP-PEN                                                                          |
| Connectivity Technology        | HDMI, USB                                                                       |
| Pressure Sensitivity           | 8192 Levels                                                                     |
| Operating System Compatibility | Windows 7 (or later), Mac OS X 10.10 (or later), Chrome OS 88 (or later), Linux |
| Visible Screen Diagonal        | 16 inches / 40 cm                                                               |

Manufacturer

XP PEN



- ① Security slot    ② USB-C port    ③ Power key    ④ Brightness up/down

This diagram provides the physical dimensions of the Artist Pro 16 and indicates the location of the USB-C port, power key, and brightness controls.

## 9. WARRANTY AND SUPPORT

For warranty information, technical support, driver downloads, and frequently asked questions, please visit the official XPPen website at [www.xp-pen.com](http://www.xp-pen.com). XPPen provides friendly customer service to assist with any product-related inquiries.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**