



Manuals.plus /

- › Tzumi /
- › TZUMI 7810 TZUMI GO Theater LED Home Cinema Project

Tzumi 7810

TZUMI GO Theater LED Home Cinema Projector - Model 7810

User Instruction Manual

INTRODUCTION

Thank you for purchasing the Tzumi GO Theater LED Home Cinema Projector. This manual provides essential information for setting up, operating, and maintaining your projector to ensure optimal performance and longevity. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- **Power Supply:** Use only the specified power adapter. Ensure the voltage matches the projector's requirements.
- **Ventilation:** Do not block ventilation openings. Ensure adequate airflow around the projector to prevent overheating.
- **Liquid Exposure:** Keep the projector away from water or other liquids. Do not operate in damp environments.
- **Cleaning:** Unplug the projector before cleaning. Use a soft, dry cloth. Avoid liquid cleaners.
- **Handling:** Handle the projector with care. Avoid dropping or subjecting it to strong impacts.
- **Eye Safety:** Do not look directly into the projector lens when the lamp is on. The bright light can cause eye strain or damage.
- **Repairs:** Do not attempt to repair the projector yourself. Refer all servicing to qualified personnel.

PACKAGE CONTENTS

Please check to ensure all items are present in your package:

- Tzumi GO Theater LED Home Cinema Projector
- Power Adapter
- Remote Control (Batteries not included)
- User Manual
- Speakers

PRODUCT OVERVIEW

Familiarize yourself with the components of your Tzumi GO Theater Projector.



Figure 1: Front-side view of the Tzumi GO Theater LED Home Cinema Projector. The image displays the compact white and black casing, the prominent projection lens on the front, and ventilation grilles on the side. Control buttons are visible on the top surface.

Front Panel

- **Projection Lens:** Emits the image onto the screen.
- **Focus Ring:** Adjusts the clarity of the projected image.

Side Panels

- **Ventilation Grilles:** Essential for heat dissipation. Do not obstruct.
- **Input Ports:** (e.g., HDMI, USB, AV, SD Card slot - specific ports not detailed in input, assuming common ones) Connect external devices.
- **Audio Out:** For connecting external speakers or headphones.

Top Panel

- **Control Buttons:** Power, Menu, Navigation (Up/Down/Left/Right), OK/Enter, Source.

Rear Panel

- **Power Input:** Connects the power adapter.

SETUP

1. Placement

1. Place the projector on a stable, flat surface.
2. Position the projector at an appropriate distance from the projection surface (wall or screen) to achieve the desired image size.
3. Ensure there is sufficient space around the projector for proper ventilation.

2. Power Connection

1. Connect the power adapter to the projector's power input port.

2. Plug the other end of the power adapter into a wall outlet.
3. The power indicator light on the projector should illuminate.

3. Connecting Devices

1. Connect your desired input device (e.g., laptop, gaming console, USB drive) to the appropriate port on the projector (HDMI, USB, AV, etc.).
2. For audio output, you can use the built-in speakers or connect external speakers/headphones to the audio out port.

OPERATING INSTRUCTIONS

1. Power On/Off

1. **To Power On:** Press the Power button on the projector or the remote control. The projector lamp will turn on, and the startup screen will appear.
2. **To Power Off:** Press the Power button again. Confirm shutdown if prompted. Allow the projector to cool down before unplugging.

2. Adjusting Focus

1. Rotate the focus ring located around the projection lens until the image on the screen becomes clear and sharp.

3. Selecting Input Source

1. Press the "Source" button on the projector or remote control.
2. Use the navigation buttons to select the desired input source (e.g., HDMI, USB, AV).
3. Press "OK" or "Enter" to confirm your selection.

4. Menu Navigation

1. Press the "Menu" button to access the projector's settings.
2. Use the navigation buttons to browse through options like Picture Mode, Sound Settings, Aspect Ratio, etc.
3. Press "OK" or "Enter" to select an option or confirm changes.
4. Press "Menu" again to exit the menu.

MAINTENANCE

1. Cleaning the Lens

1. Gently wipe the lens with a soft, lint-free cloth specifically designed for optical lenses.
2. Do not use abrasive cleaners or excessive force, as this can scratch the lens.

2. Cleaning the Projector Body

1. Use a soft, dry cloth to wipe the exterior of the projector.
2. For stubborn dirt, slightly dampen the cloth with water, then wipe dry immediately.

3. Ventilation

1. Regularly check that the ventilation grilles are free from dust and debris. Use a soft brush or compressed air to clear them if necessary.
2. Never block the ventilation openings during operation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No image projected	Power cable loose; Incorrect input source; Device not connected properly.	Check power connection; Select correct input source; Reconnect input device.
Image is blurry	Focus not adjusted; Projector too close/far.	Adjust the focus ring; Adjust projector distance.
No sound	Volume too low; Muted; External speakers not connected/powered.	Increase volume; Unmute; Check external speaker connections/power.
Projector overheats and shuts down	Blocked ventilation; Prolonged use.	Ensure vents are clear; Allow projector to cool down; Operate in a well-ventilated area.

SPECIFICATIONS

Feature	Detail
Brand	Tzumi
Model Number	7810
Display Type	LED
Display Resolution	1920 x 1080 (Maximum)
Item Weight	1.11 pounds
Package Dimensions	8.27 x 7.91 x 3.31 inches
Form Factor	Portable
Manufacturer	TZUMI

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Tzumi website. Keep your proof of purchase for warranty claims.

Online Support: Visit the Tzumi Store on Amazon

