

[Manuals.plus](#) /

› [POLAMD](#) /

› POLAMD Electric Nail Drill and Care Kit Instruction Manual

POLAMD POLAMD-01

POLAMD Electric Nail Drill and Care Kit Instruction Manual

MODEL: POLAMD-01

Introduction

This manual provides detailed instructions for the safe and effective use of your POLAMD Electric Nail Drill and Care Kit. Please read this manual thoroughly before first use and keep it for future reference.

Product Overview

The POLAMD Electric Nail Drill is a versatile tool designed for comprehensive nail care, including manicure, pedicure, nail grinding, cuticle removal, and gel nail removal. It features a portable, cordless design with a powerful motor and multiple speed settings.

Package Contents:

- Electric Nail Drill Unit x 1
- Dust Cap x 1
- Type-C USB Cable x 1
- Nail Drill Attachments x 5 (various types for different functions)

The device also includes an LED light for enhanced visibility during use.



Image showing the POLAMD Electric Nail Drill unit along with its various interchangeable drill bits and a dust cap. The main unit is white with rose gold accents.



An image illustrating key features of the nail drill, including 5-speed adjustment, 2000mAh battery, LED light, 2 hours continuous operation, and 5 nail attachments.

Your browser does not support the video tag.

A video providing a general introduction to the nail machine and its capabilities.

Setup

Charging the Device:

Your product's battery may be very low upon delivery. Please charge it before initial use. We recommend using a slow charge (5V/1A or 5V/2A adapter) to prevent battery damage from rapid charging.

1. Connect the Type-C USB cable to the charging port at the bottom of the device.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included).
3. The indicator light will flash during charging and remain solid when fully charged.

充電式バッテリー コードレス操作 携帯便利

頻繁な充電から解放され、1日出かける場合でもバッテリー切れの心配をせずに使用できます。



A close-up image showing the Type-C USB cable connected to the charging port of the POLAMD Electric Nail Drill. The image highlights the charging process.

Attaching and Removing Drill Bits:

To avoid excessive noise and vibration, ensure the drill bit is properly inserted and secured.

1. Twist the drill bit slightly before insertion.
2. Insert the drill bit firmly into the device's head.
3. Ensure a tight and secure fit between the drill bit and the device.
4. To remove, pull the bit upwards firmly.

ご注意ください！

大きな騒音や振動を避けるために、爪ドリルが脱落したり、挿入が不適切な場合は、必ず以下の正しい手順に従って操作してください。

- ① 初めて使用する前に爪ドリルをねじります。
- ② 爪ドリルを装置に挿入します。
- ③ 爪ドリルと設備の緊密な協力を確保します。



①



②



③



使用中は非常に静かで振動が少ないです
研削ヘッドは強力なロックング力で**4200rpm/分**回転可能。

An image demonstrating the correct and incorrect way to insert a drill bit, emphasizing the importance of a secure fit to prevent vibration and noise.

様々な場所に活躍


USB充電式で1回の満充電で、継続作業時間約2時間の使用が可能なので、コンパクトでカバンに簡単に収納でき、外出や旅行や出張の時、使いたいときにはとても便利です。



An image displaying the five different nail drill attachments and illustrating the process of inserting a bit into the main unit.

Operating Instructions

Device Controls:

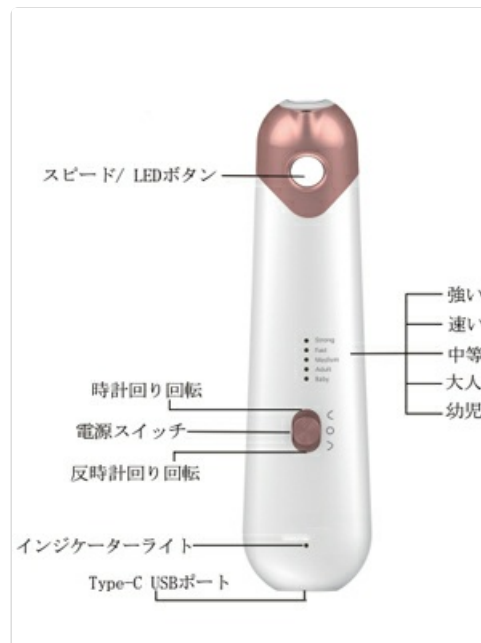


A diagram labeling the parts of the nail drill, including the speed/LED button, rotation direction switch, power switch, indicator lights, and Type-C USB port.

Power On/Off and Speed Adjustment:

The device features 5-stage speed adjustment, with a maximum rotation speed of 42,000 RPM.

1. **Power On:** Slide the power switch (located at the bottom of the device) upwards. Then, press the round button on the top to activate the drill.
2. **Speed Adjustment:** Press the round button repeatedly to cycle through the 5 speed settings: Baby, Adult, Medium, Fast, Strong. Corresponding indicator lights will illuminate.
3. **Power Off:** Long press the round button to turn off the device.

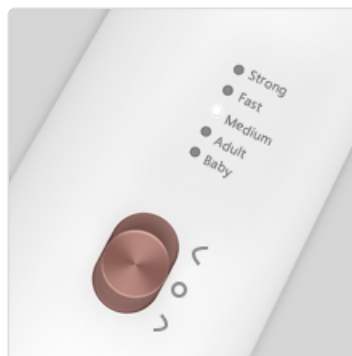

A close-up of the device's speed indicator lights, showing settings from 'Baby' to 'Strong'.

Rotation Direction:

The device supports both forward (clockwise) and reverse (counter-clockwise) rotation, making it comfortable for both left and right-handed users.

- Use the rotation direction switch (located below the round button) to select the desired direction.



An image illustrating the reversible rotation feature of the drill bit.

Using the LED Light:

The integrated LED light provides illumination for better visibility during use, especially in dimly lit areas.

- The LED light automatically turns on when the device is powered on.



A close-up image showing the LED light illuminating the area around the drill bit.

Application Examples:

- **Manicure/Pedicure:** Use appropriate bits for shaping, filing, and polishing nails.
- **Cuticle Care:** Gently push back and remove excess cuticles.
- **Callus Removal:** Effectively remove hardened skin from feet.
- **Gel Nail Removal:** Carefully grind down gel polish layers.



A hand holding the nail drill, using a bit to shape a fingernail.



A hand holding the nail drill, using a bit to smooth the skin on a foot.



A hand holding the nail drill, using a bit for cuticle care.



A hand holding the nail drill, using a bit to refine the edge of a nail.

Your browser does not support the video tag.

A video demonstrating the use of a nail drill for gel nail removal and cuticle care, supervised by a nailist YouTuber.

Your browser does not support the video tag.

A video showcasing the cordless operation and ease of use of the nail machine, including bit attachment and speed adjustment.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your nail drill.

- **Cleaning:** After each use, remove the drill bit and gently wipe the device and bits with a disinfectant wipe or a soft, dry cloth. Do not wash the main unit or bits with water.
- **Storage:** Store the device and its accessories in a clean, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid completely draining the battery frequently. Charge the device when the battery indicator is low.

Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or device not activated.	Charge the device fully. Ensure the power switch is slid upwards before pressing the power button.
Excessive vibration or noise.	Drill bit not properly inserted or damaged.	Ensure the drill bit is fully and securely inserted. Replace damaged bits.
Device stops during use.	Overheating due to prolonged use or low battery.	Allow the device to cool down for a few minutes. Recharge the battery if low. Avoid continuous use for more than 20 minutes.

Specifications

Feature	Detail
Product Dimensions	15.8 x 4.1 x 3.3 cm
Product Weight	156 g
Battery Capacity	2000mAh Lithium Polymer
Charging Type	USB Type-C
Voltage	5 Volts
Speed Settings	5 levels (Baby, Adult, Medium, Fast, Strong)
Max Rotation Speed	42,000 RPM
Continuous Operation Time	Approx. 2 hours (after full charge)
Material	Aluminum
Model Number	POLAMD-01

Safety Information

- Always ensure the device is turned off before changing drill bits.
- Do not use the device on damaged or infected nails or skin. Consult a medical professional if you have any concerns.
- Keep out of reach of children.
- Avoid continuous use for more than 20 minutes to prevent motor overheating. Allow the device to cool down between prolonged uses.
- Use only the provided or recommended charging cable and adapter (5V/1A or 5V/2A).
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.
- Protect the device from water and moisture.

Warranty and Support

For warranty information, returns, refunds, or exchanges, please refer to the purchase platform's policies or contact

POLAMD customer support directly. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question