

## LIGE LG8932

# LIGE Men's Multifunction Quartz Chronograph Watch

Model: LG8932

## INTRODUCTION

This manual provides instructions for the proper use and maintenance of your LIGE LG8932 Men's Multifunction Quartz Chronograph Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

## SAFETY INFORMATION

To prevent damage and ensure safe operation, please observe the following:

- Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Do not operate the crown or pushers while the watch is wet, especially when submerged in water, to prevent water ingress.
- Keep the watch away from strong magnetic fields, as this can affect the accuracy of the quartz movement.
- Avoid dropping the watch or subjecting it to strong impacts.
- Do not attempt to open the watch case or replace the battery yourself, as this may void the warranty and damage the watch.

## PRODUCT OVERVIEW

The LIGE LG8932 watch features a robust stainless steel case, a comfortable leather strap, and a high-hardness mineral glass dial window. It is equipped with a Japanese quartz movement for precise timekeeping and includes chronograph functions and luminous hands for visibility in low light.



Image: Close-up of the LIGE LG8932 watch face, highlighting the detailed design and subdials.

## Components:

- **Main Crown:** Used for setting time and date.
- **Pushers (A & B):** Operate the chronograph functions.
- **Hour, Minute, Second Hands:** Main time display.
- **Chronograph Subdials:** Measure elapsed time (seconds, minutes, hours).
- **24-Hour Subdial:** Displays time in a 24-hour format, often with moon and stars indicator.
- **Date Window:** Displays the current date.
- **Luminous Hands:** Glow in the dark for improved readability.

## SETUP

### Setting the Time:

1. Pull the main crown out to position 2. The second hand will stop.
2. Turn the crown to set the hour and minute hands to the desired time. Ensure the 24-hour subdial aligns correctly for AM/PM.
3. Push the crown back to position 1 to start the watch.

## Setting the Date:

1. Pull the main crown out to position 1.
2. Turn the crown clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
3. Push the crown back to its normal position.

# FUNCTION DESCRIPTION



Image: Function description diagram showing how to adjust the calendar, time, and use the chronograph start/pause/reset buttons.

## OPERATING THE CHRONOGRAPH

The chronograph function allows you to measure elapsed time.

1. **Start:** Press pusher A (top button) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop/Pause:** Press pusher A again to stop or pause the chronograph. The elapsed time will be displayed on the subdials.
3. **Reset:** With the chronograph stopped, press pusher B (bottom button) to reset all chronograph hands to their zero positions.

## MAINTENANCE

### Water Resistance:

This watch is 3 ATM (30 meters) water resistant. This means it is suitable for daily use and can withstand splashes, rain, and hand washing. **It is NOT suitable for bathing, swimming, diving, or any water activities where it might be submerged for extended periods or subjected to high water pressure.**

## 30M WATER-RESISTANT

3ATM Waterproof To Meet Daily Needs

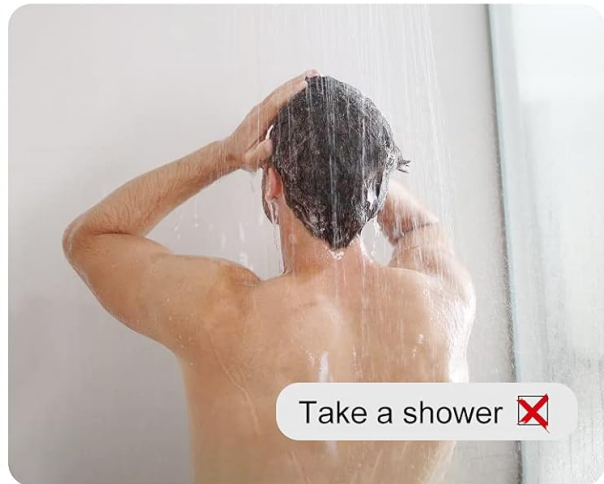
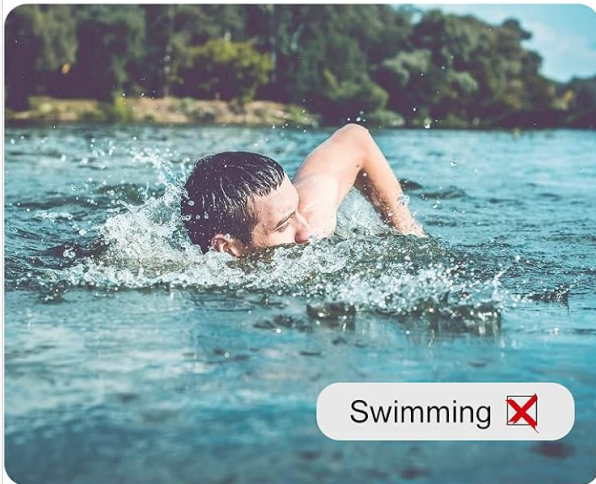
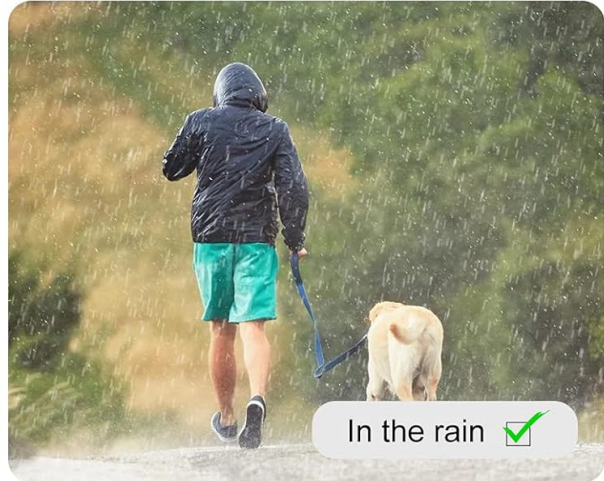


Image: Water resistance guide for 30M watches, indicating suitability for hand washing and rain, but not swimming or showering.

### Cleaning:

Wipe the watch case and strap regularly with a soft, dry cloth to remove dirt and moisture. For leather straps, avoid excessive moisture and direct sunlight to prevent damage and discoloration.

### Battery Replacement:

The watch uses a Japanese quartz movement with a battery life of up to two years. When the battery runs low, the watch may stop or the second hand may move erratically. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

## TROUBLESHOOTING

- **Watch not running:** Check if the crown is pushed in completely. If it is, the battery may need replacement.
- **Incorrect time/date:** Refer to the "Setting the Time" and "Setting the Date" sections.
- **Chronograph hands not resetting to zero:** This may require a chronograph reset procedure, which typically involves pulling the crown out and pressing the pushers in a specific sequence. Consult a watch specialist if the issue persists.
- **Fogging under crystal:** This indicates moisture ingress. Stop using the watch immediately and have it inspected by a professional to prevent further damage.

## SPECIFICATIONS

Feature	Detail
Model Number	LG8932
Movement	Japanese Quartz
Display Type	Analog
Special Features	Chronograph, Luminous Hands, 24-Hour Subdial, Date Display
Water Resistance	30 Meters (3 ATM)
Case Material	Stainless Steel
Band Material	Leather
Dial Diameter	43 mm
Band Width	22 mm
Strap Length	240 mm
Dial Thickness	11.5 mm
Item Weight	36.5 g
Battery Type	1 LR44 battery (included)

# PRODUCT PARAMETERS

LG8932

Dial diameter: 43mm

Band width: 22mm

Strap length: 240mm

Dial thickness: 11.5mm

Weight: 56.5g

Water resistance: 30 meters

Band material: leather strap

Case material: stainless steel case



Original quartz  
movement



Weight:  
56.5g



3ATM



Band length:  
240mm



Dial thickness:  
11.5MM

Image: Product parameters diagram detailing dial diameter, band width, strap length, dial thickness, weight, water resistance, band material, and case material.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact LIGE customer service. Keep your purchase receipt as proof of purchase.