

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Electrolux](#) /

› [Electrolux Handheld Steamer Refine 700 Model E7HS1-4MN User Manual](#)

Electrolux E7HS1-4MN

Electrolux Handheld Steamer Refine 700 User Manual

Model: E7HS1-4MN | Brand: Electrolux

1. INTRODUCTION

The Electrolux Refine 700 Handheld Steamer, model E7HS1-4MN, is designed for refreshing and smoothing wrinkles from garments. This portable and easy-to-use steamer is ready in seconds, eliminating the need for an ironing board. It can be used directly on clothes hanging on a hanger and is suitable for various fabrics including cotton, linen, wool, and synthetics.

2. SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always ensure the voltage matches your power supply.
- Do not immerse the steamer in water or other liquids.
- Keep the appliance out of reach of children.
- Do not touch the hot steam plate or steam with bare hands during operation.
- Only use distilled or demineralized water to prevent mineral buildup.
- Unplug the steamer from the power outlet when not in use, before filling with water, and before cleaning.
- Never direct steam at people or pets.
- Do not operate the steamer if the cord or plug is damaged.

3. PRODUCT OVERVIEW

The Electrolux Refine 700 Handheld Steamer is designed for efficient and convenient garment care. It features an ergonomic handle, a steam-ready indicator, and a removable water tank.



Figure 3.1: Side view of the Electrolux Refine 700 Handheld Steamer.





Figure 3.2: Top view of the steamer, showing the power button and steam indicator.





Figure 3.3: Front view of the steamer, detailing the steam plate.

4. SETUP

Before first use, or after prolonged storage, follow these steps to prepare your steamer:

1. **Unpack:** Remove all packaging materials and inspect the steamer for any damage.
2. **Fill Water Tank:** Detach the water tank from the steamer. Fill it with clean, distilled or demineralized water up to the maximum fill line. Do not overfill.



Figure 4.1: Filling the water tank with water.

3. **Reattach Water Tank:** Securely reattach the filled water tank to the steamer.
4. **Plug In:** Plug the steamer into a suitable power outlet. The indicator light will illuminate, signaling that the steamer is heating up.
5. **Heat Up:** Allow the steamer to heat for a few seconds until the indicator light changes or steam begins to emit.

5. OPERATING INSTRUCTIONS

Follow these steps for effective garment steaming:

1. **Prepare Garment:** Hang the garment on a hanger. Gently pull the fabric taut with one hand.
2. **Steam Application:** Hold the steamer upright and press the steam button. Move the steam plate slowly over the fabric, from top to bottom.



Figure 5.1: Steamer emitting steam for garment refreshing.

3. **Target Wrinkles:** For stubborn wrinkles, hold the steam plate closer to the fabric for a few seconds, ensuring not to touch delicate materials directly.



Figure 5.2: Steaming a dress to remove creases.



Figure 5.3: Using the steamer on a jacket.



Figure 5.4: Detailed view of steaming a jacket.

4. **Finish:** Once steaming is complete, release the steam button and unplug the appliance. Allow the garment to cool and dry before wearing.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your steamer.

- **Empty Water Tank:** After each use, empty any remaining water from the tank to prevent mineral buildup and odors.
- **Cleaning Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling (Monthly):** If you notice reduced steam output or mineral residue, descale the steamer. Fill the water tank with a mixture of 50% white vinegar and 50% water. Run the steamer until half the solution is used, then unplug and let it sit for 30 minutes. Repeat with the remaining solution. Rinse the tank thoroughly with clean water and run with fresh water to clear any vinegar residue.
- **Storage:** Store the steamer in a cool, dry place, ensuring the water tank is empty.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; Steamer not heated; Mineral buildup.	Refill water tank; Allow more time to heat; Perform descaling procedure.
Water leakage	Water tank not properly secured; Overfilled water tank; Condensation.	Ensure tank is securely attached; Do not overfill; This is normal, wipe away excess.
Steamer not turning on	Not plugged in; Power outlet issue; Appliance fault.	Check power connection; Test outlet with another device; Contact customer support.

8. SPECIFICATIONS

Key technical specifications for the Electrolux Refine 700 Handheld Steamer:

Feature	Detail
Brand	Electrolux
Model Number	E7HS1-4MN
Power	1400 Watts
Voltage	230 Volts
Water Tank Capacity	100 Millilitres
Item Weight	800 Grams
Color	Blue
Product Benefit	Wrinkle Removal

9. WARRANTY AND SUPPORT


This Electrolux product comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Electrolux website.

For technical support, spare parts, or service inquiries, please contact Electrolux customer service. Contact details can typically be found on the Electrolux website or in your product documentation.

© 2025 Electrolux. All rights reserved.

Related Documents - E7HS1-4MN

	Electrolux Refine 600 Handheld Garment Steamer: Instruction Manual Comprehensive instruction manual for the Electrolux Refine 600 Handheld Garment Steamer (E6HS1-2EG), covering setup, usage, and care. Includes safety information and customer support details.
---	---

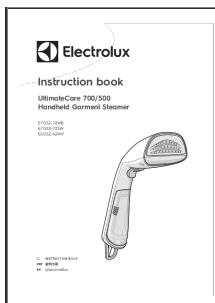


[Electrolux UltimateCare 700/500 Handheld Garment Steamer Instruction Manual](#)

Comprehensive instruction manual for the Electrolux UltimateCare 700/500 Handheld Garment Steamer, covering safety, operation, cleaning, and care. Includes model numbers E7GS2-72WB, E7GS2-72SW, E5GS2-42WP.



[Electrolux LX15002 Handheld Steamer Instruction Manual & User Guide](#)

Comprehensive guide for the Electrolux LX15002 handheld garment steamer. Covers setup, usage, safety precautions, cleaning, and technical specifications for household use.

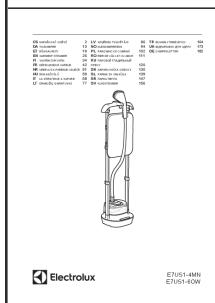


[Napařovač oděvů Electrolux E7US1-4MN E7US1-6OW - Návod k použití](#)

Kompletní návod k použití pro napařovač oděvů Electrolux modely E7US1-4MN a E7US1-6OW. Obsahuje bezpečnostní pokyny, popis produktu, návod k montáži, denní používání, tipy a rady, čištění a údržbu, odstraňování závad a informace o ochraně životního prostředí.



[Electrolux LX-300R Rechargeable Fabric Shaver Instruction Manual](#)

Comprehensive instruction manual for the Electrolux LX-300R Rechargeable Fabric Shaver, covering safety, usage, cleaning, troubleshooting, and warranty information.

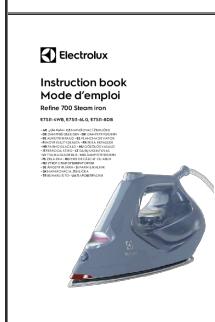

[Electrolux Refine 700 Steam Iron Instruction Manual](#)

User guide and operating instructions for the Electrolux Refine 700 Steam Iron (models E7SI1-4WB, E7SI1-6LG, E7SI1-8DB), covering setup, usage, maintenance, and troubleshooting.