

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tenamic](#) /

› [Tenamic Biometric Fingerprint Safe Box User Manual](#)

Tenamic TC35 Safe Box

Tenamic Biometric Fingerprint Safe Box User Manual

Model: TC35 Safe Box


1. PRODUCT OVERVIEW

The Tenamic Biometric Fingerprint Safe Box is designed to provide secure storage for your valuables. Constructed from solid alloy steel with an anti-corrosion and anti-wear powder coating, it features a pry-resistant door and concealed hinges for enhanced security. This safe offers multiple access methods including biometric fingerprint, electronic combination lock, and emergency key. It also includes an internal induction light and a leather-lined interior to protect contents.



Figure 1: Tenamic Biometric Fingerprint Safe Box (1.41 cuft model)

PRODUCT SIZE

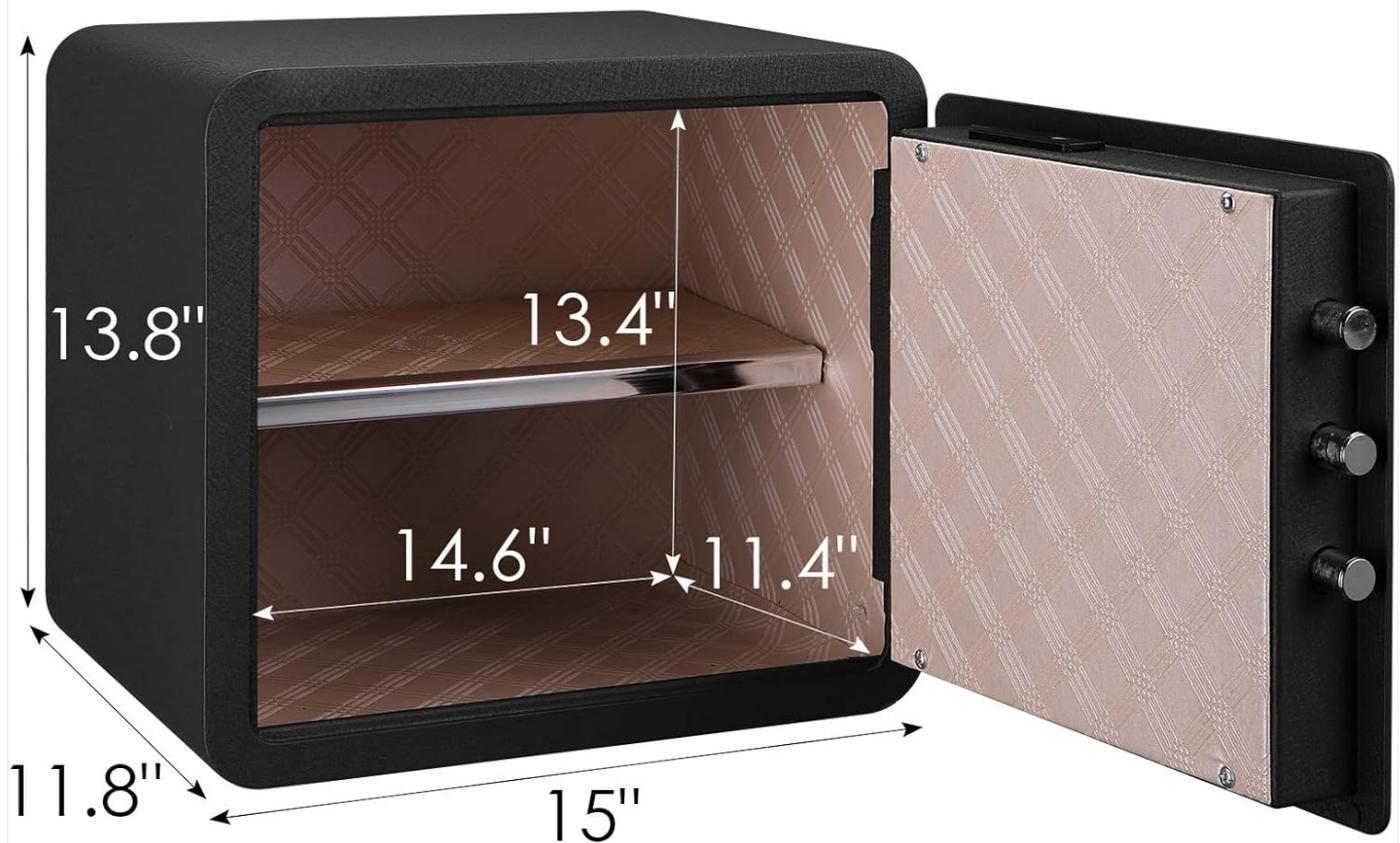

WEIGHT: 30.4 POUNDS

Figure 2: Product Dimensions (Exterior: 15"W x 11.8"D x 13.8"H, Interior: 14.6"W x 11.4"D x 13.4"H)

2. PACKAGE CONTENTS

- 1 x Tenamic Safe Box
- 2 x Emergency Keys
- 2 x Mounting Screws
- 1 x User Manual (this document)
- 1 x External Battery Compartment

3. SETUP

3.1 Initial Opening

Upon first use, the safe can be opened using the emergency key. Locate the keyhole, insert the key, and turn it counter-clockwise while simultaneously turning the knob clockwise to open the door. This method is also used if the batteries are depleted.

Your browser does not support the video tag.

Video 1: Demonstrates opening the safe using the emergency key and setting up fingerprint and password. This video is provided by the seller.

3.2 Battery Installation

The safe requires 4 AA batteries (not included) for the electronic lock system. Open the safe door. Locate the battery compartment on the inside of the door. Insert the batteries, ensuring correct polarity. Close the battery compartment cover.

3.3 Setting Up Fingerprint

1. With the safe door open, press the green button located on the inside of the door.
2. You will hear a prompt: "Please input the fingerprint".
3. Place your finger on the illuminated fingerprint reader.
4. When you hear "Succeed", remove your finger.
5. Repeat steps 3-4 for additional fingerprints (up to 30 can be programmed).

3.4 Setting Up Password

1. With the safe door open, press the red button located on the inside of the door.
2. You will hear a prompt: "Please input first new password".
3. Enter a new password (3-8 digits) using the keypad.
4. Press "#" to confirm.
5. You will hear "Set successfully", indicating the password is set.

3.5 Mounting the Safe

The safe can be fixed to a wall for added security. Use the provided mounting screws. Ensure the mounting surface is strong enough to support the safe's weight and contents. Consult a professional if unsure about installation.

4. OPERATING INSTRUCTIONS

4.1 Opening with Fingerprint

1. Place your registered finger on the fingerprint reader.
2. If successful, the light will turn green, and you will hear a confirmation sound.
3. Turn the knob clockwise to open the door.

4.2 Opening with Password

1. Enter your registered password using the keypad.
2. Press "#" to confirm.
3. If successful, the light will turn green, and you will hear a confirmation sound.
4. Turn the knob clockwise to open the door.

4.3 Emergency Opening (External Battery Pack)

If the internal batteries are exhausted, you can use the external battery pack. Connect the external battery pack to the port on the safe's keypad. This will provide temporary power, allowing you to use your fingerprint or password to open the safe. Replace the internal batteries immediately after opening.

4.4 Alarm System

The safe is equipped with an alarm system. If 5 continuously wrong fingerprint attempts or 3 wrong password entries occur, the alarm will activate for 20 seconds. To stop the alarm, enter the correct fingerprint or password.



Figure 3: Illustration of the safe's alarm system in action.

4.5 Induction Light

The safe features an induction light inside. As soon as the safe door is opened, the light will illuminate automatically and turn off after 30 seconds.



Figure 4: Internal view highlighting the induction light and leather interior.

5. MAINTENANCE

5.1 Battery Replacement

When the battery indicator light flashes or the safe does not respond, it's time to replace the batteries. Use 4 new AA batteries. Ensure the safe is open before replacing batteries to avoid being locked out. If the batteries are completely dead, use the external battery pack or emergency key to open the safe first.

5.2 Cleaning and Care

Wipe the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents. The interior is lined with leather to prevent wear and tear on valuables; keep it dry and free from moisture. Regularly check the door hinges and locking bolts for any obstructions or signs of wear.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with fingerprint/password.	Low batteries; incorrect fingerprint/password; system error.	Use external battery pack or emergency key. Replace batteries. Re-enter fingerprint/password carefully. If problem persists, contact customer service.
Alarm sounds unexpectedly.	Multiple incorrect entries; safe moved or tampered with.	Enter correct fingerprint or password to disarm. Ensure safe is stable and not being disturbed.
Internal light not working.	Low batteries; sensor obstruction.	Replace batteries. Ensure nothing is blocking the light sensor near the door hinge.

7. SPECIFICATIONS

Brand: Tenamic

Model: TC35 Safe Box

Exterior Dimensions: 15"W x 11.8"D x 13.8"H

Interior Dimensions: 14.6"W x 11.4"D x 13.4"H

Capacity: 1.41 Cubic Feet

Material: Alloy Steel

Lock Type: Biometric, Electronic Combination Lock, Key

Color: Black

Item Weight: 24.3 Pounds

Special Features: Alarm System, Biometric Fingerprint, Sensor Light, Anti-Theft, Removable Shelf

Mounting Type: Wall Mount

Power: 4 x AA Batteries (not included)

8. WARRANTY AND SUPPORT

Tenamic is committed to providing quality products and customer satisfaction. For any questions or issues regarding your Tenamic safe box, please contact our after-sales service. We are dedicated to resolving any problems you may encounter.

Refer to the contact information provided with your purchase or visit the official Tenamic website for support details.