

[Manuals.plus](#) /

› [DORTALA](#) /

› DORTALA Floor Gaming Chair AU-HW57991 Instruction Manual

DORTALA AU-HW57991

DORTALA Floor Gaming Chair AU-HW57991 Instruction Manual

Model: AU-HW57991

INTRODUCTION

Thank you for choosing the DORTALA Floor Gaming Chair. This manual provides essential information for the safe and effective use of your new chair. Please read it thoroughly before use and retain it for future reference.

The DORTALA Floor Gaming Chair is designed for comfort and versatility, featuring a 14-position adjustable backrest and a foldable design for easy storage. It is suitable for various activities such as gaming, reading, meditating, or relaxing.



Image: The DORTALA Floor Gaming Chair in black, showcasing its design.

SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the product:

- Always ensure the chair is fully unfolded and locked into your desired position before use.
- Do not exceed the maximum weight limit of 220 lbs (approximately 100 kg).
- Keep fingers and other body parts clear of the folding and adjustment mechanisms to avoid pinching.
- Always follow the instructions for adjusting the chair's position to prevent injury.
- Do not stand on the chair.
- Keep the chair away from open flames or excessive heat sources.
- Ensure the chair is placed on a stable, flat surface.

SETUP

The DORTALA Floor Gaming Chair requires no assembly. It arrives ready for use. To set up your chair:

1. Remove the chair from its packaging.
2. Place the chair on a flat, stable surface.
3. Gently unfold the chair to its upright position. The backrest mechanism will click into place as you adjust it.
4. Adjust the backrest to your desired angle (refer to the "Operating Instructions" section for details on adjustment).



Image: A woman comfortably seated on the DORTALA Floor Gaming Chair, using a laptop, demonstrating a typical use case.

OPERATING INSTRUCTIONS

Adjusting the Backrest (14 Positions)

The DORTALA Floor Gaming Chair features a 14-position adjustable backrest, allowing you to find the most comfortable angle for various activities, from 90 degrees upright to 180 degrees flat.

1. To recline the backrest: Gently push the backrest forward until you hear a click. Then, slowly push it backward to the desired angle. The mechanism will lock into each of the 14 positions.
2. To bring the backrest upright: Push the backrest fully forward until it clicks into the most upright position. Then, you can adjust it backward to your preferred angle.
3. To lay the chair completely flat: Push the backrest fully forward past the upright position until it releases, then lay it flat.

Rückenlehne ist in **14** Stufen verstellbar



Platzsparend auf engstem Raum zu verstauen



Image: A diagram illustrating the 14-step backrest adjustment, ranging from 90 to 180 degrees, with an arrow indicating the adjustment motion.

Folding for Storage

The chair can be fully folded for compact storage, making it ideal for small spaces or transport.

1. Ensure the backrest is in the fully flat position (180 degrees).
2. Fold the backrest forward onto the seat portion. The chair will become a compact, flat unit.
3. For storage under a bed or tall couch, ensure it is completely flat.



Image: A diagram showing the dimensions of the DORTALA Floor Gaming Chair when upright and when folded flat, indicating its compact storage capability.

MAINTENANCE

To ensure the longevity and appearance of your DORTALA Floor Gaming Chair, follow these maintenance guidelines:

- **Cleaning:** Wipe clean with a damp cloth. For tougher stains, use a mild soap solution and then wipe with a clean, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Regular Inspection:** Periodically check the adjustment mechanism and frame for any signs of wear or damage.
- **Storage:** When not in use for extended periods, store the chair in a clean, dry place, preferably folded to protect the fabric and mechanism.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading of the fabric.



Elastisches Gefühl



Rutschfester Boden



Atmungsaktiv



Weich



Kein Pilling



Image: Close-up details of the chair's features, including the elastic feel of the fabric, its breathability, softness, anti-pilling properties, and the non-slip bottom.

TROUBLESHOOTING

If you encounter any issues with your DORTALA Floor Gaming Chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Backrest does not adjust or lock into position.	Mechanism might be stuck or not fully engaged.	Push the backrest fully forward until it clicks, then slowly recline it to engage the locking positions. Ensure no obstructions are present.
Chair feels unstable.	Not placed on a flat surface or backrest not fully locked.	Ensure the chair is on a level floor. Verify the backrest is securely locked in an adjustment position.
Difficulty folding the chair flat.	Backrest not pushed fully forward to release the mechanism.	Push the backrest completely forward until it passes the upright position and releases, then lay it flat.

SPECIFICATIONS

Feature	Detail
Model Number	AU-HW57991
Brand	DORTALA
Color	Black
Material	Iron, Foam, Coral Velvet
Frame Material	Alloy Steel
Fill Material	Memory Foam
Product Dimensions (D x W x H)	21.5" x 22" x 21.5" (54.6 cm x 55.9 cm x 54.6 cm)
Item Weight	10 Pounds (4.5 kg)
Maximum Weight Recommendation	220 Pounds (100 kg)
Reclining Position Count	14
Assembly Required	No
Care Instructions	Wipe Clean



Image: An illustration detailing the comfort and safety aspects of the chair, including its stable metal tube structure, high-density sponge filling, and anti-static coral fleece cover.

WARRANTY AND SUPPORT

For warranty information or product support, please contact DORTALA customer service. Details can typically be found on the DORTALA official website or through your purchase platform.

When contacting support, please have your model number (AU-HW57991) and proof of purchase readily available.

DORTALA Official Website: [Visit DORTALA Store on Amazon](#)