

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Yimaut](#) /

› [Yimaut Remote Control Compatible with All Hisense Roku TV, Universal for Hisense 32" 40" 43" 50" 55" 58" 65" 70" 75" 85" Roku Built-in TV with Remote Cover and Wrist Strap \(Glow Pink\)](#)

## Yimaut HU-RCRUS-20

# Yimaut Remote Control User Manual

Model: HU-RCRUS-20

[Introduction](#)

[Package Contents](#)

[Setup](#)

[Operation](#)

[Compatibility](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

## 1. INTRODUCTION

This user manual provides detailed instructions for the Yimaut Universal Remote Control, designed for seamless compatibility with various Hisense Roku TV models. This remote offers a straightforward, plug-and-play experience, eliminating the need for complex setup or programming. It includes a protective glow-in-the-dark cover and a wrist strap for enhanced usability and loss prevention.

## 2. PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- 1 x Yimaut Remote Control for Hisense Roku TV
- 1 x Remote Control Case (Glow Pink)
- 1 x Wrist Strap

*Note: AAA batteries are not included and must be purchased separately.*



Image: The Yimaut remote control, shown with its glow pink silicone protective cover and an attached wrist strap. The remote features standard Roku TV buttons including navigation, playback, and dedicated streaming service shortcuts.

### 3. SETUP GUIDE

The Yimaut Remote Control is designed for immediate use without any programming. Follow these simple steps to begin using your new remote:

1. **Insert Batteries:** Locate the battery compartment on the back of the remote control. Open the cover and insert two AAA batteries (not included), ensuring correct polarity (+/-).
2. **Close Battery Compartment:** Securely close the battery compartment cover.
3. **Attach Silicone Cover:** Carefully slide the glow pink silicone cover onto the remote control. Ensure all buttons are properly aligned and accessible.
4. **Attach Wrist Strap:** Thread the wrist strap through the designated loop on the silicone cover. This helps prevent accidental drops and makes the remote easier to carry.
5. **Ready for Use:** Your remote control is now ready to operate your Hisense Roku TV. Point the remote towards your TV and begin using it.

*No additional setup or pairing is required for this standard IR remote.*

## 4. OPERATING INSTRUCTIONS

---

The Yimaut Remote Control provides intuitive access to your Hisense Roku TV's functions. Below is a guide to its key features and buttons:

### Button Functions:

- **Power Button:** Turns the TV on or off.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus, select items, and confirm choices.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Returns to the Roku TV home screen.
- **Volume Up/Down:** Adjusts the TV's volume.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Playback Controls (Rewind, Play/Pause, Fast Forward):** Controls media playback.
- **Star (\*) Button:** Accesses options or settings within certain apps or menus.
- **Sleep/Moon Button:** May activate sleep timer or other power-saving features depending on TV model.

### Dedicated Shortcut Buttons:

The remote features four dedicated shortcut buttons for quick access to popular streaming channels:

- **Netflix**
- **Hulu**
- **Sling**
- **Now**

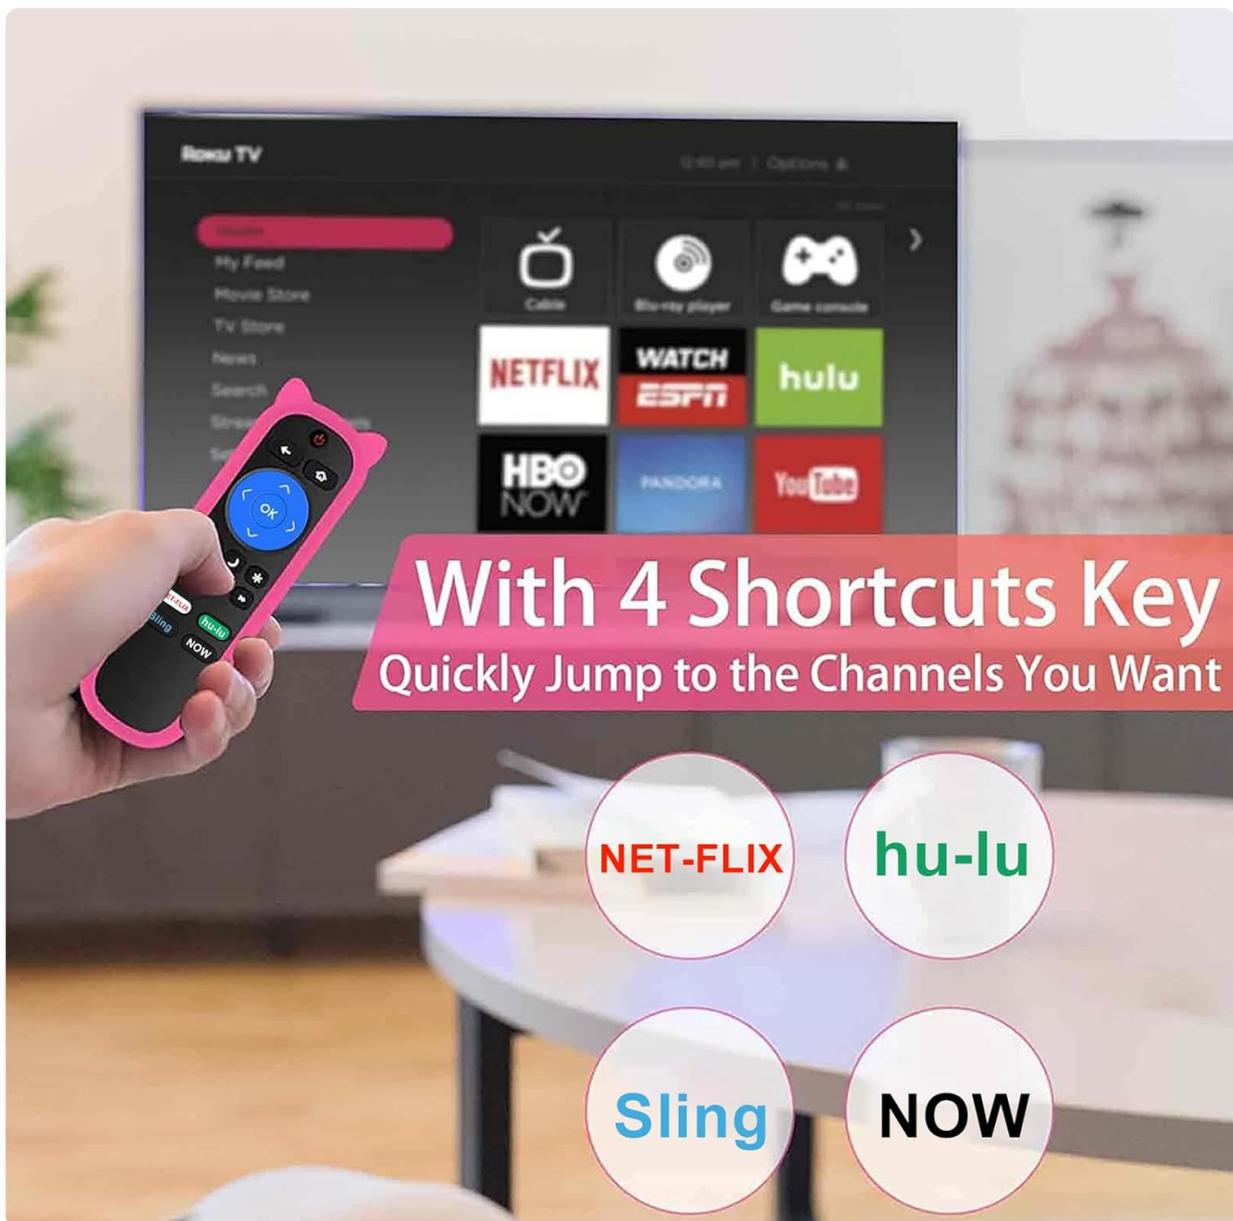


Image: A hand holding the Yimaut remote control, pointing towards a TV screen displaying the Roku interface. The image highlights the four dedicated shortcut buttons for Netflix, Hulu, Sling, and Now, indicating quick access to these streaming services.

The remote offers a quick transmission response time of 0.2 seconds and an effective operating distance of over 40 feet.

## 5. COMPATIBILITY

This Yimaut remote control is universally compatible with all Hisense Roku TV models, including various screen sizes and series. It is a direct replacement for the HU-RCRUS-20 remote.

### Compatible Hisense Roku TV Sizes:

- 32 inch
- 40 inch
- 43 inch
- 50 inch
- 55 inch
- 58 inch

- 65 inch
- 70 inch
- 75 inch
- 85 inch

### Examples of Compatible Series and Models:

- **H4 Series:** 32H4D, 40H4D, 43H4D, 50H4D, 55H4D, 40H4E, 43H4E, 32H4E1, 32H4F, 40H4F, 43H4F
- **R6 Series:** 65R6D, 43R6E, 50R6E, 55R6E, 65R6E, 65R6E1, 75R6E1, 60R5800E, 50R6090G, 55R6000E
- **R6070 Series:** 65R6070E, 55R6070E3, 65R7050E1
- **R7 Series:** 43R7E, 50R7E, 55R7E, 65R7E
- **R7E Series:** 75R7070E2
- **R8 Series:** 55R8F, 55H8G, 65H8F, 65H8G, 32H4E, 60R6E, 50R7F, 55R7F, 65R8F, 43R6E1, 50R6E1
- **H4030 Series:** 32H4030F, 40H4030F, 43H4030F, 43H4080F
- **R6090G Series:** 43R6090G, 50R6090G, 55R6090G, 65R6090G
- **Other Series:** 43R61G, 50R61G, 55R61G, 58R61G, 65R61G, 70R6209, 75R61G, 32H4030F, 40H4030F, 70R6209, 32H4020E, 32H4020E1, 32H4040E, 32H4050E, 32H4050E1, 32H4060E, 32H4060E

### Important Note:

- This remote is **NOT compatible** with Roku Stick or Roku Streaming Player devices.
- It does **NOT support voice control** functionality.
- It does **NOT include a headphone jack**.

# Compatible with All Hisense Roku TV



Smart HD TV LED TV
ULED LED HDTV TV
720p 1080P 2160p 4K TV
HDR UHD TV



Image: The Yimaut remote control positioned next to two Hisense Roku TVs, illustrating its broad compatibility. A text overlay lists various TV types and resolutions it supports.

## 6. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your Yimaut Remote Control, please follow these maintenance guidelines:

- **Cleaning:** Wipe the remote and its silicone cover with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the remote.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always use new AAA batteries and dispose of old ones responsibly.
- **Glow-in-the-Dark Feature:** The glow pink cover's luminescence is activated by light exposure. To maximize its glow at night, ensure it is charged under daylight or natural UV light.
- **Protection:** The included silicone cover provides protection against drops, scratches, and minor spills. The wrist strap helps prevent accidental drops and makes it easy to hang the remote when not in use.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Pet Safety:** Keep the remote control away from pets to prevent chewing or damage.

Glow in dark

# Easy to Find at night



Image: The Yimaut remote control glowing in the dark on a couch, demonstrating its easy-to-find feature at night. A note advises charging it under daylight or natural UV light for optimal glow.

# Keep the remote action



Keep away from my pets



Image: A composite image showing the remote control hanging on a hook by its wrist strap and a "no pets" symbol over a dog, emphasizing the remote's portability and the importance of keeping it safe from pets.

## 7. TROUBLESHOOTING

If you encounter issues with your Yimaut Remote Control, please refer to the following common solutions:

Problem	Possible Cause	Solution
Remote is not responding.	<ul style="list-style-type: none"><li>• Dead or incorrectly inserted batteries.</li><li>• Obstruction between remote and TV.</li><li>• Remote is out of range.</li></ul>	<ul style="list-style-type: none"><li>• Replace batteries with new AAA batteries, ensuring correct polarity.</li><li>• Remove any objects blocking the line of sight between the remote and the TV's IR sensor.</li><li>• Move closer to the TV (within 40 feet) and ensure the remote is pointed directly at it.</li></ul>
Specific buttons are not working.	<ul style="list-style-type: none"><li>• Dirt or debris under the button.</li><li>• Internal malfunction.</li></ul>	<ul style="list-style-type: none"><li>• Clean around the button with a soft, dry cloth.</li><li>• If cleaning doesn't help, the remote may be faulty.</li></ul>

Problem	Possible Cause	Solution
Remote works intermittently.	<ul style="list-style-type: none"> <li>• Low battery power.</li> <li>• Interference from other electronic devices.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries.</li> <li>• Ensure no other devices are causing IR interference.</li> </ul>

If the problem persists after trying these solutions, please contact Yimaut customer support for further assistance.

## 8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Yimaut
Model	HU-RCRUS-20 (Replacement)
Product Dimensions	5 x 4 x 0.1 inches
Item Weight	0.353 ounces
Wireless Communication Technology	Infrared (IR)
Special Features	Universal compatibility, 4 shortcut buttons, Glow-in-the-dark cover, Wrist strap
Form Factor	Cover
Color	Pink (Glow Pink Cover)
Compatible Devices	Hisense Roku TV (various models and sizes)
Shell Type	Soft Silicone
Country of Origin	China
First Available Date	July 28, 2021

## 9. WARRANTY AND CUSTOMER SUPPORT

Yimaut is committed to providing high-quality products. For any questions, concerns, or technical assistance regarding your Yimaut Remote Control, please contact our customer support team.

While specific warranty details are not provided in this manual, please refer to the product packaging or the retailer's website for information on warranty coverage and return policies.

For direct support, please visit the official Yimaut store or contact the seller through your purchase platform.

*We aim to ensure your satisfaction with our products.*

© 2024 Yimaut. All rights reserved.

Product Model: HU-RCRUS-20