

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AgfaPhoto](#) /

› [AgfaPhoto LeBox Ocean Waterproof Camera User Manual](#)

## AgfaPhoto 601040

# AgfaPhoto LeBox Ocean Waterproof Camera User Manual

Model: 601040

## INTRODUCTION

---

Welcome to the user manual for your AgfaPhoto LeBox Ocean Waterproof Camera. This single-use camera is designed for capturing memories in wet environments, including underwater, up to a depth of 5 meters. It comes pre-loaded with ISO 400 film, capable of taking 27 exposures. Please read these instructions carefully to ensure optimal performance and enjoyment of your camera.

## SAFETY INFORMATION

---

- Do not attempt to open the camera casing. This camera is designed for single use and is sealed to maintain its waterproof integrity.
- Avoid exposing the camera to extreme temperatures or direct sunlight for prolonged periods when not in use, as this can affect the film.
- Ensure the camera is clean and free of sand or debris before and after underwater use. Rinse with fresh water after saltwater exposure.
- This camera is not a toy. Keep out of reach of small children.

## PRODUCT OVERVIEW

---

The AgfaPhoto LeBox Ocean is a compact, single-use camera encased in a clear, waterproof housing. It features a simple design for ease of use in various conditions.



**Figure 1: Front View of AgfaPhoto LeBox Ocean Camera.** This image shows the front of the camera, highlighting the lens, viewfinder, and the clear waterproof casing with an underwater scene design. The yellow wrist strap is also visible.



Figure 2: Top View of AgfaPhoto LeBox Ocean Camera. This image displays the top of the camera, showing the film advance wheel, shutter button, and simple pictorial instructions for use. The yellow wrist strap is also prominent.



Figure 3: Back of AgfaPhoto LeBox Ocean Camera Packaging. This image shows the rear of the camera's packaging, detailing specifications like ISO 400 and 27 photos, along with important usage and disposal information in multiple languages.

## SETUP

Your AgfaPhoto LeBox Ocean camera comes pre-loaded with film and is ready for immediate use. No assembly or battery installation is required.

1. **Unpack the Camera:** Carefully remove the camera from its packaging.
2. **Attach Wrist Strap:** If not already attached, secure the yellow wrist strap to prevent accidental drops, especially in water.

3. **Check Film Counter:** The camera is pre-wound. The film counter (if visible) will indicate the number of remaining exposures.

## OPERATING INSTRUCTIONS

---

Follow these steps to take photos with your LeBox Ocean camera:

1. **Wind the Film:** Turn the film advance wheel (located on the top right of the camera) clockwise until it stops. This prepares the next frame for exposure.
2. **Aim:** Look through the viewfinder to compose your shot. For best results, ensure your subject is within the recommended distance.
3. **Shoot:** Press the shutter button (located next to the film advance wheel) firmly to take a picture.

### Important Considerations for Photography:

- **Lighting:** This camera performs best in bright, sunny conditions or light cloud. For underwater photography, clear water and good natural light are essential.
- **Distance:** For optimal clarity, subjects should generally be between 1 to 2 meters (approximately 3 to 6.5 feet) from the camera, especially underwater. The camera is waterproof up to 5 meters.
- **Flash:** This model does not feature a built-in flash. Rely on natural light.
- **Film Count:** The camera contains 27 exposures. Continue winding and shooting until the film is fully used.

## MAINTENANCE

---

The AgfaPhoto LeBox Ocean camera requires minimal maintenance due to its single-use design.

- **Cleaning:** After use, especially in saltwater, rinse the camera thoroughly with fresh water to remove salt, sand, or other debris. Wipe dry with a soft cloth.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures before and after use.
- **Disposal/Processing:** Once all 27 exposures are taken, the camera is ready for film processing. Do not attempt to open the camera. Take the complete camera to a photo processing lab. The camera body is designed to be reused or recycled by the processing facility.

## TROUBLESHOOTING

---

As a simple, single-use device, troubleshooting options are limited.

- **Camera not taking pictures:** Ensure you have fully wound the film advance wheel until it stops before each shot. If the film is fully used, the camera will no longer advance or shoot.
- **Blurry or dark photos:**
  - Ensure you are shooting in bright, sunny conditions, especially underwater.
  - Keep subjects within the recommended distance of 1-2 meters.
  - Avoid shooting into direct sunlight.
  - Ensure the lens is clean and free of smudges or water droplets.
- **Water inside casing:** If you suspect water has entered the camera, cease use immediately. This indicates a breach in the waterproof seal.

## SPECIFICATIONS

---

<b>Brand</b>	AgfaPhoto
<b>Model Number</b>	601040
<b>Film Format Type</b>	35mm
<b>Film Speed</b>	ISO 400
<b>Exposures per Camera</b>	27
<b>Waterproof Depth</b>	Up to 5 meters (16 feet)
<b>Recommended Shooting Distance</b>	1-2 meters (3-6.5 feet) for optimal clarity
<b>UPC</b>	880278019429

## WARRANTY INFORMATION

---

If this product is found to be defective, AgfaPhoto's liability is limited to an equivalent replacement or a refund of the purchase price. This product is sold without any express or implied warranty, even if damage, defect, or loss is caused by negligence or other fault. Please note that this product may include used and recycled parts.

For warranty claims, please contact your point of purchase or the AgfaPhoto customer support.

## SUPPORT

---

For further assistance or inquiries regarding your AgfaPhoto LeBox Ocean Waterproof Camera, please refer to the contact information provided by your retailer or visit the official AgfaPhoto website.

