

[Manuals.plus](#) /

> [RK RECK](#) /

> RECK Club 3000 4000 Watt DJ/Powered PA Speaker System User Manual

RK RECK Club 3000

RECK Club 3000 4000 Watt DJ/Powered PA Speaker System User Manual

Model: Club 3000 | Brand: RK RECK

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your RECK Club 3000 4000 Watt DJ/Powered PA Speaker System. This all-in-one PA system is designed for various occasions, offering powerful audio performance with multiple connectivity options.

WHAT'S INCLUDED



The RECK Club 3000 PA System includes the following components:


- 1 x Active Subwoofer
- 1 x Passive Subwoofer

- 8 x 4-inch Array Speakers
- 2 x Speaker Poles
- 1 x 30-foot Speakon Cable
- 6 x 8-inch 6.35mm Cables
- 1 x 6-foot 6.35mm Cable
- 1 x 33-foot 6.35mm Cable
- 1 x Remote Control
- 1 x User Manual

Description: An image showing all components of the RECK Club 3000 PA system laid out, including two subwoofers, two array speaker towers, various cables, and a remote control.

SETUP INSTRUCTIONS

1. Speaker Assembly

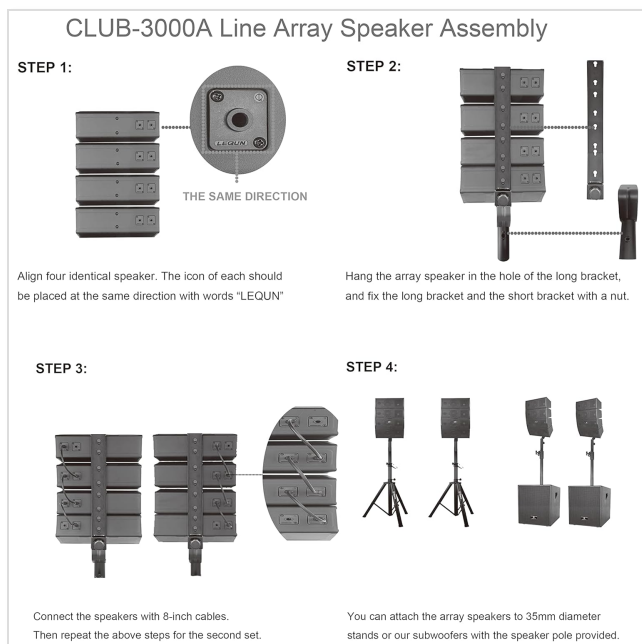

Follow these steps to assemble the array speakers:

1. **Step 1:** Align all four identical array speakers. Ensure the icon on each speaker is facing the same direction.
2. **Step 2:** Hang the assembled array speaker unit into the hole of the long bracket. Secure both the long and short brackets with a nut.
3. **Step 3:** Connect the individual speakers within the array using the provided 8-inch cables. Repeat this process for the second set of array speakers.
4. **Step 4:** Attach the assembled array speakers to the 35mm diameter speaker poles or directly to the subwoofers using the provided speaker pole.

Description: A diagram illustrating the four steps for assembling the line array speakers, showing how to align units, attach brackets, connect speakers with cables, and mount them on poles or subwoofers.


2. Height Adjustment



The telescoping speaker pole allows you to adjust the PA system's height from 65 inches to 80 inches for optimal sound projection. Use the rotating knob on the pole to secure the desired height.

Description: An image comparing two setups of the PA system, one at 65 inches height and another at 85 inches height, demonstrating the adjustable speaker pole.

3. System Connections

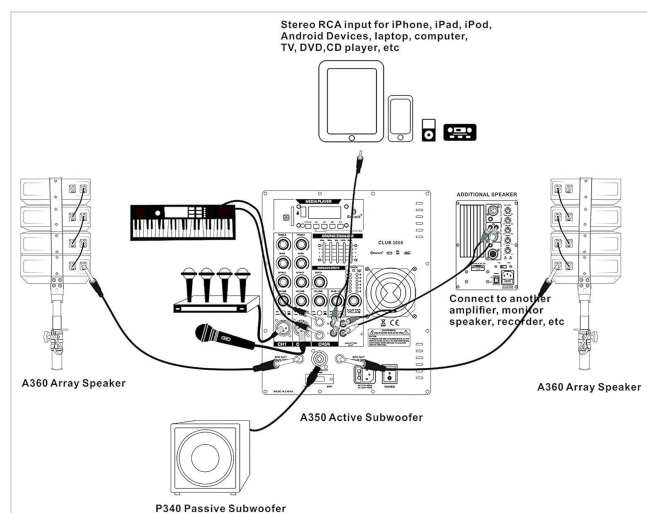


Connect the active subwoofer to the passive subwoofer and array speakers using the provided cables. The active subwoofer is equipped with a 12-inch amplifier to control both the passive subwoofer and line array speakers.

- Connect the active subwoofer's Speakon output to the passive subwoofer.
- Connect the active subwoofer's 6.35mm outputs to the array speakers.
- Utilize the versatile 4-channel mono & stereo inputs (two mono XLR inputs, one stereo 6.35mm input, and one stereo RCA input) for connecting various musical instruments and audio sources.

Description: A detailed diagram showing the rear panel of the active subwoofer and how to connect it to the passive subwoofer, array speakers, and various audio input devices like microphones, keyboards, and media players.

OPERATING INSTRUCTIONS

Control Panel Overview

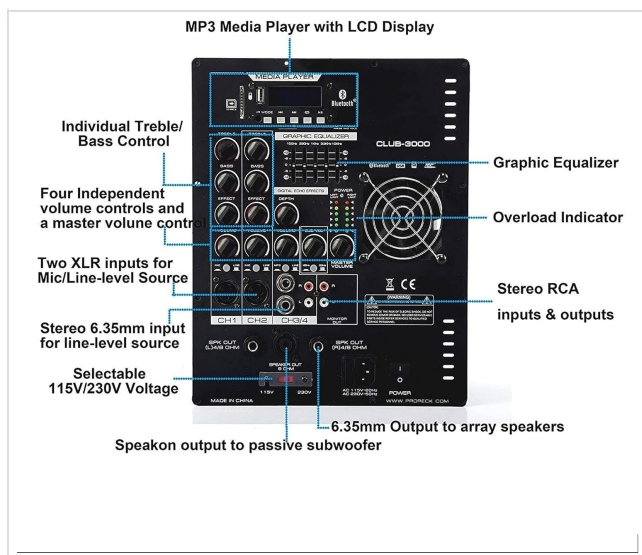

The active subwoofer features a comprehensive control panel for managing audio inputs and outputs:

- **MP3 Media Player with LCD Display:** For USB drive/SD card playback.
- **Individual Treble/Bass Control:** Adjust high and low frequencies for each channel.
- **Four Independent Volume Controls:** For each input channel.
- **Master Volume:** Controls the overall system volume.
- **Two XLR Inputs:** For microphone or line-level sources.
- **Stereo 6.35mm Input:** For stereo audio sources.
- **Stereo RCA Inputs & Outputs:** For connecting various audio devices.
- **Graphic Equalizer:** Fine-tune the audio output.
- **Overload Indicator:** Lights up if the signal is too strong, indicating potential distortion.
- **Selectable 115V/230V Voltage:** Ensure correct voltage setting for your region.

Description: A close-up image of the rear control panel of the RECK Club 3000 active subwoofer, with labels pointing to the MP3 media player, individual volume controls, XLR inputs, RCA inputs/outputs, graphic equalizer, and other features.

Bluetooth Connectivity

Instantly pair your iPhone, iPod, iPad, Android devices, and other Bluetooth-enabled devices with the system. The Bluetooth range is up to 66 feet line of sight.

USB/SD Card Playback

Simply insert a USB drive or SD card into the designated slot on the control panel to play back audio files directly.

Remote Control

Use the included remote control to switch modes, play/pause, skip tracks, and adjust volume from up to 20 feet away.


MAINTENANCE

- Keep the system clean by wiping surfaces with a soft, dry cloth.
- Avoid exposing the system to excessive moisture or extreme temperatures.
- Ensure proper ventilation around the active subwoofer to prevent overheating.
- Regularly check all cable connections for secure fit.
- Store the system in a dry, dust-free environment when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Sound Output	Power not connected or turned on. Volume levels too low. Incorrect input selection. Cables not properly connected.	Ensure power cable is securely plugged in and power switch is ON. Increase master volume and individual channel volumes. Select the correct input source on the control panel. Check all audio cables (XLR, 6.35mm, RCA, Speakon) for secure connections.
Distorted Sound	Volume too high (overload). Incorrect impedance matching. Damaged cables or speakers.	Reduce master volume or individual channel volumes until the overload indicator turns off. Ensure connected devices have compatible impedance. Inspect cables and speakers for any visible damage. Replace if necessary.
Bluetooth Pairing Issues	Device too far from the system. Bluetooth not enabled on device or system. Interference.	Move your Bluetooth device closer to the PA system. Ensure Bluetooth mode is selected on the PA system and enabled on your device. Minimize interference from other wireless devices.

SPECIFICATIONS

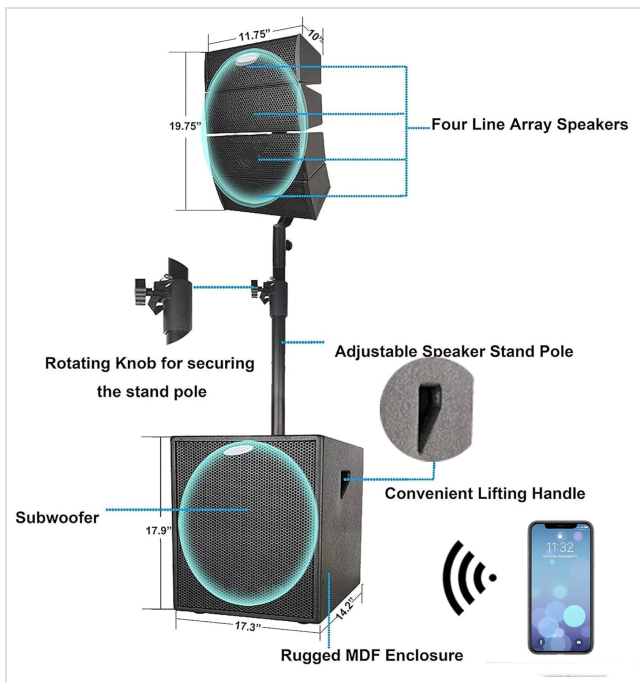

Description: A diagram illustrating the dimensions of the subwoofer and the four-line array speakers, including height, width, and depth measurements.

Feature	Detail
Model	Club 3000
Output Wattage	4000 Watts Peak / 1000 Watts RMS
Frequency Response	40-20KHz

Feature	Detail
Number of Channels	4
Audio Inputs	XLR, 6.35mm (1/4 inch), RCA
Connectivity Technology	Bluetooth, USB, SD Card, XLR, RCA
Speaker Type	Powered PA System with Active & Passive Subwoofers, Line Array Speakers
Subwoofer Material	MDF (Engineered Wood)
Adjustable Height	65 inches to 80 inches
Item Weight	22 Kilograms (48.4 pounds)
Cable Length (Speakon)	30 Feet
UPC	710964427729

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact RK RECK customer service directly. Keep your proof of purchase for warranty claims.