



Manuals.plus /

- › FITNIV /
- › FITNIV White Noise Machine User Manual

## FITNIV T126L

# FITNIV White Noise Machine User Manual

Model: T126L

## 1. IMPORTANT SAFETY INFORMATION

**Please read all safety instructions before use.**

Always use the provided power adapter. To avoid risk of electric shock, do not immerse the power adapter in water or other liquids. Keep the power cord away from heat sources and prevent it from being damaged. Do not use the product with damaged power cord or plug. This product is not a toy and should not be used as such. Always supervise children when using this product.

## 2. PRODUCT OVERVIEW

The FITNIV White Noise Machine is designed to create a peaceful environment for improved sleep and focus. It features a variety of soothing sounds and an adjustable night light.



Figure 2.1: Front view of the FITNIV White Noise Machine, showing the speaker grille and control buttons.

### Key Features:

- **14 Soothing Sounds:** Includes 3 white noise, 3 lullabies, 5 natural sounds, 2 clothes dryer sounds, and 1 fan sound to help you sleep comfortably.
- **Adjustable Night Light:** A 10-level adjustable warm light, ideal for nurseries or nighttime use without being too bright.
- **Timer Function:** Set the device to turn off automatically after 15, 30, 60, 90, or 120 minutes.
- **Memory Feature:** The machine remembers your last sound, volume, timer, and light settings for convenience.
- **Noise Masking:** Effectively covers up ambient noise and distractions, providing privacy and aiding concentration.

# Multiple Soothing Soundtracks

3 

White Noise

3 

Lullabies

5 

Nature Sound

1 

Fan Noise


2 

Clothes Dryer



Figure 2.2: The white noise machine providing a calming environment for a sleeping child.
 
# Warm Lights & Sweet Dreams



10 Levels Warm Light



Figure 2.3: The adjustable night light feature, useful for nighttime nursery activities.

# Volume Control with Auto-off Timer Options



Figure 2.4: Illustration of the auto-off timer options for customized use.

# Easy Control with the Sensitive Touch Button



Figure 2.5: The sensitive touch buttons on the top panel for easy control.



Figure 2.6: The device is powered via a standard electrical outlet using the provided adapter.

### 3. SETUP

1. Plug in the power adapter to the noise machine and an electrical outlet.
2. Press the 'Power' button to turn on the device.

### 4. OPERATING INSTRUCTIONS

#### Sound Selection and Volume:

- Use the 'Sound' button (often indicated by a musical note or wave icon) to cycle through the 14 soothing sounds.
- Adjust the volume using the '+' and '-' buttons located on the device.

### **Night Light Operation:**

- To use the night light, press the 'Light' button (often indicated by a light bulb icon).
- Adjust the brightness of the night light using the '+' and '-' buttons.

### **Timer Function:**

- Set the timer by pressing the 'Timer' button (often indicated by a 'T' or clock icon) and selecting the desired duration (15, 30, 60, 90, or 120 minutes).

### **Memory Feature:**

The device will remember your last settings (sound, volume, timer, and light) for the next use, eliminating the need to reset preferences each time.

## **5. MAINTENANCE**

- **Cleaning:** Wipe the exterior of the device with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Power Cord:** Regularly inspect the power cord for any signs of damage. If damaged, discontinue use and contact customer support.

## **6. TROUBLESHOOTING**

### **No Power:**

- Ensure the power adapter is securely plugged into both the device and a working electrical outlet.
- Check if the power outlet is functional by plugging in another device.

### **No Sound:**

- Increase the volume using the '+' button.
- Cycle through the sounds using the 'Sound' button to ensure a sound is selected.

### **Night Light Not Working:**

- Press the 'Light' button to turn it on.
- Adjust the brightness using the '+' button.

### Buttons Unresponsive (Touch Sensor):

- Ensure your finger makes full contact with the touch-sensitive area.
- Try a gentle, firm tap rather than a light touch.
- Unplug the device for 30 seconds and then plug it back in to reset it.

## 7. SPECIFICATIONS

Attribute	Detail
Product Dimensions	4.7 x 4.7 x 3.9 inches
Item Weight	13.44 ounces
Model Number	T126L
Manufacturer	FITNIV
Material	Plastic, Acrylonitrile Butadiene Styrene (ABS)
Power Source	Corded Electric
Color	White

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact FITNIV customer service directly. Refer to the product packaging or the manufacturer's official website for contact details.

*Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This disclaimer is provided as per product information and may not directly apply to the operation of this electronic device.*