

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [xingzhihua](#) /
- › [xingzhihua HS-7700J Smart TV Remote Control User Manual](#)

xingzhihua HS-7700J

xingzhihua HS-7700J Smart TV Remote Control User Manual

Model: HS-7700J

INTRODUCTION

This manual provides instructions for the xingzhihua HS-7700J Smart TV Remote Control. This remote is designed as a replacement for various Skyworth Smart TV models, including 58G2A, G6, E3, and E6D. It comes pre-programmed and requires no setup other than battery installation.

PRODUCT OVERVIEW



Figure 1: Front view of the xingzhihua HS-7700J Smart TV Remote Control, showing all buttons and layout.

The HS-7700J remote control features a comprehensive set of buttons for navigating and controlling your Skyworth Smart TV. Key features include:

- Pre-programmed for immediate use.
- Voice control functionality (requires compatible TV).
- Dedicated buttons for popular streaming services like Netflix and Google Play.
- Standard TV control buttons including power, volume, channel, navigation, and input selection.

SETUP AND BATTERY INSTALLATION

The xingzhihua HS-7700J remote control is pre-programmed and does not require any manual setup or pairing with your TV. Simply install the batteries to begin use.

Battery Installation Steps:

1. **Locate the Battery Compartment:** Turn the remote control over to its back side. The battery compartment cover is located at the bottom.

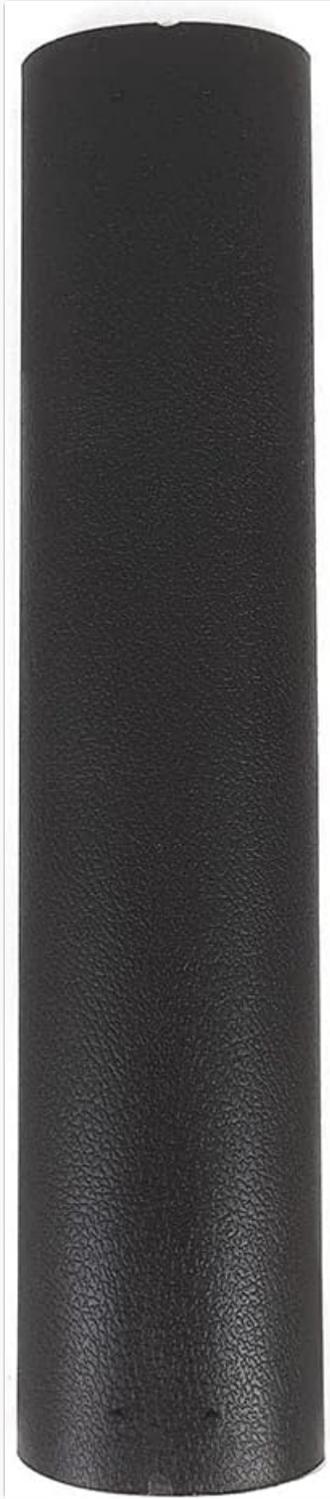


Figure 2: Back view of the remote control, illustrating the removable battery cover.

2. **Remove the Battery Cover:** Gently slide the battery compartment cover downwards or in the direction indicated by an arrow (if present) to remove it.
3. **Insert Batteries:** Insert two AAA batteries (not included) into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries match the markings inside the compartment.



Figure 3: Open battery compartment, showing correct battery orientation for two AAA batteries.

4. **Replace the Battery Cover:** Slide the battery compartment cover back into place until it clicks securely.

Note: The remote control is designed to work immediately after battery installation. No additional programming or pairing is required for compatible Skyworth TV models.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your xingzhihua HS-7700J remote control.

Button	Function
--------	----------

Button	Function
Power ()	Turns the TV on or off.
Microphone Icon	Activates voice control for compatible Smart TV features.
Mute ()	Mutes or unmutes the TV audio.
Number Buttons (0-9)	Direct channel selection.
LIST	Displays a list of channels or recent inputs.
SOURCE	Selects the input source (HDMI, AV, etc.).
Home Icon	Returns to the TV's home screen or smart hub.
MENU	Accesses the TV's main menu.
Navigation Pad (Up, Down, Left, Right, OK)	Navigates through menus and confirms selections.
BACK	Returns to the previous screen or menu.
EXIT	Exits the current menu or application.
Netflix	Direct access to the Netflix application.
Google Play	Direct access to the Google Play Store or Google Play services.
Volume (+/-)	Adjusts the TV volume up or down.
GUIDE	Displays the electronic program guide (EPG).
Channel (CH +/-)	Changes the TV channel up or down.
ZOOM	Adjusts the screen zoom level.
MTS	Selects Multi-channel Television Sound options (e.g., Stereo, SAP).
CC	Toggles Closed Captions on or off.
SLEEP	Sets the TV sleep timer.
FAV	Accesses favorite channels list.
FREEZE	Freezes the current image on the screen.
Media Control Buttons (Play/Pause, Rewind, Fast Forward, Stop)	Controls media playback (e.g., USB, streaming apps).

CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, moisture, or dust.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range of the TV's IR receiver.
- **Voice Control Not Working:**
 - Verify that your Skyworth TV model supports voice control and that the feature is enabled in the TV settings.
 - Ensure there are no obstructions blocking the microphone on the remote.
 - Speak clearly and directly into the remote's microphone.
- **Buttons Not Functioning Correctly:**
 - Clean the remote control, especially around the buttons, to remove any dirt or debris that might be causing sticking.
 - If specific buttons are consistently unresponsive, the remote may require replacement.

SPECIFICATIONS

Feature	Detail
Model Number	HS-7700J
Brand	xingzhihua
Compatible Devices	Skyworth Smart TVs (Models: 58G2A, G6, E3, E6D)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Item Weight	3.84 ounces
Package Dimensions	8.98 x 4.13 x 1.14 inches
Special Feature	Ergonomic design, Voice Control

WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support for the xingzhihua HS-7700J remote control was not provided in the product details. Please refer to your retailer or the original product

packaging for any available warranty information or contact details for support.

© 2025 xingzhihua. All rights reserved.