

[Manuals.plus](#) /

› [POTTY TIME](#) /

› Potty Watch for Kids Potty Training Instruction Manual

## POTTY TIME PW-Seat24

# Potty Watch Instruction Manual

Brand: POTTY TIME | Model: PW-Seat24

### PRODUCT OVERVIEW

The Potty Watch is a patented potty training timer designed to make potty training fun and easy for children. It helps parents by reminding toddlers when it's time to use the bathroom through fun music and blinking lights. Parents can choose the time between bathroom visits, extending it as children get better at figuring out when to go potty. This watch is water-resistant and features an adjustable strap for a comfortable fit.



Image: The Potty Watch in purple, showcasing its design and digital display.

## KEY FEATURES

- **Potty Training Reminders:** Programmed to play music and flash lights every 30, 60, or 90 minutes to remind children it's potty time.
- **Durable Construction:** Made with premium-quality, abrasion-resistant materials.
- **Adjustable Strap:** Ensures a comfortable and secure fit for your child's wrist.
- **Pre-Set Timers:** Easy selection of 30, 60, or 90-minute intervals with automatic reset.
- **Engaging Music & Lights:** Features 3 fun songs and blinking lights to make potty time enjoyable.
- **Water-Resistant:** Designed to be splashproof for everyday use, though not submersible.

WE DO THE REMINDING,  
SO YOU DON'T HAVE TO!

IP67 WATERPROOF



ASTM SAFETY TESTED 18M+



60-DAY WARRANTY



MOM & U.S.A. OWNED



DON'T BE FOOLED BY IMITATIONS

WE ARE PROUD OF OUR 1 MILLION SUCCESS STORIES & COUNTING


Image: Overview of key product features including water resistance and safety certifications.

# KIDS LOVE LEARNING & SINGING OUR ORIGINAL POTTY TIME SONGS



## Stainless Steel Buckle

Easy to use & accomodates a large range of sizes

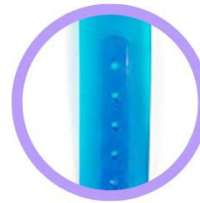

## Soft Jelly Wristband

Hypoallergic & certified to ASTM F963 toy safety standards



## 3 Fun Songs

Lets your little one know when it's time to go!



## Colorful Lights & Sound

Get your child excited to run to the potty



## Set 30, 60 Or 90 Min

Patented timer automatically resets for consistent reminders



Image: Detailed features of the Potty Watch, including strap material and song options.

## SETUP AND INITIAL USE

### How to Set the Timer:

1. **Step 1:** Hold down the SET button (side button) while firmly pressing in the TIMER button (front button).
2. **Step 2:** Release both buttons when "PLAY" appears on the display. ("PLAY" will flash for 5 seconds).
3. **Step 3:** While "PLAY" is flashing, press only the TIMER button again to select the desired mode: PLAY | 30 | 60 | 90 | OFF.

Once the mode is selected, the timer will automatically begin counting down. To change the mode at any time, repeat steps 1 through 3.

# SIMPLE TO USE IN 3 EASY STEPS

OUR PATENTED PROCESS PREVENTS ACCIDENTAL TURN OFFS

## Step: 1

Hold down the set button while firmly pressing in the timer button

## Step: 2

Release both buttons when "PLAY" appears. ("PLAY" will flash for 5 seconds)

## Step: 3

While flashing press only the timer button again to select the mode:

**PLAY | 30 | 60 | 90 | OFF**



After the song and lights finish playing, the timer automatically resets and begins counting down again



Side Button



Timer button

### Play Mode

You can play the **song** and **lights** simply by pushing the **timer button**

### 30,60 & 90 Min Mode

The **song** and **lights** play only at the end of timer cycle

### Off Mode

Stops the timer

Image: Visual guide for setting the Potty Watch timer.



Image: A child interacting with the Potty Watch on their wrist.

## OPERATING YOUR POTTY WATCH

The Potty Watch is designed for simplicity and effectiveness. Once the timer is set to your desired interval (30, 60, or 90 minutes), it will count down to 00:00. At the end of the countdown, the watch will activate its fun music and flashing lights, signaling to your child that it's time to try going potty. After the song and lights finish, the timer automatically resets and begins counting down again for consistent reminders.

In 'PLAY' mode, you can play the song and lights simply by pushing the TIMER button. This mode is useful for familiarizing your child with the watch's alerts or for a quick reminder outside of the set intervals.



Image: The Potty Watch display showing a 30-minute countdown.

### Official Product Video:

Video: An official demonstration of the Potty Watch in action, showing how it reminds children with music and lights. This video highlights the ease of use and the watch's effectiveness in a real-world setting.

## CARE AND MAINTENANCE

- **Water Resistance:** The Potty Watch is water-resistant and splashproof, making it suitable for helping your child wash their hands. However, it is not designed to be submerged in water. Avoid prolonged exposure to water or submersion.
- **Cleaning:** To clean the watch, wipe it gently with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery:** The Potty Watch requires batteries for operation. If the display becomes faint or the music/lights do not activate, the battery may need replacement. Refer to the included instructions for battery replacement details.

- **Storage:** Store the watch in a cool, dry place when not in use.

### TROUBLESHOOTING

- **No Sound or Lights:** If the watch is not playing music or flashing lights, ensure the battery is properly installed and has sufficient charge. If the issue persists after battery replacement, contact customer support.
- **Faint Display:** A faint or unreadable display often indicates a low battery. Replace the battery as per the instructions.
- **Timer Not Resetting:** Verify that the watch is set to one of the timed modes (30, 60, or 90 minutes) and not 'OFF' mode. If the issue continues, try resetting the watch by following the setup instructions.
- **Watch Not Turning On:** Check the battery. If the watch still does not turn on after replacing the battery, there may be an internal issue.

### PRODUCT SPECIFICATIONS

|                             |                        |
|-----------------------------|------------------------|
| Product Dimensions          | 1.6 x 8.3 x 3.8 inches |
| Item Model Number           | PW-Seat24              |
| Target Gender               | Unisex                 |
| Material Type               | Plastic                |
| Additional Product Features | Timer                  |
| Power Source                | Battery Powered        |
| Batteries Required          | Yes                    |
| Display Type                | Digital                |
| Item Weight                 | 1.76 ounces            |

### WARRANTY AND CUSTOMER SUPPORT

The Potty Watch comes with a 60-day manufacturer's warranty. For any questions, troubleshooting assistance, or warranty claims, please contact the manufacturer directly. As a family-owned U.S. small business, POTTY TIME is dedicated to providing support for your potty training journey.

Potty time lyrics are included with the potty watch instructions to help kids sing along and make the process more engaging.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question