

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [XTREME DIGITAL LIFESTYLE ACCESSORIES](#) /
- › [Monster Bluetooth FM Transmitter User Manual](#)

XTREME DIGITAL LIFESTYLE ACCESSORIES MCC9-1035

Monster Bluetooth FM Transmitter User Manual

Model: MCC9-1035

Brand: XTREME DIGITAL LIFESTYLE ACCESSORIES

INTRODUCTION

Thank you for choosing the Monster Bluetooth FM Transmitter. This device allows you to stream audio from your smartphone to your car's FM radio, make hands-free calls, and charge your devices quickly. Please read this manual carefully to ensure proper use and optimal performance.



Image: The Monster Bluetooth FM Transmitter shown alongside its retail packaging, highlighting its compact design and key features.

KEY FEATURES

- **Wireless Audio & Hands-Free Calls:** Stream music and manage calls via Bluetooth.
- **Powerful 20W Fast Charging:** Equipped with QC3.0 USB-A and USB-C Power Delivery (PD) ports for rapid charging.
- **Enhanced Sound with Bass Boost:** Activate bass boost for deeper audio with a dedicated button.
- **Multiple Music Playback Options:** Supports Bluetooth streaming and USB flash drive playback.
- **Voice Assistant & Universal Compatibility:** Works with Google Voice Assistant and Siri, compatible with 12V-24V vehicles.



Image: A detailed diagram illustrating the various components of the Monster FM Transmitter, including the Bass Boost button, QC 3.0 USB Port, LED Display, Mode Switch, USB Music Port, Multifunction Button, and 20W PD Type-C Port.

PACKAGE CONTENTS

- Monster Bluetooth FM Transmitter
- User Manual

SETUP

Initial Setup

Step 1: Powering On

Insert the Monster Bluetooth FM Transmitter into your vehicle's 12V/24V cigarette lighter socket. The LED display will light up, indicating it is powered on and ready for use.

Stream & Talk Hands-Free While Charging Your Devices



Image: The Monster FM Transmitter securely plugged into a car's cigarette lighter socket, displaying its active LED screen and illuminated ports.

Step 2: Tuning FM Frequency

1. Find an empty (static-free) FM frequency on your car's radio.
2. On the transmitter, press and hold the Multifunction Button until the FM frequency on the LED display starts flashing.
3. Rotate the Multifunction Button left or right to adjust the transmitter's frequency to match the empty frequency on your car radio.
4. Press the Multifunction Button once to confirm the frequency setting.

Step 3: Bluetooth Pairing

1. Enable Bluetooth on your smartphone or other audio device.
2. Search for available Bluetooth devices and select "Monster MCC9-1035" to pair.
3. Once paired, the transmitter's LED display will show a stable Bluetooth icon, and you will hear a confirmation tone.



Image: A smartphone screen displaying the Bluetooth settings menu, with the "Monster MCC9-1035" device listed and ready for connection, indicating successful pairing.

Your browser does not support the video tag.

Video: An official product video demonstrating the setup and basic functions of the Monster Wireless FM Transmitter and Car Charger, including FM tuning, Bluetooth pairing, and hands-free calling.

OPERATING INSTRUCTIONS

Music Playback

Bluetooth Streaming

Once paired, open your favorite music app on your smartphone. Audio will automatically stream through your car's FM radio. Use the Multifunction Button to control playback:

- Press once to Play/Pause.
- Rotate clockwise to increase volume.
- Rotate counter-clockwise to decrease volume.
- Press the 'Next Track' button (▶▶) to skip to the next song.
- Press the 'Previous Track' button (◀◀) to go to the previous song.

USB Flash Drive Playback

Insert a USB flash drive containing MP3, WMA, WAV, or FLAC audio files into the USB Music Port. The transmitter will automatically detect and play the music. Use the same controls as Bluetooth streaming for playback.

Hands-Free Calling

When a call comes in, the music will pause, and the transmitter will announce the incoming call. Use the Multifunction Button to manage calls:

- Press once to Answer an incoming call.
- Press once during a call to End the call.
- Press and hold to Reject an incoming call.
- Double-press to Redial the last number.



Image: A hand pressing the multifunction button on the Monster FM Transmitter, with visual cues indicating options to Answer, Hang up, or Decline a call, demonstrating its hands-free calling capability.

Bass Boost Function

Press the 'B' button (Bass Boost) on the transmitter to enhance the bass output of your audio. Press it again to turn off the bass boost.

Voice Assistant Activation

Press and hold the Multifunction Button for 2 seconds to activate your smartphone's voice assistant (Siri or Google Assistant). You can then use voice commands for navigation, calls, or music control.

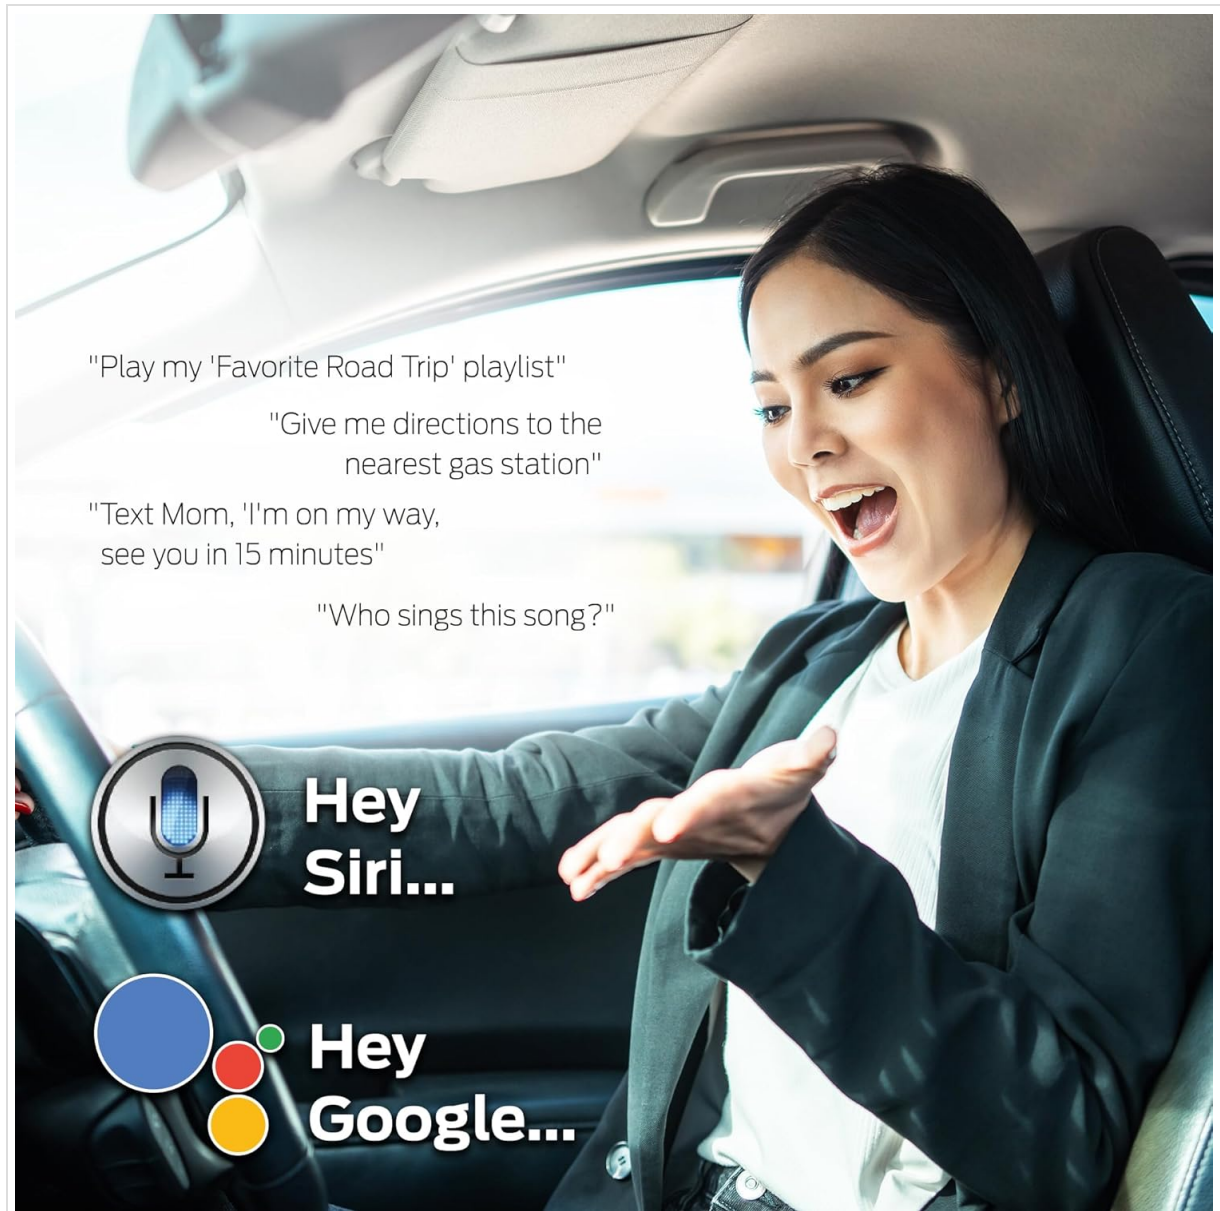


Image: A woman in a car interacting with her smartphone's voice assistant (Siri or Google Assistant) via the Monster FM Transmitter, with example voice commands like "Play my 'Favorite Road Trip' playlist" and "Give me directions to the nearest gas station" displayed.

Device Charging

The transmitter features a QC3.0 USB-A port and a 20W USB-C PD port for fast charging. Connect your compatible devices using appropriate charging cables to these ports.

20W total power shared between Type-C & USB for Fast Charging



Image: Two smartphones, one charging via USB-C PD and the other via USB-A, connected to the Monster FM Transmitter, illustrating its dual fast-charging capabilities.

MAINTENANCE

To ensure the longevity and optimal performance of your Monster Bluetooth FM Transmitter, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the device. Do not use liquid cleaners or abrasive materials, as they may damage the unit.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts, which can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power/LED display off	Not properly inserted into socket; vehicle power issue.	Ensure the transmitter is fully inserted. Check vehicle's cigarette lighter fuse.
Static or poor audio quality	FM frequency interference; weak signal.	Find a clearer, unused FM frequency on your car radio and match the transmitter. Avoid frequencies used by strong local stations.
Bluetooth not connecting	Transmitter not in pairing mode; device already paired to another unit; Bluetooth off on phone.	Ensure transmitter is in pairing mode. Turn off Bluetooth on other nearby devices. Restart phone's Bluetooth.
Cannot make/receive calls	Not paired correctly; microphone blocked.	Re-pair the device. Ensure nothing is obstructing the microphone on the transmitter.
Slow charging	Cable not compatible; device not supporting fast charge.	Use a high-quality, compatible charging cable. Ensure your device supports QC3.0 or PD fast charging.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.87 x 2.15 x 4.75 inches
Item Weight	2.39 ounces
Connectivity Technology	Bluetooth, USB
Power Source	Corded Electric (12V-24V Car Socket)
Charging Ports	QC3.0 USB-A, 20W USB-C PD
Audio Formats Supported	MP3, WMA, WAV, FLAC (via USB Flash Drive)
Special Feature	Car Charger, Bass Boost, Voice Assistant Compatibility
Manufacturer	Jem Accessories
Country of Origin	China

SAFETY INFORMATION

Battery handling: Keep batteries away from extreme temperatures and humidity. Do not dispose of batteries in fire. **Bluetooth usage:** Avoid using while driving unless in a hands-free mode. **Interference:** This device may interfere with other wireless devices. Dispose of according to local regulations.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official XTREME DIGITAL LIFESTYLE ACCESSORIES website. Keep your purchase receipt as proof of purchase for any warranty claims.

