



- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Exercise extra care when cleaning on stairs.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.

### 3. PACKAGE CONTENTS

---

Carefully unpack your Dreame VVA1 and ensure all items are present. If any items are missing or damaged, please contact customer support.

- Main Vacuum Unit
- Extension Rod
- Motorized Brush Head
- Charging Station with Accessory Holder
- Power Adapter
- Crevice Tool
- 2-in-1 Brush Tool
- User Manual



Figure 3.1: All components included in the Dreame VVA1 Cordless Vacuum Cleaner package.

The image above illustrates the various parts you should find in your product packaging. Please verify that all listed items are present before proceeding with assembly.

### 4. SETUP AND INITIAL CHARGING

---

#### 4.1 Assembly

1. **Attach the Extension Rod:** Align the main vacuum unit with the extension rod and push until it clicks into place.
2. **Attach the Brush Head:** Connect the motorized brush head to the other end of the extension rod, ensuring it clicks securely.
3. **Install Accessories:** The charging station includes an accessory holder. Attach the crevice tool and 2-in-1 brush tool to the holder for convenient storage.



Figure 4.1: Step-by-step assembly of the main vacuum unit, extension rod, and brush head.

This image demonstrates the correct method for assembling the primary components of your vacuum cleaner, ensuring a secure connection for operation.

## 4.2 Initial Charging

Before first use, fully charge the vacuum cleaner. The battery is a Lithium-ion type and requires approximately 2 hours for a full charge.

1. Mount the charging station in a suitable location, preferably near a power outlet.
2. Connect the power adapter to the charging station and plug it into a wall outlet.
3. Place the assembled vacuum cleaner onto the charging station. The indicator lights on the main unit will illuminate to show charging status.
4. Allow the vacuum to charge until the indicator lights show a full charge (refer to the indicator light section in the manual for specific patterns).



Figure 4.2: The Dreame VVA1 vacuum cleaner correctly placed on its charging station for charging.

The illustration above shows the vacuum cleaner docked on its charging station. Ensure the power adapter is securely connected to both the station and a power outlet.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Powering On/Off and Mode Selection

- **Power On:** Press the power button located on the handle of the main unit to start the vacuum cleaner. It will typically start in a default mode (e.g., Eco or Normal).
- **Change Suction Mode:** Press the mode selection button (often indicated by a fan icon or similar) to cycle through available suction modes: Eco, Normal, and Turbo.
- **Power Off:** Press the power button again to turn off the vacuum cleaner.



Figure 5.1: Location of the power and mode selection buttons on the vacuum cleaner's handle.

This image highlights the control interface on the vacuum's handle, indicating where to press for power and to adjust suction modes.

### 5.2 Emptying the Dustbin

For optimal performance, empty the 0.5 L dustbin regularly, especially when it reaches the MAX fill line.

1. Ensure the vacuum cleaner is turned off.
2. Locate the dustbin release button, typically on the side or bottom of the main unit.
3. Press the release button to detach the dustbin from the main unit.
4. Position the dustbin over a trash receptacle.
5. Press the dustbin bottom release button to open the flap and empty the contents.
6. Close the flap and reattach the dustbin to the main unit until it clicks securely.



Figure 5.2: Steps for detaching and emptying the dustbin.

The image above illustrates the process of detaching the dustbin and releasing its contents into a waste bin, ensuring hygienic disposal.

## 6. MAINTENANCE

---

Regular maintenance is crucial for maintaining the performance and longevity of your Dreame VVA1 vacuum cleaner.

### 6.1 Cleaning the Dust Cup and Filter

The filter system should be cleaned regularly, especially if you notice a decrease in suction power.

1. Empty the dustbin as described in Section 5.2.
2. Twist or pull to remove the filter assembly from the dustbin.
3. Separate the components of the filter (e.g., mesh filter, HEPA filter).
4. Tap off loose dirt over a trash can. Rinse the washable filter components under cold running water until the water runs clear. Do not use detergent.
5. Allow all filter parts to air dry completely for at least 24 hours before reassembling and placing them back into the dustbin. Ensure they are completely dry to prevent mold or damage.



Figure 6.1: Steps for disassembling and cleaning the dust cup and filter system.

This image provides a visual guide for disassembling the filter system and cleaning each component under running water, emphasizing the importance of complete drying.

### 6.2 Cleaning the Brush Roll

Hair and debris can get tangled around the brush roll, affecting cleaning performance. Clean it periodically.

1. Turn off the vacuum cleaner and detach the motorized brush head.
2. Locate the brush roll release tab or cover on the side of the brush head. Open it to access the brush roll.
3. Remove the brush roll. Use scissors or a cleaning tool (if provided) to cut and remove any tangled hair or fibers.
4. Clean any debris from the brush roll housing.
5. Reinsert the brush roll and close the cover until it clicks into place.



Figure 6.2: Process of removing and cleaning the brush roll.

The image above illustrates how to access and clean the brush roll, a critical step for maintaining effective cleaning performance.

## 7. TROUBLESHOOTING

---

If you encounter issues with your Dreame VVA1, refer to the following table for common problems and solutions.

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum cleaner fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Weak suction power.	Dustbin is full.	Empty the dustbin.
	Filter is clogged.	Clean or replace the filter.
	Brush roll is tangled or blocked.	Clean the brush roll.
	Air duct or nozzle is blocked.	Check for and remove any blockages in the air path.
Short battery run time.	Battery not fully charged.	Ensure the battery is fully charged before use.
	Frequent use of Turbo mode.	Turbo mode consumes more power; use Eco or Normal mode for longer run time.
Brush roll stops rotating.	Brush roll is jammed by debris.	Turn off the vacuum, remove the brush head, and clear any obstructions.
	Brush head not properly attached.	Ensure the brush head is securely connected to the extension rod.

If the problem persists after trying these solutions, please contact Dreame customer support.

## 8. SPECIFICATIONS

---

Feature	Specification
Model Number	VVA1
Rated Power	450 W
Dustbin Capacity	0.5 L
Battery Type	Lithium-ion
Maximum Run Time	Up to 60 minutes (in Eco mode)
Charging Time	Approximately 2 hours
Weight	Approximately 3 kg
Noise Level	68 dB
Filter Type	Cartridge
Motor Type	Brushless Motor
Special Features	Charging station with accessory holder, one-button dustbin emptying

## 9. WARRANTY AND CUSTOMER SUPPORT

---

The Dreame VVA1 Cordless Vacuum Cleaner comes with a standard manufacturer's warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card included in your product packaging or visit the official Dreame website.

If you require technical assistance, have questions about your product, or need to claim warranty service, please contact Dreame customer support through their official website or the contact information provided in your product documentation. When contacting support, please have your model number (VVA1) and proof of purchase ready.

No official product videos were found for this model with the specified criteria. For visual guides, please refer to the images provided in this manual or visit the official Dreame support channels.