

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Fisher-Price](#) /

> Fisher-Price Laugh & Learn Stream & Learn Remote (Model HFT69) Instruction Manual

Fisher-Price HFT69

Fisher-Price Laugh & Learn Stream & Learn Remote Instruction Manual

Model: HFT69

For Infants and Toddlers Ages 6-36 Months

1. INTRODUCTION

Welcome to the Fisher-Price Laugh & Learn Stream & Learn Remote. This electronic toy is designed to provide engaging and educational play for infants and toddlers. It mimics a grown-up remote control, featuring lights, sounds, and interactive elements to stimulate early learning and fine motor skill development.





A black toy remote control with a smiling, light-up screen. It features colorful buttons for ABC, 123, and music notes, along with a green directional pad and red and blue toggle switches on the sides.

2. PACKAGE CONTENTS

Ensure all items are present upon unboxing:

- 1 Fisher-Price Laugh & Learn Stream & Learn Remote toy

3. SETUP

3.1 Battery Installation

The Fisher-Price Laugh & Learn Stream & Learn Remote requires 3 LR44 batteries (included).

1. Locate the battery compartment on the back of the remote.
2. Using a Phillips head screwdriver (not included), loosen the screw on the battery compartment cover.

3. Remove the cover.
4. Insert 3 new LR44 batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery compartment cover and tighten the screw.



The reverse side of the toy remote, displaying the battery compartment secured by a screw and a speaker grille. The model number HFT69 is

4. OPERATING INSTRUCTIONS

The Laugh & Learn Stream & Learn Remote is designed for intuitive play, encouraging exploration and learning through various interactive features.

4.1 Interactive Buttons

- **ABC Button:** Press this blue button to hear songs and phrases related to the alphabet. The screen will light up with various colors.
- **123 Button:** Press this orange button to learn about counting from 1 to 10. The screen will light up with various colors.
- **Music Note Button:** Press this purple button to activate various musical tunes and sounds. The screen will light up with various colors.

4.2 Fine Motor Activities

- **Directional Button (Green):** Press the large green directional pad to activate sounds and phrases.
- **Spinning Clicker (Red):** Rotate the red wheel on the side of the remote for tactile feedback and clicking sounds.
- **Toggle Switch (Blue):** Move the blue switch on the opposite side of the remote up and down for additional tactile play.

5. MAINTENANCE AND CARE

- Wipe the toy clean with a damp cloth. Do not immerse in water.
- Avoid exposing the toy to extreme temperatures or direct sunlight for prolonged periods.
- Remove batteries if the toy will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

6.1 No Sound or Lights

- Check if the batteries are installed correctly with the correct polarity.
- Replace old batteries with new LR44 batteries.
- Ensure the battery compartment cover is securely closed.

6.2 Intermittent Operation

- This may indicate low battery power. Replace batteries.
- Ensure the toy is not exposed to moisture or extreme conditions.

7. SPECIFICATIONS

Feature	Detail
Brand	Fisher-Price
Model Number	HFT69

Feature	Detail
Recommended Age	6 months - 3 years
Product Dimensions	5.1 x 2.7 x 0.1 inches
Item Weight	4.9 ounces
Batteries Required	3 LR44 (included)
Learning Content	Alphabet, Counting 1-10, Colors, Music
Interactive Features	Lights, Sounds, Phrases, Toggle Switch, Spinner, Directional Button





A front view of the Fisher-Price Laugh & Learn Remote with measurement lines indicating its dimensions: approximately 5.1 inches in length and 2.7 inches in width.

8. WARRANTY AND SUPPORT

For warranty information or customer support regarding your Fisher-Price Laugh & Learn Stream & Learn Remote, please refer to the contact details provided on the product packaging or visit the official Fisher-Price website.