

## Remington HC5156

# Remington HC5156 Hair Clipper User Manual

## 1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before using the Remington HC5156 Hair Clipper. Keep this manual for future reference.

- For external use only.
- Avoid contact with eyes.
- Keep away from naked flame or direct heat sources.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always ensure the power adapter is dry before plugging it into a power outlet.
- Do not use the appliance if it is damaged.
- Only use the charger supplied with the appliance.

## 2. PRODUCT OVERVIEW

The Remington HC5156 is a cordless hair clipper designed for efficient and precise hair grooming. It features durable stainless steel blades and multiple comb length settings.

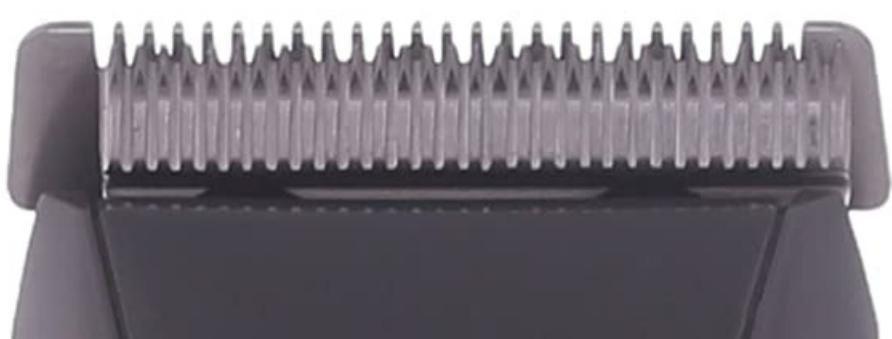






Figure 2.1: Rear view of the Remington HC5156 Hair Clipper, showing the power button and product information.



Figure 2.2: One of the adjustable comb attachments for the hair clipper.



Figure 2.3: Another view of an adjustable comb attachment, showing its design.

### 3. SETUP AND CHARGING

---

#### 3.1 Initial Charging

1. Before first use, ensure the clipper is fully charged. Connect the charging adapter to the clipper and then to a suitable power outlet.
2. The initial charge time is approximately 16 hours.
3. A full charge provides up to 30 minutes of cordless usage time.

#### 3.2 Attaching Comb Guides

- The clipper comes with two adjustable comb attachments.
- To attach a comb guide, align the guide with the clipper head and slide it on until it clicks into place.
- To remove, gently push the comb guide away from the clipper head.

### 4. OPERATING INSTRUCTIONS

---

#### 4.1 Powering On/Off

- Press the power button located on the body of the clipper to turn it on.
- Press the power button again to turn it off.

#### 4.2 Adjusting Cutting Length

- The adjustable comb guides offer 15 different length settings.
- To change the cutting length, slide the adjustment switch on the comb guide to your desired setting. Ensure the comb is securely locked in place before use.

#### 4.3 Usage Tips

- The Pro Power Motor allows for both dry and wet use. For best results, ensure hair is clean and detangled.

- Move the clipper against the direction of hair growth for an even cut.
- The clipper is suitable for various body areas including the back, body, chest, and face.

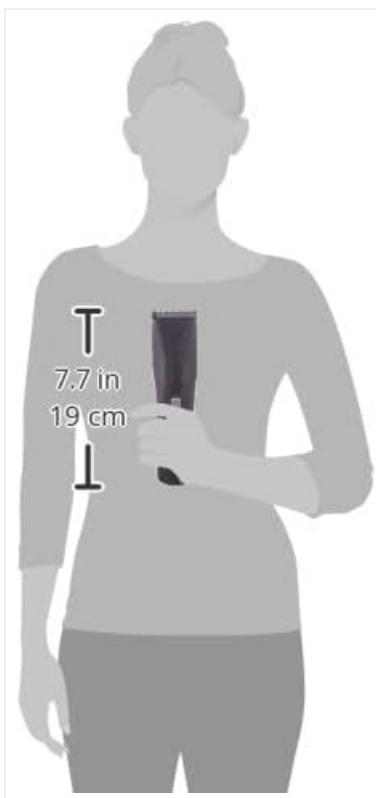


Figure 4.1: The Remington HC5156 Hair Clipper, demonstrating its approximate length of 19 cm.

## 5. CLEANING AND MAINTENANCE

---

### 5.1 After Each Use

1. Turn off and unplug the clipper.
2. Remove the comb guide.
3. Use the cleaning brush (if supplied) to brush away any loose hairs from the blades and the clipper body.
4. The blades can be rinsed under running water. Ensure the clipper body remains dry if not designed for full immersion.
5. Allow all parts to air dry completely before reassembling or storing.

### 5.2 Blade Lubrication

- Periodically apply a small amount of clipper oil (if supplied) to the blades to maintain optimal performance and longevity.
- Apply oil after cleaning, especially if the blades have been rinsed with water.

## 6. TROUBLESHOOTING

---

If you encounter issues with your Remington HC5156 Hair Clipper, refer to the following common solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper for the recommended 16 hours.
Poor cutting performance.	Blades are dirty or not lubricated.	Clean the blades and apply clipper oil. Ensure hair is clean and dry (or wet if using for wet cut).
Clipper makes unusual noise.	Blades may be misaligned or require lubrication.	Clean and lubricate blades. If problem persists, contact customer support.

If the issue persists after attempting these solutions, please contact Remington customer support.

## 7. SPECIFICATIONS

---

- **Model:** HC5156
- **Brand:** Remington
- **Color:** Black
- **Power Source:** Battery Powered (Cordless)
- **Recharge Time:** 16 hours
- **Usage Time:** Up to 30 minutes
- **Blade Material:** Stainless Steel
- **Special Features:** Pro Power Motor, 15 comb length modes, suitable for dry and wet use, 2 adjustable attachments.
- **Product Dimensions:** Approximately 19 x 9 x 7 cm
- **Item Weight:** 542 Grams
- **Country of Origin:** Germany

## 8. WARRANTY AND SUPPORT

---

Your Remington HC5156 Hair Clipper is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, spare parts, or warranty claims, please contact Remington customer service through their official website or the contact information provided in your product documentation.