

VGR V-117

VGR V-117 Electric Shaver and Hair Trimmer User Manual

Model: V-117

[Instructions](#) [Safety Instructions](#) [Maintenance](#) [Product Components](#) [Troubleshooting](#) [Setup](#) [Specifications](#) [Operating](#) [Warranty and Support](#)

INTRODUCTION

Thank you for choosing the VGR V-117 Electric Shaver and Hair Trimmer. This manual provides essential information for the safe and effective use of your device. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, injury, or fire, always follow these basic safety precautions:

- Do not immerse the device in water or use it near water.
- Keep the device away from heated surfaces.
- Do not use if the device or cord is damaged. Contact customer service for repair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use attachments supplied by the manufacturer.
- Unplug the device before cleaning.
- Store the device in a dry place when not in use.

PRODUCT COMPONENTS

The VGR V-117 grooming kit includes the main trimmer unit and various attachments for different grooming needs.



Image: The VGR V-117 grooming kit, showcasing the main trimmer unit, various guide combs, a nose/ear trimmer head, a precision trimmer head, and a charging stand.

- **Main Trimmer Unit:** The core device with power button and display.
- **Trimmer Head:** For general hair trimming and beard shaping.
- **Precision Trimmer Head:** For detailed styling and sharp lines.
- **Nose/Ear Trimmer Head:** For safe removal of unwanted nose and ear hair.
- **Guide Combs:** Various sizes for different hair lengths.
- **Charging Cable/Adapter:** For recharging the device.
- **Cleaning Brush:** For removing hair from blades.
- **Lubricating Oil:** For blade maintenance.
- **Charging Stand:** For convenient storage and charging.

SETUP

Charging the Device

1. Ensure the device is switched off before charging.
2. Connect the charging cable to the trimmer and plug the adapter into a suitable power outlet.
3. The display will indicate charging status. A full charge typically takes approximately 1.5 hours.
4. Do not overcharge the device. Unplug once fully charged to preserve battery life.

Attaching/Detaching Heads and Combs

- **To Attach a Head:** Align the desired trimmer head with the main unit and push gently until it clicks into place.
- **To Detach a Head:** Hold the main unit firmly and gently pull the trimmer head upwards or press the release button (if available) to remove it.
- **To Attach a Guide Comb:** Slide the comb onto the trimmer head until it locks securely.
- **To Detach a Guide Comb:** Gently pull the comb away from the trimmer head.



Image: The VGR V-117 trimmer unit placed on its charging stand, surrounded by its various interchangeable heads and guide combs, demonstrating the modular design.

OPERATING INSTRUCTIONS

General Use

1. Ensure your skin is clean and dry for best results with dry shaving.
2. Press the power button to turn the device on. The display will show the current battery level and speed setting.
3. The device has one speed setting.
4. Hold the trimmer at a slight angle against the skin and move it slowly against the direction of hair growth.
5. Do not apply excessive pressure, as this can cause irritation or damage to the blades.
6. After use, press the power button to turn off the device.

Hair Trimming

- Attach the desired guide comb to the main trimmer head.

- Start with a longer comb length if you are unsure, and gradually reduce it until you achieve the desired length.
- Move the trimmer smoothly and evenly over the hair.

Beard Shaping and Dry Shaving

- For beard shaping, use the main trimmer head with or without a guide comb for precise lines.
- For dry shaving, use the main trimmer head directly on the skin for a close shave. Ensure the skin is taut.

Nose and Ear Hair Trimming

- Attach the nose/ear trimmer head.
- Gently insert the trimmer tip into the nostril or ear canal.
- Move the trimmer in a circular motion to trim unwanted hair. Do not insert too deeply.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the life of your VGR V-117.

Cleaning After Each Use

1. Turn off the device and unplug it from the power source.
2. Remove the trimmer head.
3. Use the provided cleaning brush to remove any loose hairs from the blades and the inside of the trimmer head.
4. The trimmer heads are washable. Rinse them under running water. Ensure they are completely dry before reattaching or storing. *Note: The main unit is not waterproof unless specified otherwise. Avoid getting water on the main unit.*
5. Apply a small drop of lubricating oil to the blades after cleaning to maintain their sharpness and smooth operation.
6. Reattach the trimmer head and store the device in a dry, safe place.



Image: Front view of the VGR V-117 electric shaver, highlighting the main trimmer blade and the power button with its digital display. This view is useful for understanding where to clean the blades.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully.
Device does not turn on.	Device is damaged.	Contact customer support. Do not attempt to repair yourself.

Problem	Possible Cause	Solution
Poor trimming performance.	Blades are clogged with hair.	Clean the blades thoroughly using the brush.
Poor trimming performance.	Blades are not lubricated.	Apply a small amount of lubricating oil to the blades.
Poor trimming performance.	Trimmer head is not properly attached.	Ensure the trimmer head is securely clicked into place.
Device pulls hair.	Blades are dull or damaged.	Replace the trimmer head or contact customer support.
Device pulls hair.	Battery is low.	Charge the device fully.

SPECIFICATIONS

Model Number	V-117
Brand	VGR
Type	Clipper and Trimmer
Power Source	Battery Powered (Rechargeable via Electricity)
Speed Settings	1
Color	Black (Product images may show other colors like Green or Red)
Unit Count	1 Piece
Shipping Dimensions	23.4 x 15 x 7.8 cm
Item Weight	500 grams
First Available Date	July 28, 2021

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the official VGR website or contact their customer service department.

