

Fresh WQP12-7635-W

Fresh WQP12-7635-W Freestanding Dishwasher User Manual

Model: WQP12-7635-W

1. INTRODUCTION

Thank you for choosing the Fresh WQP12-7635-W Freestanding Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before using the dishwasher and keep them for future reference.

2. SAFETY INFORMATION

- Ensure the dishwasher is properly grounded before use.
- Do not allow children to play with or operate the dishwasher.
- Keep detergents and rinse aid out of reach of children.
- Never open the door during operation, especially during the hot wash or drying cycle, to avoid scalding.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Sharp items should be loaded with points down to prevent injury.
- Do not operate the dishwasher if it is damaged or malfunctioning. Contact customer service.

3. PRODUCT OVERVIEW

The Fresh WQP12-7635-W is a freestanding dishwasher designed for efficient cleaning of your dishes. It features a 12 place setting capacity, allowing for the washing of large utensils and a variety of dishware. The appliance includes two effective water sprayers (upper and lower) for optimal water distribution and two baskets for maximum loading capacity.



Image 3.1: Interior view of the Fresh WQP12-7635-W Freestanding Dishwasher, displaying the upper and lower racks designed for efficient loading.

Key features include:

- 12 place setting capacity
- Ability to load large utensils
- Drying and sterilization feature at 70 degrees Celsius
- Two effective water sprayers (upper and lower) with wide design
- Two baskets (upper and lower) for maximum capacity
- Rinse aid indicator light
- Salt indicator light
- Wide range of programs, including a Quick Rinse program
- Excellent operation with low water pressure
- Fully insulated double wall for noise reduction

- Stainless steel inner cabinet and inner door
- Special softener to remove limescale and metals from water
- Delay function

4. SETUP

4.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage during transit. Report any damage to your retailer immediately.

4.2 Positioning

Place the freestanding dishwasher on a firm, level surface. Ensure there is adequate space around the appliance for proper ventilation and door opening. Adjust the leveling feet to ensure stability.

4.3 Water Connection

Connect the water inlet hose to a cold water supply tap with a 3/4-inch thread. Ensure the connection is secure to prevent leaks. Connect the drain hose to a suitable drain pipe or sink trap, ensuring it is properly secured and allows for free drainage.

4.4 Electrical Connection

Plug the dishwasher into a grounded electrical outlet (220 Volts). Ensure the electrical supply matches the requirements specified on the appliance's rating plate. Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

5.1 Loading the Dishwasher

Scrape off large food particles from dishes. Load dishes into the upper and lower baskets, ensuring they do not block the spray arms. Place large utensils and pots in the lower basket. Ensure all items are stable and cannot fall during the wash cycle.

5.2 Adding Detergent, Rinse Aid, and Salt

- **Detergent:** Add the appropriate amount of dishwasher detergent to the dispenser.
- **Rinse Aid:** Fill the rinse aid dispenser. The rinse aid indicator light will illuminate when a refill is needed.
- **Dishwasher Salt:** Fill the salt reservoir. The salt indicator light will illuminate when a refill is needed. The built-in softener helps manage water hardness.

5.3 Selecting a Program

Close the dishwasher door. Use the push-button controls to select your desired wash program. Available cycle options include: Normal, Rinse, Intensive, Delicate, and Quick Wash. You can also use the Delay Start function to postpone the start of a cycle.

5.4 Starting a Cycle

Press the Start button to begin the selected wash program. The dishwasher will operate with excellent performance even under low water pressure.

6. MAINTENANCE

6.1 Cleaning Filters

Regularly check and clean the filters located at the bottom of the dishwasher tub. Remove any food debris to ensure optimal washing performance and prevent blockages.

6.2 Cleaning Spray Arms

Periodically check the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the nozzles with a thin wire to ensure water can spray freely.

6.3 Refilling Rinse Aid and Salt

Refill the rinse aid and salt reservoirs when their respective indicator lights illuminate on the control panel. Using dishwasher salt helps the built-in softener effectively remove limescale and metals from the water.

6.4 Exterior Cleaning

Wipe the exterior surfaces of the dishwasher with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; door not closed properly; fuse blown; water supply turned off.	Check power connection; ensure door is latched; check household fuse/circuit breaker; open water supply valve.
Dishes are not clean	Improper loading; spray arms blocked; insufficient detergent; clogged filters; incorrect program selected.	Reload dishes correctly; clean spray arm nozzles; add more detergent; clean filters; select a more intensive program.
Water not draining	Drain hose kinked or blocked; drain pump filter clogged.	Check and clear drain hose; clean drain pump filter.
Excessive noise	Dishes rattling; foreign object in pump; dishwasher not level.	Rearrange dishes; check for foreign objects; adjust leveling feet. The double-wall insulation minimizes operational noise.
White spots on dishes	Insufficient rinse aid; hard water; salt reservoir empty.	Refill rinse aid; ensure salt reservoir is filled and softener is working.

8. SPECIFICATIONS

Feature	Detail
Brand Name	Fresh
Model Number	WQP12-7635-W
Installation Type	Freestanding
Color	White
Control Type	Push Button
Material	Metal

Feature	Detail
Included Components	Dishwasher
Voltage	220 Volts
Cycle Options	Normal, Rinse, Intensive, Delicate, Quick Wash
Number of Settings	5
Number of Cycle Options	12
Special Features	Delay Start
Recommended Uses	Daily dishes, glassware, pots, pans, and heavily soiled baking dishes.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact Fresh customer service. If you encounter any issues not covered in this manual or require technical assistance, please contact Fresh customer support through their official channels.

