

XTREME DIGITAL LIFESTYLE ACCESSORIES MCC9-1033-BLK

Monster Bluetooth FM Transmitter User Manual

Model: MCC9-1033-BLK

INTRODUCTION

This manual provides comprehensive instructions for the Monster Bluetooth FM Transmitter, Model MCC9-1033-BLK. This device allows you to wirelessly stream audio from your smartphone, tablet, or other Bluetooth-enabled devices to your car's FM stereo. It also features dual USB charging ports, an external microphone for hands-free calls, and support for various music file formats.

SAFETY INFORMATION

Important: Always use the device within its specified maximum amperage rating. Adhere to general Bluetooth and FM transmission safety guidelines. Do not operate the device in a manner that distracts you from driving. Ensure proper ventilation and avoid exposing the device to extreme temperatures or moisture.

PRODUCT OVERVIEW

The Monster Bluetooth FM Transmitter is designed for convenience and functionality in your vehicle. Key components include:

- **FM Transmitter:** Broadcasts audio to your car radio.
- **Bluetooth Connectivity:** For wireless audio streaming and hands-free calls.
- **Dual USB Charging Ports:** Two ports with a combined output of 3.4 Amps for charging mobile devices.
- **External Microphone:** A 2-foot corded microphone for clear hands-free communication and voice assistant activation.
- **Media Playback:** Supports music playback from USB flash drives and microSD cards.
- **File Compatibility:** Compatible with MP3, WMA, WAV, and FLAC audio formats.
- **Voice Assistant Support:** Integrates with Siri and Google Assistant.



Figure 1: Product Diagram with Labeled Components. This image illustrates the various parts of the FM transmitter, including the external microphone, USB ports, and control buttons.



Figure 2: Monster Bluetooth FM Transmitter. A front view of the device, highlighting its compact design and digital frequency display.

SETUP INSTRUCTIONS

1. **Power On:** Insert the Monster Bluetooth FM Transmitter into your vehicle's 12V power outlet (cigarette lighter socket). The device will power on automatically and its LED display will light up.



Figure 3: Device Powered On in Car Outlet. The transmitter is shown securely plugged into the vehicle's power socket, ready for operation.

2. Set FM Frequency:

- Tune your car's FM radio to an unused frequency. Choose a frequency that has no strong broadcast signal to minimize interference.
- On the transmitter, press the "CH" button to enter frequency adjustment mode.
- Use the "Back" (◀◀) and "Forward" (▶▶) buttons to match the transmitter's frequency to your car radio's frequency.
- Once matched, the display will stop flashing, indicating the frequency is set.

3. Pair with Bluetooth Device:

- On your smartphone or Bluetooth-enabled device, enable Bluetooth and search for available devices.
- Select "Monster BT FM" (or similar name) from the list of found devices.
- Once paired, the transmitter will confirm the connection, and you can now stream audio wirelessly.

4. **Position External Microphone:** Attach the external microphone to a suitable location on your dashboard or near your driving position using the provided adhesive. Ensure it is positioned for optimal voice pickup during calls.



Figure 4: External Microphone Placement. The image shows the external microphone positioned on the car's dashboard for clear audio during calls.

OPERATING INSTRUCTIONS

Music Playback:

- **Bluetooth Streaming:** Once paired, play music from your connected device. Audio will transmit to your car's FM stereo.
- **USB Flash Drive/MicroSD Card:** Insert a USB flash drive or microSD card (up to 32GB, formatted FAT32) containing MP3, WMA, WAV, or FLAC files into the designated slot. The transmitter will automatically detect and begin playing music.
- **Controls:**
 - Press the "Play/Pause" (▶▶) button to play or pause music.
 - Press the "Back" (◀◀) button to go to the previous track.
 - Press the "Forward" (▶▶) button to go to the next track.

Hands-Free Calling:

- **Answer/End Call:** Press the Multi-Function Button on the external microphone to answer an incoming call or end an ongoing call.
- **Reject Call:** Press and hold the Multi-Function Button to reject an incoming call.
- **Redial:** Double-press the Multi-Function Button to redial the last dialed number.

Voice Assistant (Siri/Google Assistant):

- **Activate:** Long press the Multi-Function Button on the external microphone to activate your phone's voice assistant (Siri or Google Assistant).
- Speak your command clearly into the external microphone once the assistant is active.

Siri® & Google virtual assistant

Long press the button and speak when prompted.

Or activate "Hey Siri" or Google "Voice Match" always listening feature and speak directly to your phone through your transmitter.



**Hey
Siri...**

"Play my 'Favorite Road Trip' playlist"

"Give me directions to the
nearest gas station"



**OK
Google...**

"Text Mom, 'I'm on my way,
see you in 15 minutes'"

"Who sings this song?"



Figure 5: Voice Assistant Integration. This image demonstrates the use of Siri and Google Assistant for hands-free control of music and navigation.

USB Charging:

- Connect your device's USB charging cable to either of the two USB ports on the transmitter.
- The ports provide a combined 3.4 Amps output for efficient charging of smartphones, tablets, and other USB-

powered devices.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power/display off	Not properly inserted into 12V outlet; vehicle power outlet is faulty.	Ensure the transmitter is fully inserted. Check if the vehicle's 12V outlet is working (e.g., by plugging in another device).
Static or poor audio quality	FM frequency interference; car antenna issues; low volume on source device.	Find a clearer, unused FM frequency on your car radio and transmitter. Ensure your phone/device volume is at a high level. Check car antenna.
Cannot pair via Bluetooth	Bluetooth not enabled on device; transmitter not in pairing mode; device too far.	Ensure Bluetooth is enabled on your phone. Restart both the transmitter and your phone. Keep devices within close proximity.
Hands-free call quality is poor	Microphone not positioned correctly; background noise.	Adjust the external microphone's position closer to your mouth. Reduce cabin noise if possible.
USB charging not working	Cable faulty; device not compatible; power outlet issue.	Try a different USB cable. Ensure the device you are charging is compatible with USB charging. Verify the transmitter is powered on.

SPECIFICATIONS

- **Model Number:** MCC9-1033-BLK
- **Connectivity:** Bluetooth, USB
- **Power Source:** Corded Electric (12V Car Outlet)
- **USB Output:** Dual USB, 3.4 Amps (Total)
- **Supported Audio Formats:** MP3, WMA, WAV, FLAC
- **MicroSD/USB Flash Drive Support:** Up to 32GB (FAT32)
- **External Microphone Cable Length:** 2 ft
- **Dimensions:** Approximately 5.87 x 3.98 x 1.85 inches (Package Dimensions)
- **Weight:** Approximately 2.96 ounces
- **Color:** Black

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the product packaging or contact XTREME DIGITAL

LIFESTYLE ACCESSORIES customer service. Keep your purchase receipt for warranty claims.

Manufacturer: Jem Accessories

