

[Manuals.plus](#) /

> [eKids](#) /

> eKids Spidey and His Amazing Friends Kids Tablet User Manual - Model 165

eKids 165

eKids Spidey and His Amazing Friends Kids Tablet User Manual

Model: 165

Brand: eKids

1. INTRODUCTION

The eKids Spidey and His Amazing Friends Kids Tablet is an interactive educational toy designed for toddlers aged 3 and up. It features over 90 built-in activities, phrases, and sound effects across four distinct play modes: Letters, Game, Play, and Adventure. This durable, portable, and lightweight tablet offers kid-friendly controls to engage young learners in alphabet games, phonics, and storytelling with their favorite Spidey characters.



A child engaging with the eKids Spidey and His Amazing Friends Kids Tablet, demonstrating its interactive nature.

2. SETUP

2.1 Battery Installation

The tablet requires 3 x AA (R6) batteries (not included). To install or replace batteries:

1. Locate the battery compartment on the back of the unit.
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 3 fresh AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and tighten the screw securely.

2.2 Power On/Off and Volume Control

On the back of the tablet, you will find switches for power and volume:

- **Demo/Off/On Switch:** Slide this switch to the 'On' position to power on the tablet. Slide to 'Off' to conserve battery life when not in use. The 'Demo' mode is for in-store display.
- **Lo/Med/Hi Volume Switch:** Adjust the volume to your preferred level (Low, Medium, or High) using this switch.



Rear view of the tablet, highlighting the battery compartment, speaker, and control switches for power and volume.

3. OPERATING INSTRUCTIONS

The tablet features 30 interactive light-up buttons and a mode selection area at the bottom. Use the mode switch to select from four different play modes:



The eKids Spidey and His Amazing Friends Kids Tablet displaying its four interactive play modes.

3.1 Letters Mode

Select the 'Letters' mode to learn letters and their sounds. Press any of the alphabet buttons to hear the letter and a corresponding word or character name.

3.2 Game Mode

In 'Game' mode, the tablet will prompt you to find specific objects or letters. Follow the audio instructions and press the correct button to play along.

3.3 Play Mode

Switch to 'Play' mode to hear fun character phrases and sound effects from Spidey and His Amazing Friends. Each button press will trigger a unique audio response.

3.4 Adventure Mode

In 'Adventure' mode, you can build short stories told by Spidey and his friends. Press buttons to advance the narrative and interact with the story elements.

3.5 Interactive Features

- **Light-Up Buttons:** The 30 interactive buttons light up to guide play and provide visual feedback.
- **Spidey Eyes:** The Spidey eyes on the tablet light up during use, adding to the interactive experience.
- **Pretend Camera:** Engage in imaginative play with the pretend camera feature.

Your browser does not support the video tag.

Official product video demonstrating the eKids Spidey and His Amazing Friends Kids Tablet in action, showcasing its various modes and interactive features.

4. MAINTENANCE

4.1 Cleaning

To clean the tablet, wipe it with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.

4.2 Storage

Store the tablet in a cool, dry place away from direct sunlight and extreme temperatures. If the unit will not be used for an extended period, remove the batteries to prevent leakage and corrosion.

5. TROUBLESHOOTING

5.1 Unit Not Turning On

- Ensure the Demo/Off/On switch is in the 'On' position.
- Check if the batteries are installed correctly with the correct polarity.
- Replace with fresh AA batteries.

5.2 No Sound or Low Sound

- Verify the Lo/Med/Hi Volume switch is not set to 'Lo' or 'Off'.
- Adjust the volume switch to 'Med' or 'Hi'.
- Ensure batteries are not low; replace if necessary.

5.3 Buttons Not Responding

- Check battery levels and replace if low.
- Power the unit off and then on again to reset.

6. SPECIFICATIONS

Feature	Detail
Brand Name	eKids
Model Number	165
Age Range Description	Kid (Manufacturer Minimum Age: 36 months)
Item Type Name	Play and Learn Tablet
Included Components	Play and learn adventure tablet
Material Type	Plastic
Educational Objective	STEM
Battery Description	Batteries (3 x AA required)
Operation Mode	Manual
Item Dimensions (L x W x H)	8 x 2 x 10 inches
Item Weight	0.34 Kilograms
Color	Red
Subject Character	Spidey

7. WARRANTY

The eKids Spidey and His Amazing Friends Kids Tablet comes with a **1 Year Limited Warranty**. Please refer to the product packaging or contact customer support for full details regarding warranty coverage and claims.

8. CUSTOMER SUPPORT

For further assistance, questions, or to report any issues with your eKids Spidey and His Amazing Friends Kids Tablet, please visit the official eKids brand store or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.