

[Manuals.plus](#) /

› [SRJTEK](#) /

› SRJTEK Replacement Touch Screen Digitizer for Vankyo MatrixPad Z4 Instruction Manual

SRJTEK MatrixPad Z4

SRJTEK Replacement Touch Screen Digitizer for Vankyo MatrixPad Z4

Instruction Manual

INTRODUCTION

This manual provides instructions for the installation and proper handling of the SRJTEK replacement touch screen digitizer for the Vankyo MatrixPad Z4 tablet. This product is designed to replace a defective, cracked, or non-responsive touch screen digitizer on your device. Please read all instructions carefully before proceeding with installation.

IMPORTANT SAFETY INFORMATION

- **Fragile Component:** The screen is made of glass and is very fragile. Handle with extreme care to prevent damage.
- **Static Electricity:** Be aware of static electricity issues during installation. Take appropriate anti-static precautions.
- **Cable Handling:** Do not bend the flexible cable excessively. Bending the LCD cable beyond 90 degrees can result in a black screen or other display issues.
- **Professional Installation Recommended:** Non-professional installation is not recommended. If you lack experience in repairing electronic equipment, consider seeking assistance from a professional repair shop to avoid potential damage to your device or the replacement part.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1x Touch Screen Digitizer Replacement (without LCD)
- 1x Free Double-sided Adhesive Tape
- 1x Set of Basic Installation Tools (universal tools; additional professional tools may be required)

PRODUCT IDENTIFICATION AND COMPATIBILITY

It is crucial to confirm the correct version and dimensions of your existing digitizer before installation. The Vankyo MatrixPad Z4 may have different digitizer versions. Please compare your original digitizer with the images below and verify the dimensions.

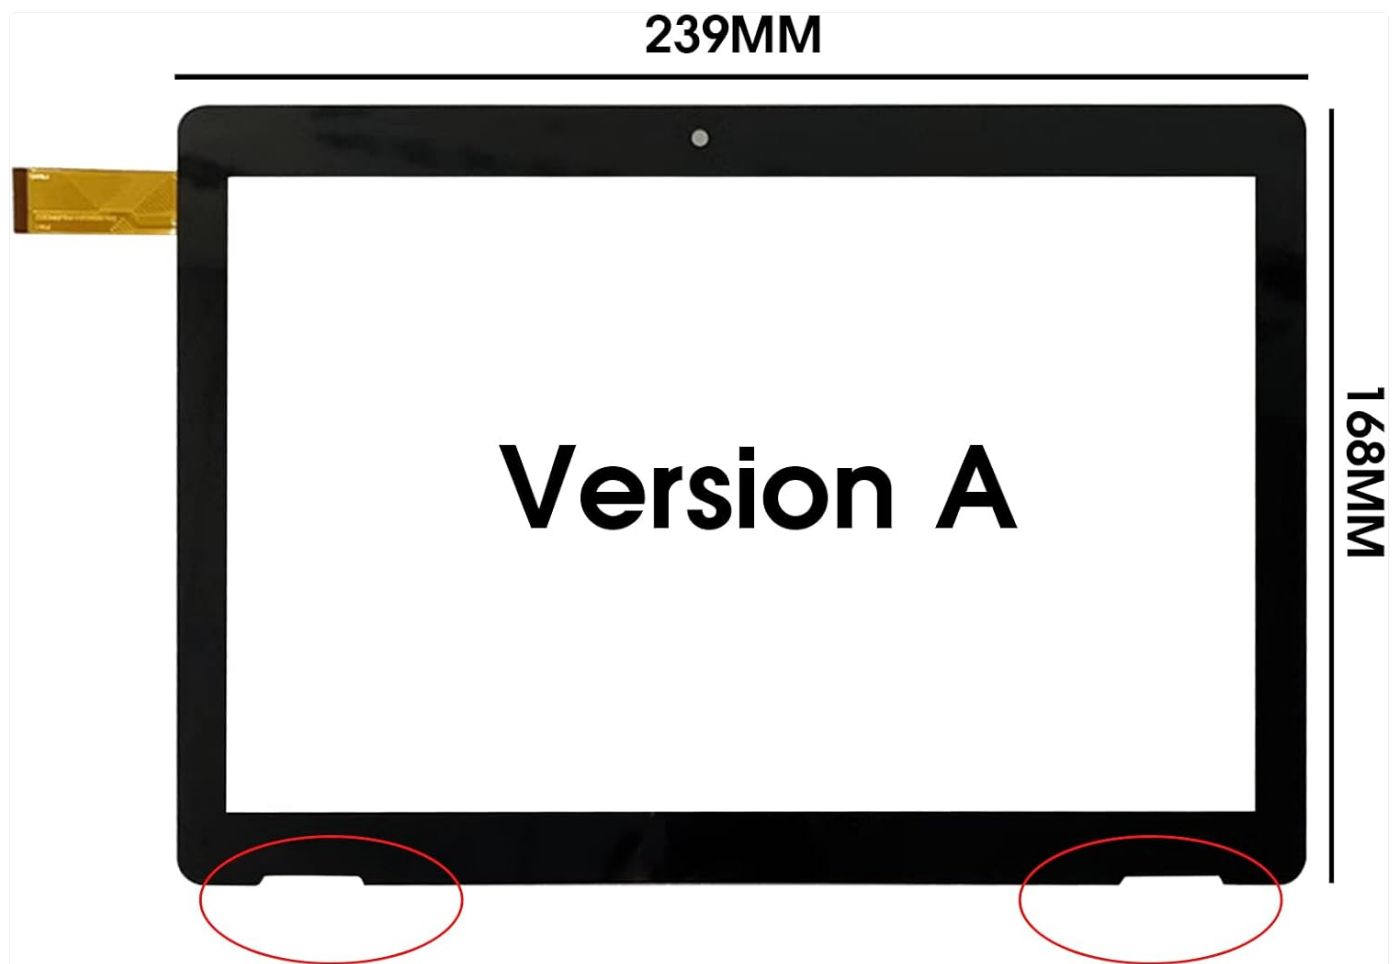 


Figure 1: Touch Screen Digitizer Version A (239mm x 168mm) with grooves.

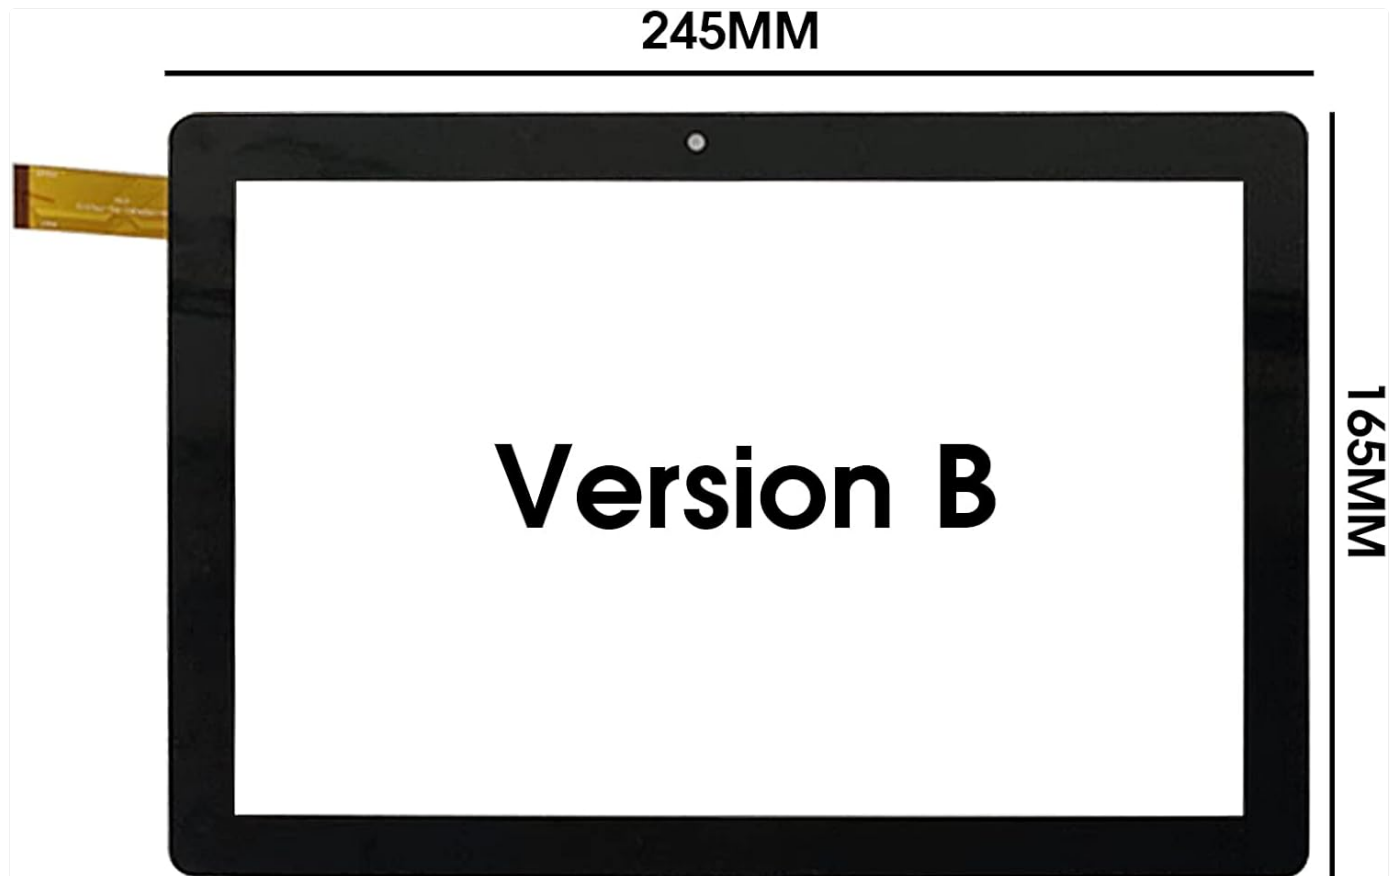 


Figure 2: Touch Screen Digitizer Version B (245mm x 165mm).

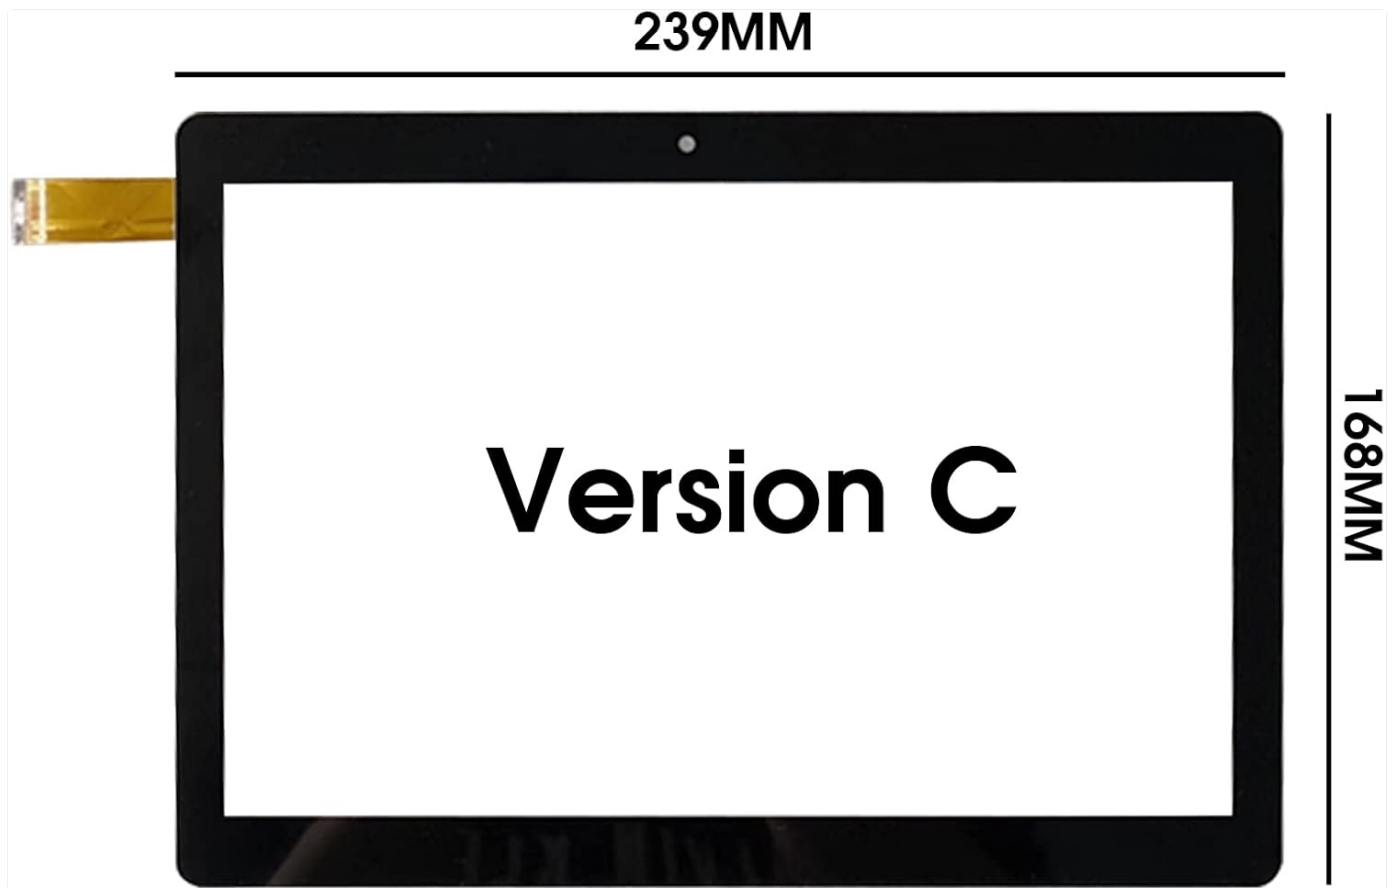 


Figure 3: Touch Screen Digitizer Version C (239mm x 168mm).

Ensure the dimensions and physical characteristics (e.g., presence of grooves) match your original part to guarantee compatibility.

SETUP AND INSTALLATION

Follow these steps carefully for proper installation:

1. **Pre-Installation Test:** Before fully installing the new digitizer, connect it to the tablet's motherboard and test its functionality. Do not remove any protective films or labels during this testing phase. Ensure the screen responds correctly to touch inputs.
2. **Remove Old Components:** Carefully remove the defective touch screen digitizer from your Vankyo MatrixPad Z4 tablet. This process typically involves heating the edges to loosen adhesive and using specialized tools to pry it open.
3. **Transfer Buttons (if applicable):** The replacement screen does not include power buttons, volume buttons, or other physical buttons. If your original screen had these integrated, carefully remove them from the old screen and re-install them onto the new digitizer.
4. **Clean Surface:** Thoroughly clean the frame of your tablet to remove any old adhesive residue or debris. A clean surface is essential for proper adhesion of the new digitizer.
5. **Apply Adhesive:** Apply the provided double-sided adhesive tape around the edges of the tablet frame where the digitizer will sit. Ensure even application for a secure fit.
6. **Connect Flex Cable:** Carefully connect the digitizer's flexible cable to the corresponding connector on the tablet's motherboard. Ensure it is seated correctly and securely. Avoid bending the cable sharply.
7. **Secure Digitizer:** Gently place the new digitizer onto the tablet frame, aligning it precisely. Press firmly around the edges to ensure the adhesive creates a strong bond.
8. **Final Test:** After installation, power on your tablet and perform a final test of the touch screen functionality.

For visual guidance, it is recommended to search for relevant installation videos on platforms like YouTube for the Vankyo MatrixPad Z4 touch screen replacement and follow their steps.

OPERATING THE TOUCH SCREEN

Once installed, the touch screen digitizer functions identically to the original. It provides touch input for navigating the tablet's interface. Ensure your tablet's operating system is up-to-date for optimal performance.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth, slightly dampened with water or a screen-cleaning solution, to clean the screen. Avoid harsh chemicals or abrasive materials.
- **Protection:** Consider using a screen protector to prevent scratches and minor impacts.
- **Avoid Pressure:** Do not apply excessive pressure to the screen, as this can cause damage to the digitizer or the underlying LCD.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Black Screen During Installation	Mainline (flex cable) not installed properly.	Press and hold the power key and volume key simultaneously. If the phone vibrates, reinstall the product, ensuring the flex cable is correctly seated.
Incorrect Screen Response / No Touch	Digitizer flex cable not properly connected, damaged cable, or faulty digitizer.	◦ Ensure the flex cable is securely connected. ◦ Re-test the screen before final installation. ◦ Verify the digitizer version matches your tablet. ◦ If issues persist, contact customer support.
Cracked Touch Screen	Physical impact or improper handling.	The digitizer is a replacement part for this issue. Ensure careful handling during and after installation.

SPECIFICATIONS

- **Product Type:** Touch Screen Digitizer Replacement (without LCD)
- **Compatibility:** Vankyo MatrixPad Z4 10.1 inches
- **Dimensions (Version A/C):** 239mm x 168mm (with grooves)
- **Dimensions (Version B):** 245mm x 165mm
- **Features:** High color saturation, high resolution, wide color gamut, smooth hand feel.
- **Manufacturer:** SRJTEK
- **ASIN:** B09BHFZDK5

SUPPORT

If you encounter any issues or require further assistance with your SRJTEK replacement touch screen digitizer, please contact our customer support. We aim to respond to inquiries within 24 hours.
For contact information, please refer to the seller's details on the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09BHFZDK5>

More documents and user manuals: <https://manuals.plus/>