

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Aigostar](#) /

› [Aigostar Retro Desk Lamp User Manual - Model 218188](#)

Aigostar 218188

Aigostar Retro Desk Lamp User Manual

Model: 218188 | Brand: Aigostar

1. INTRODUCTION

Thank you for choosing the Aigostar Retro Desk Lamp. This manual provides essential information for the safe and efficient use of your new lamp. Please read these instructions carefully before assembly and operation, and retain them for future reference.



Figure 1: Aigostar Retro Desk Lamp in use.

2. PACKAGE CONTENTS

Ensure all components are present and undamaged before proceeding with assembly. If any parts are missing or damaged, please contact customer support.

- Lamp Base
- Adjustable Wooden Arm Assembly
- Lamp Shade with E27 Socket
- Power Cord with On/Off Switch
- User Manual

Note: The light bulb is not included and must be purchased separately.

3. SETUP INSTRUCTIONS

The Aigostar Retro Desk Lamp is designed for tool-free setup. Follow these steps to assemble your lamp:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Place the Base:** Position the lamp base on a stable, flat surface.
3. **Attach Arm Assembly:** The wooden arm assembly is pre-attached to the base and lamp head. Ensure all joints are securely tightened.
4. **Install Bulb:** Screw an E27 base bulb (maximum 40W) into the lamp socket. Do not overtighten.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet.



No Flicker



Iron Paint



Solid Wood



Stable



Height Adjustable



Figure 2: Tool-free setup for quick assembly.



Figure 3: Overview of lamp components.



Figure 4: Lamp dimensions and bulb specifications.

4. OPERATING INSTRUCTIONS

Your Aigostar Retro Desk Lamp is designed for ease of use and flexibility.

4.1 Turning On/Off

Locate the convenience button (switch) on the power cord. Press the switch to turn the lamp on or off.

4.2 Adjusting the Lamp Arm

The lamp features a swivel hinge arm and multiple adjustable joints, allowing you to direct light precisely where needed. Gently loosen the wing nuts at the joints, adjust the arm to your desired position, and then tighten the wing nuts to secure it.

- The lamp head can rotate up to 210 degrees.
- The upper arm can adjust by 60 degrees.
- The lower arm can adjust by 15 degrees.



Figure 5: Demonstrating the adjustable design of the lamp.



Figure 6: Specific adjustment angles for optimal light positioning.

5. MAINTENANCE

5.1 Cleaning

To clean the lamp, ensure it is unplugged from the power outlet. Use a soft, dry cloth to wipe down the surfaces. Do not use abrasive cleaners or solvents, as these may damage the finish.

5.2 Bulb Replacement

Before replacing the bulb, always unplug the lamp and allow the old bulb to cool completely. Unscrew the old E27 bulb and screw in a new E27 bulb, ensuring it does not exceed 40W. Refer to Figure 4 for bulb

specifications.

6. TROUBLESHOOTING

- **Lamp does not turn on:**
 - Check if the power cord is securely plugged into the wall outlet.
 - Ensure the bulb is correctly screwed into the socket and is not burnt out.
 - Verify that the on/off switch on the power cord is in the 'on' position.
- **Light flickers:**
 - Tighten the bulb in the socket.
 - Try a different bulb to rule out a faulty bulb.
- **Lamp arm is loose:**
 - Tighten the wing nuts at the adjustable joints to secure the arm in place.

7. SPECIFICATIONS

Feature	Specification
Model Number	218188
Product Dimensions (D x W x H)	16D x 16W x 45.5H cm
Item Weight	1.38 Kilograms
Color	Grey
Base Material	Wood
Lampshade Material	Iron
Lamp Socket	E27
Max Wattage	40.00 W
Switch Type	Touch (Inline Switch)
Special Features	Adjustable Arm
Power Source	Corded Electric
Indoor/Outdoor Use	Indoor
Country of Origin	China

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Aigostar customer service directly. Keep your purchase receipt as proof of purchase.

