

[Manuals.plus](#) /

› [COMSREV](#) /

› COMSREV Shoe Display Case Model xiezi001 Instruction Manual

## COMSREV xiezi001

# COMSREV Shoe Display Case Instruction Manual

Model: xiezi001

## 1. INTRODUCTION

Thank you for choosing the COMSREV Shoe Display Case. This manual provides essential information for the proper setup, operation, and maintenance of your new display case. Please read these instructions carefully before use and retain them for future reference.

This display case is designed to showcase and protect your valuable footwear, featuring a wooden frame, clear acrylic door with 98% UV protection, and a lockable mechanism. It is suitable for wall mounting and requires no assembly.



*Image 1.1: The COMSREV Shoe Display Case, showcasing two sneakers.*

## 2. SAFETY INFORMATION

- Ensure the display case is securely mounted to a sturdy wall structure to prevent falling. Use appropriate hardware for your wall type (not included).
- Handle the acrylic door with care to avoid scratches.
- Keep keys out of reach of children.
- Do not overload the display case beyond its intended capacity.

### 3. PACKAGE CONTENTS

---

Your COMSREV Shoe Display Case package includes:

- 1 x COMSREV Shoe Display Case (Model: xiezi001)
- 1 x Parts Bag (containing keys and possibly mounting screws/anchors, though specific mounting hardware may vary)

### 4. SETUP & INSTALLATION

---

#### 4.1. Unpacking

Carefully remove the display case from its packaging. Inspect for any damage. The acrylic door has protective stickers on both sides; gently peel these off before use.

#### 4.2. No Assembly Required

The COMSREV Shoe Display Case comes pre-assembled and ready for installation. No additional assembly steps are needed.

#### 4.3. Wall Mounting

The display case is designed for wall mounting. It features a sawtooth hanger on the back for secure installation.

1. Choose a suitable location on a sturdy wall.
2. Measure the distance between the wall mounting points on the back of the case.
3. Mark the corresponding points on your wall.
4. Install appropriate wall anchors and screws (not included) suitable for your wall material (e.g., drywall, wood stud, concrete). Ensure the screws are securely fastened and protrude enough to engage the sawtooth hanger.
5. Carefully lift the display case and align the sawtooth hanger with the installed screws. Gently lower the case until it is securely seated on the wall.
6. Verify the case is level and stable before placing items inside.

# Dimension parameter

Fit for Size 15



Sneaker



High-tops



Leisure

Image 4.1: Product dimensions and shoe compatibility.

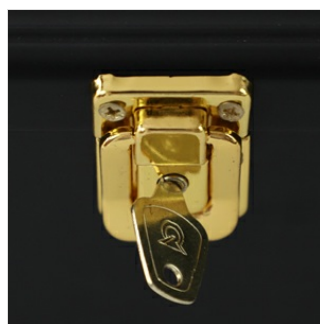


Image 4.2: Detail of the wall mounting bracket.

## 5. OPERATION

### 5.1. Opening and Closing the Door

The display case features a hinged acrylic door. Gently pull the door open from the side opposite the hinges. To close, push the door firmly until it latches.



*Image 5.1: Detail of the door hinge.*

## **5.2. Using the Lock Mechanism**

The display case is equipped with a metal anti-theft lock for added security.

1. To lock: Insert the provided key into the lock and turn it to secure the door.
2. To unlock: Insert the key and turn it in the opposite direction.




*Image 5.2: Detail of the lock mechanism with key.*

## **5.3. Adjusting the Shoe Racks**

The internal metal shoe racks can be slightly rotated left and right to adjust the display angle of your shoes. This allows for a customized presentation of your footwear.

# Adjustable metal shoe rack

You can slightly turn the shoe rack left and right to show your love shoes according to your favorite angle

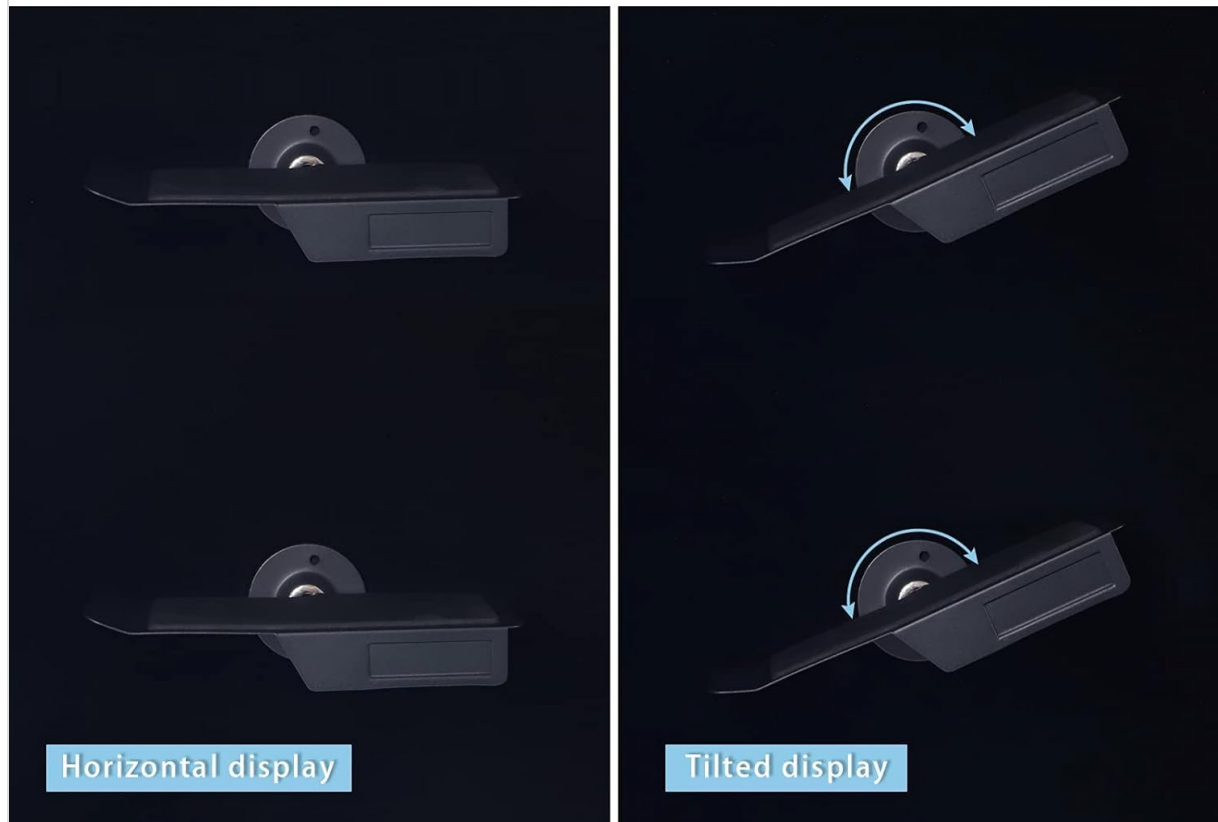

*Image 5.3: Adjustable metal shoe rack for varied display angles.*

## 5.4. Using Display Labels

You can attach small labels beneath the shoe racks to record information such as shoe size, acquisition date, or a brief story about the footwear. This feature helps organize and personalize your collection.



*Image 5.4: Example of a display label on the shoe rack.*

## 6. MAINTENANCE

### 6.1. Cleaning the Acrylic Door

To clean the clear acrylic door, use a soft, lint-free cloth and a mild, non-abrasive cleaner specifically designed for acrylic or plastic. Avoid using ammonia-based cleaners, paper towels, or abrasive materials,

as these can scratch the surface.

### 6.2. Cleaning the Wooden Frame

Wipe the wooden frame with a soft, dry cloth. For stubborn marks, a slightly damp cloth with mild soap can be used, followed immediately by drying with a clean, dry cloth. Avoid excessive moisture.

### 6.3. Dust Protection

The sealed design of the display case helps protect your shoes from dust and potential UV damage, preserving their condition over time.

## 7. TROUBLESHOOTING

### 7.1. Case Feels Loose After Mounting

Ensure that the wall anchors and screws are appropriate for your wall type and are securely installed. Re-check the engagement of the sawtooth hanger with the screws. If necessary, consult a professional for secure installation.

### 7.2. Acrylic Door Appears Cloudy or Scratched

Ensure all protective films have been removed from both sides of the acrylic door. If scratches are present, they may be permanent. For cloudiness, clean with an approved acrylic cleaner and a soft cloth.

### 7.3. Lock Mechanism Not Functioning Smoothly

Ensure the key is fully inserted and turned correctly. Do not force the key. If the mechanism is stiff, a small amount of graphite lubricant can be applied to the keyhole.

## 8. SPECIFICATIONS

| Feature                 | Detail                                                     |
|-------------------------|------------------------------------------------------------|
| Product Dimensions      | 22"L x 5.8"W x 17"H (55.88 cm L x 14.73 cm W x 43.18 cm H) |
| Item Weight             | 12.13 pounds (5.5 kg)                                      |
| Material                | Wood, Metal, Acrylic                                       |
| Color                   | Black                                                      |
| Mounting Type           | Wall Mount                                                 |
| Assembly Required       | No                                                         |
| Shoe Size Compatibility | Approximately US size 15                                   |
| UV Protection           | 98% (Acrylic Door)                                         |
| Lockable                | Yes                                                        |

# Specifications

|              |                          |                      |                                 |
|--------------|--------------------------|----------------------|---------------------------------|
| Product Size | 17 x 5.8 x 22 inches     | Weight               | 12.13 pounds                    |
| Shoe size    | Approximately US size 15 | Wall-mounted         | Yes                             |
| Material     | Wood&Metal&Acrylic       | No assembly required | Yes                             |
| Colour       | Black & Cherry           | Package content      | Shoe cabinet,<br>parts bag, key |

Image 8.1: Detailed product specifications.

## 9. PRODUCT VIDEO

Watch this video for a visual overview of the COMSREV Shoe Display Case, demonstrating its features and how it can be used to display your footwear.

Your browser does not support the video tag.

Video 9.1: COMSREV 2-Tier Shoe Display Case overview. This video demonstrates the product's design, features, and how it can be integrated into a living space.

## 10. WARRANTY & SUPPORT

### 10.1. Warranty Information

COMSREV products are manufactured to high-quality standards. For specific warranty details, please refer to the product packaging or contact customer support. Keep your purchase receipt as proof of purchase.

### 10.2. Customer Support

If you have any questions, concerns, or require assistance with your COMSREV Shoe Display Case, please contact our customer support team through the retailer's platform or the official COMSREV website.