

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [COSORI](#) /

› [COSORI 6.8Qt Dual Blaze Smart Air Fryer User Manual](#)

COSORI CAF-P583S-KUS

COSORI 6.8Qt Dual Blaze Smart Air Fryer User Manual

Brand: COSORI | Model: CAF-P583S-KUS

INTRODUCTION

Welcome to the COSORI Dual Blaze 6.8-Quart Smart Air Fryer. This appliance is engineered to provide a seamless and efficient cooking experience, delivering crispy and delicious meals with minimal effort. Its innovative Dual Blaze technology ensures even cooking without the need for preheating or shaking, making your cooking process faster and more convenient. This manual provides essential information for safe operation, setup, usage, maintenance, and troubleshooting.

IMPORTANT SAFETY INFORMATION

Before using your COSORI Air Fryer, please read all instructions thoroughly to prevent property damage, personal injury, or death. Always follow basic safety precautions when using electrical appliances.

- Do not immerse the cord, plug, or housing in water or liquid.
- Keep the appliance and its cord out of reach of children.
- Do not use accessories not recommended by the manufacturer.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Allow adequate ventilation around the air fryer during operation.

For detailed safety guidelines, please refer to the official [Safety Information PDF](#).

PRODUCT OVERVIEW

The COSORI Dual Blaze Air Fryer features a sleek design with intuitive controls and a spacious cooking basket. Key components include the main unit, control panel, air outlet, power cord, and the removable crisper plate and basket.



The COSORI 6.8Qt Dual Blaze Smart Air Fryer, showcasing its main unit and smart app integration.



Illustration of the dual heating elements, providing 360 Crispiness for both top and bottom of food.



The air fryer designed for effortless cooking, eliminating the need for preheating or shaking ingredients.



Overview of the 12 available cooking settings, including 6 functions and 6 presets for various dishes.



The spacious 6.8-quart square basket, capable of cooking large portions like a whole chicken or 4 lbs of fries.



The detachable crisper plate, designed for easy cleaning and dishwasher compatibility.



The air fryer's smart capabilities, allowing control and access to recipes via the VeSync app and Alexa.

SETUP

Before First Use

1. Remove all packaging materials from the air fryer and its accessories.
2. Wipe the exterior of the air fryer with a damp cloth.
3. Wash the basket and crisper plate thoroughly with hot, soapy water or in the dishwasher. Ensure they are completely dry before reassembling.
4. Perform a "Test Run" as described in the [User Manual \(PDF\)](#) to ensure the air fryer is working correctly and to eliminate any manufacturing odors.

Placement

Place the air fryer on a stable, flat, heat-resistant surface. Ensure there is at least 13 cm (5 inches) of space behind and above the air fryer to allow for proper air circulation. Also, leave enough room in front of the air fryer to comfortably remove the basket.

OPERATING INSTRUCTIONS

The COSORI Dual Blaze Air Fryer offers 12 cooking options, including 6 functions and 6 presets, for versatile meal preparation. The temperature can be set from 175 F to 400 F, and the timer from 1 to 60 minutes.

Basic Operation

1. Place food in the air fryer basket.
2. Select your desired cooking function or preset from the control panel.
3. Adjust temperature and time as needed.
4. Press start to begin cooking. The Dual Blaze technology will ensure even cooking without the need for shaking or flipping.

Smart Control with VeSync App & Alexa

Enhance your cooking experience by connecting your air fryer to the VeSync app. This allows for remote control, voice commands via Alexa, and access to over 100 step-by-step recipes with nutrition facts.

Your browser does not support the video tag.

Video: Learn how to unlock the full convenience of your Dual Blaze Air Fryer using the VeSync app for smart control.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

Cleaning the Basket and Crisper Plate

The basket and crisper plate feature a non-stick coating and are dishwasher safe, making cleanup effortless. You can also wash them by hand using warm, soapy water and a non-abrasive sponge.

Cleaning the Interior and Exterior

Wipe the interior and exterior of the air fryer with a soft, damp cloth. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or scouring pads, as they can damage the surfaces.

Your browser does not support the video tag.

Video: A demonstration of how easy it is to clean the COSORI Dual Blaze Air Fryer components.

TROUBLESHOOTING

If you encounter any issues with your air fryer, please consult the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Contact customer support if the issue persists.
Food is not crispy.	Basket overloaded; insufficient oil; incorrect temperature/time.	Do not overload the basket. Lightly spray food with oil. Adjust temperature and cooking time according to recipe or food type.
White smoke coming from air fryer.	Grease residue; fatty foods; food particles.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, drain excess grease. Remove any food particles from the heating element.
App connection issues.	Wi-Fi signal weak; incorrect setup; app outdated.	Ensure your air fryer is within Wi-Fi range. Follow the app's pairing instructions carefully. Update the VeSync app to the latest version.

SPECIFICATIONS

Feature	Value
Brand	COSORI
Model Name	CAF Pro

Feature	Value
Product Dimensions	12.9"D x 11.7"W x 13.8"H
Color	Modern Grey
Capacity	6.8 Quarts
Material	Easy Clean Panel, Aluminum, Non-stick
Recommended Uses For Product	Roast, Keep Warm, Broil, Bake, Reheat, Air Fry
Output Wattage	1750
Item Weight	13.7 Pounds
Wattage	1750 watts
Voltage	120 Volts (AC)
Control Method	App
Has Nonstick Coating	Yes
Min Temperature Setting	80 Degrees Celsius
Controller Type	Amazon Alexa
Is Dishwasher Safe	Yes
Max Temperature Setting	400 Degrees Fahrenheit
UPC	810043375382
Manufacturer	COSORI
Country of Origin	China
Item model number	CAF-P583S-KUS
Date First Available	April 15, 2024

WARRANTY AND SUPPORT

COSORI products are manufactured with high-quality materials and craftsmanship. For specific warranty details and to register your product, please refer to the official COSORI website or the full [User Manual \(PDF\)](#). For further assistance, product information, or to explore additional COSORI accessories, please visit the [COSORI Brand Store on Amazon](#).

