

[Manuals.plus](#) /

› [AIKE](#) /

› AIKE 500ml Automatic Soap Dispenser User Manual

AIKE AK1335

AIKE 500ml Automatic Soap Dispenser User Manual

MODEL: AK1335

Introduction

Thank you for choosing the AIKE 500ml Automatic Soap Dispenser. This touchless dispenser is designed for convenience and hygiene, featuring a large capacity, quick infrared sensor response, and adjustable dispensing levels. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your device.



Figure 1: AIKE 500ml Automatic Soap Dispenser. This image shows the sleek black design of the dispenser with its transparent reservoir, allowing visibility of the liquid soap level.

Setup

1. **Unboxing and Contents Verification:** Carefully remove all components from the packaging. Verify that all items are present: one AIKE Automatic Soap Dispenser, one user manual, one USB charging cable, and one tip card.

Ce Que Vous Obtenez

! Adaptateur non inclus



Distributeur de Savon x1



Manuel x1



Carte de Conseils x1



Câble de Chargement x1

Figure 2: Package Contents. This image displays the complete set of items included in the product packaging, ensuring you have everything needed for setup.

2. **Initial Charging:** Before first use, fully charge the dispenser. Connect the provided USB charging cable to the magnetic charging port on the side of the dispenser and plug the other end into a USB power source (adapter not included). A full charge can last up to 3 months depending on usage frequency.



Figure 3: USB Magnetic Charging. This image highlights the convenient magnetic USB charging port, emphasizing the long-lasting 2000 mAh built-in lithium battery.

3. **Filling the Dispenser:** Open the large top cap of the dispenser. Pour liquid soap into the transparent reservoir. The 500ml capacity reduces the frequency of refills. Ensure not to overfill.

LARGE OUVERTURE

Se remplit facilement sans
gouttes désagréables



Figure 4: Large Opening for Refilling. This image demonstrates the wide opening at the top, designed for easy and mess-free refilling of liquid soap.

4. **Placement Options:** The dispenser can be placed on a countertop or mounted on a wall to save space.

- *Countertop Placement:* Simply place the dispenser on a flat, stable surface near your sink.
- *Wall Mounting:* Use appropriate hardware (not included) to securely mount the dispenser to a wall. Ensure the mounting location is suitable for the dispenser's dimensions (16L x 8.5W x 23H cm).



Figure 5: Dimensions and Placement. This image illustrates the compact size of the dispenser and its suitability for both countertop and wall-mounted use in a kitchen or bathroom setting.

Operating Instructions

1. **Powering On/Off:** Press and hold the power button located on the top of the dispenser for a few seconds to turn it on or off.
2. **Dispensing Soap:** Place your hand or a sponge under the nozzle. The infrared motion sensor will detect your presence and dispense soap automatically within 0.2 seconds.



Figure 6: Automatic Dispensing. This image shows the touchless operation of the dispenser, providing soap quickly and hygienically for handwashing.

3. **Adjusting Dispensing Volume:** The dispenser offers 5 adjustable levels for soap volume. Press the power button briefly to cycle through the levels. Level 1 dispenses the least amount, while Level 5 dispenses the most. Choose a lower setting for handwashing and a higher setting for dishwashing or other needs.

5 Niveaux

Pompe À Capteur RéGlable Sur



Figure 7: Adjustable Dispensing Levels. This image illustrates the five different volume settings, allowing users to customize the amount of soap dispensed per use.

4. **Child Lock Function:** The dispenser may feature a child lock function to prevent accidental activation. Refer to the included tip card or the full user manual for specific instructions on how to activate and deactivate this feature.

Maintenance

- **Refilling:** When the transparent bottle indicates low soap levels, refill the dispenser by opening the top cap and pouring in liquid soap. The transparent design makes it easy to monitor the soap level.
- **Cleaning:** To clean the exterior, wipe with a soft, damp cloth. Do not submerge the dispenser in water. For internal cleaning or if the dispenser is clogged, empty the reservoir, fill it with warm water, and activate the dispenser several times until clear water is dispensed. This helps clear any soap residue from the pump mechanism. Allow to air dry completely before refilling with soap.
- **Charging:** Recharge the dispenser when the battery indicator shows low power. Use the provided USB cable. A full charge takes approximately 15 hours, but this ensures a long operating time. To preserve battery life, use a USB power source that does not exceed 1A.

Troubleshooting

Problem	Possible Cause	Solution
Dispenser not turning on.	Low battery.	Charge the dispenser fully using the provided USB cable.
Soap not dispensing or dispensing slowly.	• Reservoir empty. • Soap too thick or clogged nozzle. • Sensor obstructed.	• Refill the reservoir. • Clean the dispenser's internal pump mechanism by running warm water through it. If soap is too thick, dilute it slightly with water. • Ensure nothing is blocking the infrared sensor.
Dispenser blinking but no soap.	Internal blockage or airlock.	Empty the liquid, clean the interior with a bottle brush (if accessible) or by running warm water through it. Allow to dry, then reactivate while empty before refilling.
Accidental dispensing.	Sensor triggered unintentionally.	Ensure the dispenser is placed in an area where the sensor will not be accidentally triggered. Consider using the child lock function if available.

Specifications

Feature	Detail
Brand	AIKE
Model Number	AK1335
Color	Black
Material	Plastic
Item Weight	400 g
Product Dimensions (L x W x H)	16 x 8.5 x 23 cm
Liquid Volume Capacity	500 ml
Battery	2000 mAh Lithium (Rechargeable)
Dispensing Speed	0.2 seconds
Dispensing Levels	5 adjustable levels

Warranty and Support

AIKE offers a **one-year warranty** for this product. This warranty covers defects in materials and workmanship under normal use. If the product is damaged due to non-human reasons, please contact AIKE customer service for assistance. They will arrange for a replacement dispenser if applicable.

For further support or inquiries, please refer to the contact information provided in your product packaging or visit the official AIKE website.