

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [LLIVEKIT](#) /

> [LLIVEKIT 10-In-1 Air Fryer User Manual](#)

LLIVEKIT GLA-G10

LLIVEKIT 10-In-1 Air Fryer User Manual

Model: GLA-G10

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The auto shut-off function allows you to check your food easily and safely when cooking. To pull out the basket to check and the air fryer stops working; to push it back securely and it resumes working.

PRODUCT OVERVIEW

The LLIVEKIT 10-In-1 Air Fryer is designed to provide a healthier way to cook your favorite fried foods with little to no oil. It utilizes 360° hot air circulation heating for thorough and even cooking.



Image: The LLIVEKIT 10-In-1 Air Fryer in black and silver, with its cooking basket partially pulled out, revealing cooked chicken wings inside. This illustrates the appliance's design and capacity.



Image: A detailed diagram highlighting the key components of the air fryer, including the non-stick basket, the ergonomic safe handle design, the air inlet and outlet for circulation, and stable non-slip feet for secure placement.

What's in the Package?



Image: An illustration showing the typical contents included in the LLIVEKIT Air Fryer package: the 7-quart air fryer unit, a recipe book with 21 recipes, the user manual, and the non-stick basket.

- LLIVEKIT 7-Quart Air Fryer Unit
- Non-Stick Removable Basket
- Recipe Book (21 recipes included)
- User Manual

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials from the air fryer. Ensure all components listed in the "What's in the Package?" section are present.
2. **Initial Cleaning:** Before first use, clean the removable basket and pan with warm soapy water. Wipe the exterior of the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation. Ensure there is adequate space around the air inlet and outlet vents.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

Control Panel Overview

The LLIVEKIT Air Fryer features an intuitive LED digital touchscreen for easy operation.

Adjustable Temp & Time

Allow You to Cook Your Own Recipes



Image: A close-up view of the air fryer's top panel, illustrating the digital touchscreen controls for temperature setting (80-200°C), time setting (1-60 minutes), power ON/OFF, and the 10 preset menu options.

Smart LED Screen



Image: The smart LED screen of the LLIVEKIT Air Fryer, showing the digital display for temperature and time, along with various cooking icons representing different preset functions.

Basic Operation

1. **Power On:** Press the power button on the touchscreen to turn on the air fryer.
2. **Adjust Temperature and Time:** Use the temperature controls (180-400°F / 80-200°C) and time controls (0-60 minutes) to set your desired cooking parameters. The air fryer also has a heat preservation time setting of up to 2 hours.
3. **Select Preset Menu:** The air fryer offers 10 cooking modes. You can select a preset for common foods like chips, chicken wings, pizzas, steaks, cakes, and bread.

8 Preset Menus

Including Keep Warm, Dehydrator, Ferment



French fries : 200°C 20mins



Steak : 180°C 16mins



Chicken : 180°C 8mins



Fish : 200°C 15mins



Pizza : 200°C 9mins



Roast Meat: 180°C 10-25mins



Cake : 180°C 14mins



Shrimp : 180°C 10mins

Image: A visual representation of 8 common preset menus available on the LLIVEKIT Air Fryer, including suggested temperatures and times for items like French fries, steak, chicken, fish, pizza, roast meat, cake, and shrimp.

- 4. Start Cooking:** Once settings are adjusted, press the start button (if applicable, or it may start automatically after setting).
- 5. Auto Shut-off Function:** For safety and convenience, the air fryer will automatically pause operation when the basket is pulled out. It will resume cooking once the basket is securely reinserted.

Using the Basket



Image: A three-step guide demonstrating how to safely separate the air fryer basket from the pan: 1. Pull out the basket. 2. Slide the clear button guard forward. 3. Press the release button to detach the basket from the pan.

The removable basket and pan are designed for easy handling and cleaning. To separate the basket from the pan, first pull the basket out of the main unit. Then, slide the clear button guard forward and press the release button to detach the basket.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your LLIVEKIT Air Fryer.

Non-Stick Coating

———— Easy to Clean ————



Dishwasher Safe



Washing by Hand



Clean with Soft Sponge



Image: Instructions for cleaning the non-stick basket, indicating it is dishwasher safe for the top rack and can also be washed by hand using a soft sponge to avoid damaging the coating.

- **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- **Basket and Pan:** The removable non-stick basket and pan are dishwasher-safe. For best results and to prolong the non-stick coating, hand washing with warm soapy water and a soft sponge is recommended. Do not use abrasive cleaning materials or metal scrubbers.
- **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Interior:** Clean the interior of the air fryer with a damp cloth and mild detergent if necessary. Ensure no food residue remains.
- **Storage:** Store the air fryer in a cool, dry place when not in use. Ensure it is clean and dry before storing.

TROUBLESHOOTING

If you encounter issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; unit malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket overloaded; food not shaken/flipped during cooking; incorrect temperature/time.	Do not overload the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed for specific recipes.
White smoke coming from the appliance.	Grease residue from previous use; fatty food being cooked.	Clean the basket and pan thoroughly after each use. For fatty foods, consider using parchment paper or draining excess fat during cooking.
Food is not crispy.	Too much moisture; not enough oil (if recipe calls for it); basket overloaded.	Pat food dry before air frying. A light spray of oil can help with crispiness. Ensure the basket is not overcrowded.

If the problem persists after trying these solutions, please contact LLIVEKIT customer support for further assistance.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	LLIVEKIT
Model	GLA-G10
Capacity	7 Liters (7 Quart)
Color	Black and Silver
Material	Plastic
Wattage	1700 watts
Controller Type	Touch control
Product Dimensions	16.73 x 15.16 x 15.16 inches
Item Weight	16.66 pounds
Special Features	10 Cooking Presets, 7L large capacity, Non-Stick Removable Basket, LED Touchscreen, Oil-Less Air Fryer, with Recipe Book
Certifications	CE, CB, GS, LFGB, Reach, FDA, ETL, RoHS Approved

WARRANTY AND SUPPORT

Warranty information for your LLIVEKIT Air Fryer is typically provided with your purchase documentation. Please refer to the warranty card or contact the retailer where you purchased the product for specific details regarding warranty coverage and terms.

For technical support, troubleshooting assistance, or any other inquiries, please contact LLIVEKIT customer service.

Contact information can usually be found on the product packaging, the official LLIVEKIT website, or through your retailer. Please have your model number (GLA-G10) and purchase details ready when contacting support.

© 2024 LLIVEKIT. All rights reserved.