

## Burg-Wächter 2620 1230 C 120

# Burg-Wächter 2620 1230 C 120 Bicycle Combination Lock User Manual

Model: 2620 1230 C 120

## 1. INTRODUCTION

---

This manual provides essential instructions for the proper use, setup, and maintenance of your Burg-Wächter 2620 1230 C 120 Bicycle Combination Lock. Please read this manual thoroughly before using the product to ensure safe and effective operation. Keep this manual for future reference.

## 2. SAFETY INSTRUCTIONS

---

- Ensure the lock is securely fastened before leaving your bicycle unattended.
- Do not attempt to force the lock if the combination is incorrect.
- Keep the combination code confidential and store it in a safe place.
- Regularly inspect the lock for any signs of wear or damage.

## 3. PACKAGE CONTENTS

---

The package should contain the following item:

- 1 x Burg-Wächter 2620 1230 C 120 Bicycle Combination Lock



Image 1: The Burg-Wächter 2620 1230 C 120 Bicycle Combination Lock. This image shows the black spiral cable lock coiled, with the four-digit combination mechanism visible at one end, displaying numbers like 7776, 8887, and 0008. The "BURG WÄCHTER" logo is also visible on the lock body.

## 4. SETUP: SETTING YOUR COMBINATION

---

Your Burg-Wächter 2620 1230 C 120 lock comes with a preset combination, typically 0000. Follow these steps to set your personal four-digit combination:

- 1. Open the Lock:** Align the preset combination (e.g., 0000) with the indicator marks on the lock body and pull the shackle open.
- 2. Locate the Reset Mechanism:** On the side of the lock mechanism, locate a small reset button or screw. This is often a small knob or a slot that can be turned with a screwdriver or a pen tip.
- 3. Enter Reset Mode:**  
*For a button:* Press and hold the reset button.  
*For a screw/knob:* Turn the screw/knob 90 degrees clockwise (or as indicated by an arrow) until it clicks into position.
- 4. Set New Combination:** While in reset mode, rotate the number dials to your desired four-digit combination. Choose a memorable but secure combination.
- 5. Exit Reset Mode:**  
*For a button:* Release the reset button.  
*For a screw/knob:* Turn the screw/knob back 90 degrees counter-clockwise to its original position.
- 6. Test the New Combination:** Scramble the dials, then enter your new combination and attempt to open the lock. Ensure it opens correctly before scrambling the dials again to lock it.

**Important:** Make a note of your new combination and store it in a secure location. There is no master key or override for combination locks if the code is forgotten.

## 5. OPERATING THE LOCK

---

### 5.1. Locking Your Bicycle

1. Wrap the spiral cable around your bicycle frame and a secure, immovable object (e.g., a bike rack, lamppost).

2. Insert the free end of the cable into the locking mechanism.
3. Scramble the combination dials to secure the lock.
4. Gently pull on the cable to ensure it is fully locked and cannot be removed.

## 5.2. Unlocking Your Bicycle

1. Align your personal four-digit combination with the indicator marks on the lock body.
2. Pull the shackle or the cable end out of the locking mechanism.
3. The lock is now open.

## 6. MAINTENANCE

- **Cleaning:** Wipe the lock periodically with a damp cloth to remove dirt and grime. Avoid harsh chemicals.
- **Lubrication:** If the combination dials become stiff, apply a small amount of silicone-based lubricant to the moving parts. Do not use oil-based lubricants as they can attract dirt.
- **Storage:** Store the lock in a dry place when not in use to prevent corrosion.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lock will not open with combination.	Incorrect combination entered. Dials not perfectly aligned. Combination forgotten.	Double-check the combination. Ensure each number is precisely aligned with the indicator. If forgotten, the combination cannot be reset without the original code.
Dials are stiff or difficult to turn.	Dirt or grime accumulation. Lack of lubrication.	Clean the dials with a damp cloth. Apply a small amount of silicone-based lubricant.
Lock mechanism feels loose or damaged.	Wear and tear. Physical damage.	Discontinue use if security is compromised. Consider replacing the lock.

## 8. SPECIFICATIONS

- **Model:** Burg-Wächter 2620 1230 C 120
- **Lock Type:** 4-Digit Combination Cable Lock
- **Length:** 120 cm (approximately 47.2 inches)
- **Diameter:** 8 mm (approximately 0.31 inches)
- **Material:** Steel cable with plastic coating
- **Color:** Black
- **Weight:** Approximately 173 g (0.38 lbs)
- **Special Features:** Anti-theft, no key required

## 9. WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the official Burg-

Wächter website or contact your retailer. Keep your proof of purchase for any warranty claims.

**Manufacturer:** BURG-WÄCHTER

**Website:** [www.burg.biz](http://www.burg.biz) (This is a general link, specific support might vary by region)