

Pendancy PendancyWJ118A4US

Pendancy Mesh Zipper Pouch (Model: PendancyWJ118A4US) Instruction Manual

Your guide to using and maintaining your Pendancy Mesh Zipper Pouch.

1. INTRODUCTION

The Pendancy Mesh Zipper Pouch is designed for organizing and protecting your documents and small items. It features a lightweight, double-layer design with a clear mesh pocket and a waterproof main compartment, making it suitable for various uses such as office, travel, or hobby storage.

Key features include:

- **Lightweight and Portable:** Weighing approximately 90g, this pouch is easy to carry.
- **Double-Layered Design:** Includes a clear mesh zippered pocket for easy item identification and a main compartment.
- **Durable Material:** Constructed from ultra-light nylon thread, ensuring strength, durability, and breathability.
- **Water-Resistant Main Compartment:** Protects contents from splashes and light rain.
- **Integrated Handle:** For convenient carrying or hanging.
- **Name Label:** A dedicated area for labeling contents for quick recognition.



Image 1.1: The Pendancy Mesh Zipper Pouch, showcasing its design and handle.

2. SETUP

The Pendancy Mesh Zipper Pouch requires minimal setup. Follow these steps before initial use:

1. **Unpack:** Carefully remove the pouch from its packaging.
2. **Inspect:** Check the pouch for any signs of damage or manufacturing defects. Ensure zippers operate smoothly.
3. **Air Out (Optional):** If a new product scent is present, allow the pouch to air out in a well-ventilated area for a few hours.
4. **Label:** Utilize the designated name label area to identify the pouch's contents or owner, if desired.

3. OPERATING INSTRUCTIONS

Using your Pendancy Mesh Zipper Pouch is straightforward:

- **Main Compartment:** Use the larger, inner compartment for items requiring water resistance, such as

important documents, books, or electronic accessories.

- **Mesh Pocket:** The outer mesh pocket is ideal for items you need to quickly identify without opening the main pouch, such as pens, small notebooks, or frequently accessed papers. Note that the mesh pocket is *not* waterproof.
- **Zipper Operation:** Ensure both zippers are fully closed to secure contents. The smooth zipper design allows for easy opening and closing.
- **Carrying:** Use the sturdy handle strap for comfortable carrying by hand or hanging on a hook.

• Specification •

Size:

main pocket: 28 x 35 cm

side pocket: 23 x 35 cm

Weight: 150g



Image 3.1: Illustration of the double-layer design with a clear mesh pocket and main compartment.

Your browser does not support the video tag.

Video 3.2: A demonstration of the Pendancy mesh zipper pouch, highlighting its features and use.

4. MAINTENANCE

Proper care will extend the life of your Pendancy Mesh Zipper Pouch:

- **Cleaning:** For general cleaning, wipe the pouch with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.

- **Drying:** Allow the pouch to air dry completely before storing or reusing, especially if the waterproof main compartment has been exposed to moisture.
- **Storage:** Store the pouch in a cool, dry place away from direct sunlight when not in use. Its foldable nature allows for compact storage.
- **Avoid Sharp Objects:** While durable, the nylon mesh is not designed for cutting. Avoid placing sharp objects directly against the mesh to prevent damage.



Image 4.1: The waterproof main pocket, demonstrating its ability to repel water.

5. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Solution
Zipper is sticking or difficult to move.	Apply a small amount of zipper lubricant (e.g., wax, graphite from a pencil) to the zipper teeth and gently work the slider back and forth. Ensure no fabric is caught in the zipper.
Pouch appears dirty.	Wipe with a damp cloth and mild soap. For stubborn stains, a soft brush can be used gently. Air dry completely.
Contents in mesh pocket get wet.	The mesh pocket is not waterproof. Store items sensitive to moisture in the main, waterproof compartment.

6. SPECIFICATIONS

Detailed specifications for the Pendancy Mesh Zipper Pouch (Model: PendancyWJ118A4US):

- Color:** Gray
- Material:** Nylon
- Style:** Stamp Type A4 Size
- Sheet Size:** A4
- Number Of Pockets:** 2 (one main, one mesh)
- Fastener Capacity:** Approximately 50 sheets
- Special Features:** Lightweight, Double Pocket, Waterproof Main Compartment, Handle
- Item Dimensions (L x W x Thickness):** 13.8" x 11" x 1" (35cm x 28cm x 2.5cm)
- Model Number:** PendancyWJ118A4US
- UPC:** 789371920598



Image 6.1: Detailed dimensions of the Pendancy Mesh Zipper Pouch.

7. WARRANTY AND SUPPORT

Pendancy products are manufactured to high-quality standards. While specific warranty details are not provided in this manual, for any product-related inquiries, support, or concerns, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for any potential claims.

Manufacturer: Pendancy Co.,Ltd

© 2024 Pendancy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09BKMM38W>

More documents and user manuals: **<https://manuals.plus/>**