

[Manuals.plus](#) /

› [uleway](#) /

› uleway G180 Mobile Phone User Manual

uleway G180

uleway G180 Mobile Phone User Manual

Model: G180

INTRODUCTION

This manual provides comprehensive instructions for the uleway G180 mobile phone. Designed for simplicity and ease of use, this device features large buttons, a clear display, and essential functions including an SOS button for emergencies. Please read this manual carefully to ensure proper operation and maintenance of your phone.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x uleway G180 Mobile Phone
- 1 x Micro USB Charger
- 1 x Battery
- 1 x Lanyard
- 1 x SIM Card Adapter
- 1 x User Manual (Multi-language)



Figure 1: Package contents including the uleway G180 phone, charger, battery, lanyard, SIM adapter, and user manual.

SETUP

1. Battery Installation

1. Remove the back cover of the phone by gently prying it open from the notch.
2. Insert the battery into the compartment, ensuring the gold contacts align with the phone's terminals.
3. Replace the back cover, pressing firmly until it clicks into place.

2. SIM Card and Micro SD Card Installation

The uleway G180 supports dual SIM cards and a Micro SD card up to 16GB (not included).

1. With the battery removed, locate the SIM card slots and Micro SD card slot.
2. Carefully insert your SIM card(s) into the designated slots. Ensure the cut corner of the SIM card matches the orientation shown on the phone.
3. If using a Micro SD card, insert it into its slot until it is securely seated.
4. Reinstall the battery and back cover.



Figure 2: Front view of the uleway G180 phone displaying a "SIM not inserted" message, indicating where SIM cards are needed.

3. Charging the Phone

1. Connect the Micro USB charger to the charging port on the phone.
2. Plug the charger into a power outlet.
3. The phone will indicate charging status on the screen. Allow the phone to charge fully before first use.
4. Alternatively, place the phone in the charging cradle (if included) to charge.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on, press and hold the **Red Call End/Power** button until the screen lights up.
- To power off, press and hold the **Red Call End/Power** button until the power off options appear, then select "Power off".

2. Making and Receiving Calls

- **Making a Call:** Enter the phone number using the keypad and press the **Green Call** button.
- **Receiving a Call:** When the phone rings, press the **Green Call** button to answer.
- **Ending a Call:** Press the **Red Call End/Power** button.

3. SOS Emergency Function

The SOS button is located on the back of the phone and allows you to quickly contact pre-set emergency numbers.

1. **Setting SOS Contacts:** Navigate to the "Settings" menu, then "SOS Settings" to add up to 5 emergency contacts.
2. **Activating SOS:** In an emergency, press and hold the **SOS button** on the back of the phone for a few seconds.
3. The phone will automatically call the pre-set emergency contacts in sequence until one answers. It will also send an emergency SMS message to these contacts.



Figure 3: A hand pressing the red SOS button located on the back of the uleway G180 phone, illustrating its emergency function.

4. Quick Dial

Assign frequently called numbers to specific keys for quick dialing.

- Go to "Contacts" or "Speed Dial Settings" in the menu.
- Select a number key (e.g., 2-9) and assign a contact from your phonebook.
- To quick dial, press and hold the assigned number key.

5. Flashlight

The phone includes a built-in flashlight.

- To turn on/off the flashlight, locate the dedicated flashlight switch on the side of the phone or access it via the "Tools" menu.



Figure 4: The uleway G180 phone with its flashlight activated, illuminating a dark area.

6. Other Functions

- **SMS:** Access the "Message" menu to compose and read text messages.
- **FM Radio:** Plug in headphones (not included) to use as an antenna, then access "FM Radio" from the menu.
- **MP3 Player:** Store MP3 files on a Micro SD card and access them via the "Multimedia" menu.
- **Bluetooth:** Pair with other Bluetooth devices via the "Settings" menu.
- **Calendar, Alarm, Calculator:** These tools are available in the "Tools" menu.
- **Language Settings:** The phone supports multiple languages including Spanish, English, French, Italian, and German. Adjust in "Settings".



Figure 5: The uleway G180 phone's display showing various menu icons such as Message, My files, Call logs, Multimedia, Tools, Settings, Contacts, and Alarm.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
- **Battery Care:** Do not expose the battery to extreme temperatures. Charge regularly, but avoid overcharging for extended periods.

- **Storage:** Store the phone in a cool, dry place away from direct sunlight and moisture.
- **Water Resistance:** This phone is not water-resistant. Avoid contact with liquids.

TROUBLESHOOTING

If you encounter issues with your uleway G180 phone, refer to the following common problems and solutions:

- **Phone does not power on:** Ensure the battery is correctly installed and charged. Connect the charger and try again.
- **"SIM not inserted" error:** Power off the phone, remove and reinsert the SIM card(s) to ensure proper seating.
- **Cannot make or receive calls:** Check network signal strength. Ensure SIM card is active and has credit. Verify call barring settings.
- **No sound from speaker:** Check volume settings. Ensure the phone is not in silent mode. If the issue persists, contact customer support.
- **Battery drains quickly:** Reduce screen brightness. Close unused applications. Ensure the battery is not old or damaged.
- **Phone freezes or is unresponsive:** Remove the battery, wait a few seconds, then reinsert it and power on the phone.

SPECIFICATIONS

Feature	Specification
Brand	uleway
Model Number	G180 (SC6531E)
Operating System	Nucleus OS
Screen Size	1.77 Inches
Connectivity	USB, Bluetooth, 2G GSM (900/1800 MHz)
Memory (RAM/ROM)	32 MB RAM + 32 MB ROM
Expandable Memory	Micro SD up to 16 GB (not included)
Battery Capacity	800 mAh Lithium-ion
Standby Time	Up to 150 hours
Talk Time	Up to 180 minutes
Special Features	SOS Button, Large Buttons, Flashlight, FM Radio, MP3 Player, Dual SIM, Quick Dial
Languages	Spanish, English, French, Italian, German

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact uleway customer service. Information regarding spare parts availability and software updates is not available at this time.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question