



Manuals.plus /

- › Acvoce /
- › Acvoce Garage Door Opener Keypad Instruction Manual

Acvoce 377LM, 940D, 139.53754

Acvoce Garage Door Opener Keypad Instruction Manual

Model: 377LM, 940D, 139.53754

INTRODUCTION

This manual provides detailed instructions for the installation, programming, and maintenance of your Acvoce Wireless Garage Door Opener Keypad. This keypad offers convenient keyless access to your garage, allowing you to operate up to three different 315MHz garage door openers with a 4-digit PIN.

Please read these instructions carefully before proceeding with installation and programming to ensure proper functionality and safety.

COMPATIBILITY

Important: This keypad is specifically designed to work **only** with Liftmaster, Chamberlain, and Sears Craftsman garage door openers that feature a **Purple Learn Button** and operate on a 315MHz frequency.

Before purchasing or installing, verify that your garage door opener has a purple learn button. This button is typically located on the motor unit of your garage door opener.



CHECK BEFORE TO MAKE SURE YOU CHOOSE THE RIGHT KEYPAD



**PURPLE LEARN
BUTTON**



**NOT COMPATIBLE
LEARN BUTTONS**

**RED
ORANGE**



YELLOW



GREEN



Figure 1: Identification of the Purple Learn Button. Ensure your garage door opener has this specific button for compatibility.

The keypad is not compatible with garage door openers that have red, orange, yellow, or green learn buttons.

PACKAGE CONTENTS

Upon opening the package, please ensure all the following items are present:

- Acvoce Wireless Keypad
- 9V Battery (pre-installed in the keypad)
- Mounting Screws (2)
- User Manual (this document)

Package Contents



Keypad



Instruction Manual



Battery
(Contained in keypad)



Mounting
Screws

Figure 2: Contents included in the Acvoce Keypad package.

INSTALLATION

The Acvoce keypad is designed for easy installation and can be mounted outdoors due to its weatherproof protective cover.

1. **Choose a Location:** Select a convenient location outside your garage, within easy reach, but out of the path of the garage door. Ensure the surface is flat and stable.
2. **Prepare for Mounting:** Open the keypad cover. The keypad comes with a pre-installed 9V battery.
3. **Mark Drill Holes:** Use the keypad as a template to mark the positions for the two mounting screws.
4. **Drill Pilot Holes:** Drill small pilot holes at the marked locations.
5. **Mount the Keypad:** Secure the keypad to the surface using the provided mounting screws. Do not overtighten.

6. **Close Cover:** Close the protective flip-up cover.



Figure 3: The Acvoce Wireless Keypad with its protective cover open, ready for installation.

PROGRAMMING AND OPERATION

This keypad can control up to three different garage door openers. Follow these steps to program your keypad:



Figure 4: The keypad's capability to control multiple garage doors.

1. Set Your Personal PIN:

- Press and hold the * and # buttons simultaneously until you hear a *single beep*. Release the buttons immediately after the beep. (Do not hold until the lights flash, as this indicates an error or different mode).
- Enter your desired 4-digit Personal Identification Number (PIN).
- Press the # button to confirm your PIN.

2. Program to Garage Door Opener:

- On your garage door opener motor unit, locate and press the **Purple Learn Button**. The LED indicator on the opener will light up. You have approximately 30 seconds to complete the next step.
- On the keypad, enter the 4-digit PIN you just set.
- Press the # button.
- Press the # button again. The garage door opener light should flash, indicating successful programming.
- Test the keypad by entering your PIN and pressing#. The garage door should activate.

3. Programming Additional Garage Doors (Channels 2 & 3):

- Repeat step 1 to set a new 4-digit PIN for the next channel.
- Repeat step 2, but after entering your PIN and pressing#, press the # button a third time for the second door, or a fourth time for the third door.

- Ensure the garage door opener light flashes to confirm successful programming for each additional door.

The keypad features an illuminated backlight for visibility in low-light conditions, ensuring easy access day or night.



Figure 5: The illuminated keypad for easy night-time use.

The keypad utilizes Security+ 2.0 Rolling Code Technology for enhanced security, providing a unique code with each use to prevent unauthorized access.

Keep Your Home Safe



Figure 6: Security features of the Acvoce keypad, including Security+ 2.0 Rolling Code Technology.

MAINTENANCE

The Acvoce keypad requires minimal maintenance. The primary maintenance task is battery replacement.

Battery Replacement

The keypad is powered by a 9V battery. When the keypad's backlight dims or the keypad becomes unresponsive, it is time to replace the battery.

1. Open the protective flip-up cover of the keypad.
2. Carefully remove the keypad from its mounting screws.
3. Locate the battery compartment on the back of the keypad.
4. Remove the old 9V battery and insert a new 9V battery, ensuring correct polarity.
5. Re-mount the keypad and close the cover.
6. Test the keypad to ensure it functions correctly.

Note: Frequent battery drainage (e.g., monthly) may indicate an issue with the keypad or battery quality. Ensure you are using a fresh, high-quality 9V battery.

TROUBLESHOOTING

If you encounter issues with your Acvoce keypad, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Keypad not pairing with opener	<ul style="list-style-type: none">• Incompatible opener (not purple learn button)• Incorrect programming steps• Opener memory full• Garage door not closed during programming	<ul style="list-style-type: none">• Verify your opener has a Purple Learn Button.• Ensure you release * and # immediately after the <i>single beep</i> during PIN setup.• Erase your garage opener's memory according to its manual, then attempt programming again.• Ensure the garage door is fully closed before starting the programming process.
Keypad unresponsive or dim backlight	Low or dead battery	Replace the 9V battery (refer to Maintenance section).
Certain buttons not working	Internal keypad issue or specific button malfunction	Try programming using other remote buttons if possible. If issue persists, contact customer support.
Cannot reset passcode without original paperwork	Specific reset procedure requires original installation instructions/codes.	If you have lost your original paperwork and cannot reset, you may need to erase the opener's memory and reprogram all remotes/keypads. Always keep your manual.

SPECIFICATIONS

Feature	Detail
Brand	Acvoce
Model Numbers	377LM, 940D, 139.53754
Compatibility	Liftmaster/Chamberlain/Sears Craftsman with Purple Learn Button (315MHz)
Number of Channels	3 (operates up to 3 different openers)
Power Source	1 x 9V Battery (included)
Special Features	Backlit Keypad, Weatherproof Cover, Security+ 2.0 Rolling Code Technology
Item Weight	5.6 ounces
Package Dimensions	6.97 x 2.8 x 1.54 inches
Material	Plastic

WARRANTY AND SUPPORT

Acvoce products are built for ease of use and cost-effectiveness. We stand by the quality of our products.

Warranty Information

This Acvoce Garage Door Opener Keypad comes with an industry-leading **1-Year Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

Customer Support

For any questions, technical assistance, or warranty claims, please contact Acvoce customer support. Refer to the contact information provided on the product packaging or the official Acvoce website for the most current support details.

When contacting support, please have your product model number (377LM, 940D, 139.53754) and purchase date available.

