

[Manuals.plus](#) /

› [KitchenAid](#) /

› KitchenAid Digital Glass Kitchen Scale User Manual

KitchenAid KQ908G

KitchenAid Digital Glass Kitchen Scale User Manual

MODEL: KQ908G

Introduction

Thank you for choosing the KitchenAid Digital Glass Kitchen Scale. This manual provides essential information for the safe and efficient operation of your new scale. Designed for precision, this scale accurately measures both dry and liquid ingredients up to 5000g or 5000ml, making it an indispensable tool for your culinary needs. Please read this manual thoroughly before first use and keep it for future reference.

Safety Information

- Always place the scale on a firm, flat, and stable surface to ensure accurate readings.
- Do not immerse the scale in water or any other liquid. The glass surface is easy to clean, but the electronic components are not waterproof.
- Handle the glass surface with care. Although tempered for safety, excessive force or dropping can cause breakage.
- Keep out of reach of children.
- Do not use abrasive cleaners or harsh chemicals on the scale. Wipe with a damp cloth and dry thoroughly.
- Ensure batteries are inserted correctly according to polarity markings. Remove batteries if the scale will not be used for an extended period.

Setup

1. **Unpacking:** Carefully remove the scale from its packaging. Inspect for any damage.
2. **Battery Installation:**
The scale requires 3 AAA batteries (not included). Locate the battery compartment on the underside of the scale.



Image Description: The underside of the KitchenAid Digital Glass Kitchen Scale is shown. The black plastic casing features four circular rubber feet at each corner for stability. In the center, there is a rectangular battery compartment cover, secured by a small screw. Above this cover, two slots are visible, each designed to hold two AAA batteries, with clear markings for positive (+) and negative (-) terminals.

Open the battery compartment cover. Insert 3 AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment. Close the cover securely.

3. **Placement:** Place the scale on a hard, flat, and level surface. Avoid placing it on soft or uneven surfaces, which can affect accuracy.

Operating Instructions

1. Turning On/Off:

Press the large rotary knob located on the front of the scale to turn it on. The display will illuminate and show "0.0". The scale will automatically turn off after 3 minutes of inactivity to conserve battery life, or you can press and hold the rotary knob to manually turn it off.



Image Description: A top-down view of the sleek black KitchenAid Digital Glass Kitchen Scale. The scale has a smooth glass surface with a silver-colored trim at the bottom. A digital display shows "0.0" in bright white numbers. Below the display, a prominent black rotary knob is visible, surrounded by unit labels like "lb oz", "g", "fl oz", and "ml".

2. Unit Selection:

To change the unit of measurement (grams, pounds/ounces, fluid ounces, milliliters), rotate the large knob. The display will cycle through the available units: g (grams), lb oz (pounds and ounces), fl oz (fluid ounces), and ml (milliliters). Select the desired unit before weighing.

3. Tare Function (Add & Weigh):

The tare function allows you to weigh multiple ingredients consecutively in the same container, or to zero out the weight of a container before adding ingredients.

- Place an empty container on the scale. The display will show its weight.
- Press the rotary knob once. The display will reset to "0.0", effectively taring the container's weight.
- Add your first ingredient. The scale will display its weight.
- To add another ingredient, press the rotary knob again to reset the display to "0.0" before adding the next item. Repeat as needed.

4. Weighing Ingredients:

Once the scale is on and the desired unit is selected, place the item(s) to be weighed directly onto the glass surface or into a tared container. The weight will be displayed instantly.



Image Description: The KitchenAid Digital Glass Kitchen Scale is shown from a top-down perspective, resting on a light-colored countertop. Several slices of bright green bell pepper are placed on the scale's black glass surface. The digital display clearly shows a measurement, indicating the weight of the peppers.

Maintenance and Care

- **Cleaning:** The tempered glass surface is stain and odor resistant. To clean, wipe the surface with a damp cloth and mild detergent if necessary. For best results, wipe with a clean, damp cloth and dry thoroughly immediately after use. Do not use abrasive pads, harsh chemicals, or immerse the scale in water.
- **Storage:** Store the scale in a dry place at room temperature. Avoid extreme temperatures or high humidity. Do not place heavy objects on the scale when not in use.
- **Battery Replacement:** If the display shows "Lo" or becomes dim, it's time to replace the batteries. Follow the battery installation steps in the Setup section.

Troubleshooting

Problem	Possible Cause	Solution
Scale does not turn on.	Batteries are dead or incorrectly installed.	Replace batteries with new AAA batteries, ensuring correct polarity.
Inaccurate readings.	Scale is on an uneven surface; weight limit exceeded; external vibrations.	Place scale on a flat, stable surface. Ensure weight does not exceed 5000g/5000ml. Avoid vibrations during use. Re-tare the scale.
Display shows "Err" or "O-Ld".	Overload indication; weight exceeds maximum capacity.	Remove items immediately to prevent damage. Do not exceed 5000g/5000ml.
Display shows "Lo".	Low battery indication.	Replace all 3 AAA batteries.

Specifications

Model Number	KQ908G
Brand	KitchenAid
Dimensions (L x W x H)	5.26 x 25.88 x 21.21 cm
Weight	600 grams
Weight Limit	5 Kilograms (5000g) / 5000 Milliliters (5000ml)
Material	Tempered Glass
Display Type	LED
Power Source	3 x AAA Batteries (not included)
Color	Black

Warranty and Support

KitchenAid products are manufactured to high-quality standards and are warranted against defects in materials and workmanship. For specific warranty details and duration, please refer to the warranty card included with your purchase or visit the official KitchenAid website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact KitchenAid customer service through their official channels.

Please note: Information regarding spare parts availability was not provided in the product details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09BM4T6G3>

More documents and user manuals: **<https://manuals.plus/>**