

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- > [Total](#) /
- > [Total Digital Kitchen Scale 30kg \(Model: TES1201\) - User Manual](#)

### Total TES1201

## Total Digital Kitchen Scale 30kg

MODEL: TES1201

User Manual

[Overview](#) [Features](#) [Safety](#) [Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

### 1. Overview

The Total Digital Kitchen Scale (Model TES1201) is designed for precise weighing in kitchen environments. It features a high capacity of 30 kilograms and a clear LED display, making it suitable for various culinary tasks.



Image 1.1: Total Digital Kitchen Scale Model TES1201. This image displays the scale's main body, weighing platform, and digital display.

## 2. Product Features

---

- **High Capacity:** Weighs up to 30 kilograms, suitable for a wide range of ingredients.
- **Digital Accuracy:** Provides precise measurements for consistent results.
- **LED Display:** Clear and easy-to-read digital display.
- **Tare Function:** Allows you to subtract the weight of a container to get an accurate measurement of its contents.
- **Durable Construction:** Made with metal material for longevity.
- **Compact Design:** Mini form factor for easy storage and use.

## 3. Safety Information

---

Please read all safety instructions before using the scale to prevent injury or damage to the device.

- Do not exceed the maximum weight capacity of 30 kg.
- Place the scale on a flat, stable surface to ensure accurate readings.
- Avoid exposing the scale to extreme temperatures, direct sunlight, or high humidity.
- Do not immerse the scale in water or other liquids. Clean with a damp cloth only.
- Keep the scale away from strong electromagnetic fields, which may affect accuracy.
- This product is not intended for commercial use or for weighing hazardous materials.

## 4. Package Contents

---

Verify that all items are present upon opening the package:

- Total Digital Kitchen Scale (Model TES1201) - 1 unit
- User Manual - 1 copy
- *Note: Batteries are not included and must be purchased separately.*

## 5. Setup

---

1. **Unpack the Scale:** Carefully remove the scale from its packaging.
2. **Install Batteries:** Locate the battery compartment on the underside of the scale. Open the cover and insert the required batteries (e.g., AA or AAA, typically 2 or 3, though not specified in data) according to the polarity indicators (+/-). Close the battery compartment securely.
3. **Placement:** Place the scale on a hard, flat, and stable surface. Avoid soft surfaces like carpets, which can affect accuracy.

## 6. Operating Instructions

---

1. **Power On:** Press the **ON/OFF** button to turn on the scale. The display will show "0.0" or "0" when ready.
2. **Select Unit (if applicable):** If your scale supports multiple units (e.g., grams, kilograms, pounds, ounces), press the **UNIT** button to cycle through the available units until your desired unit is displayed.
3. **Weighing Items:** Place the item directly onto the center of the weighing platform. The weight will be displayed on the LED screen.
4. **Tare Function:** To weigh items in a container, first place the empty container on the scale. Press the **TARE** button (sometimes labeled "Z/T" or "T"). The display will reset to "0.0". Now, add the items you wish to weigh into the container, and the display will show only the net weight of the items.
5. **Power Off:** Press and hold the **ON/OFF** button for a few seconds to turn off the scale. The scale may also have an auto-off function to conserve battery life.

## 7. Maintenance and Care

- **Cleaning:** Wipe the scale surface with a soft, damp cloth. Do not use abrasive cleaners or immerse the scale in water.
- **Storage:** Store the scale in a cool, dry place. Avoid placing heavy objects on the scale when not in use.
- **Battery Replacement:** If the display shows a low battery indicator (e.g., "Lo"), replace the batteries promptly to ensure accurate operation. Remove batteries if the scale will not be used for an extended period.

## 8. Troubleshooting

Problem	Possible Cause	Solution
Scale does not turn on.	Dead or incorrectly installed batteries.	Check battery polarity. Replace batteries if necessary.
Inaccurate readings.	Uneven surface, overloaded, or interference.	Place on a flat, stable surface. Do not exceed 30 kg. Keep away from electronic devices.
"Lo" or "Err" displayed.	Low battery or overload.	Replace batteries. Remove excess weight if overloaded.

## 9. Specifications

Feature	Detail
Brand	Total
Model Number	TES1201
Type	Digital Kitchen Scale
Maximum Weight Capacity	30 kilograms
Reading Accuracy	1 Grams
Display Type	LED
Material	Metal
Color	Green
Item Weight	10 grams
Package Dimensions	37.2 x 32.4 x 11.8 cm
Batteries Required	Yes (Not included)
Special Features	High weight capacity, Tare function

## 10. Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.

You can typically find contact information on the manufacturer's official website or on the product packaging.