

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Electrolux](#) /

› [Electrolux Ergorapido ERG36 2-in-1 Vertical Vacuum Cleaner User Manual](#)

Electrolux ERG36

Electrolux Ergorapido ERG36 2-in-1 Vertical Vacuum Cleaner User Manual

Model: ERG36

1. INTRODUCTION

Thank you for choosing the Electrolux Ergorapido ERG36 2-in-1 Vertical Vacuum Cleaner. This powerful and efficient appliance is designed to provide practical and effective cleaning for your home. Its versatile 2-in-1 design allows for easy transition between floor cleaning and hard-to-reach areas. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your vacuum cleaner.

Please read this manual carefully before using the appliance and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances, including the following:

- Read all instructions before using this appliance.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Electrolux Ergorapido ERG36 Main Unit (Vertical Vacuum)
- Detachable Handheld Unit
- Charging Base / Wall Mount
- Power Adapter
- Turbo Nozzle (PET nozzle)
- Brush Tool
- Crevice Tool / Extension
- HEPA Filter (pre-installed)
- User Manual (this document)



Image: Electrolux Ergorapido ERG36 with its various included accessories, such as the turbo nozzle, brush, and extension tool.

4. ASSEMBLY

Follow these steps to assemble your Electrolux Ergorapido ERG36:

- 1. Attach the Handle:** Insert the handle into the main body of the vertical vacuum until it clicks securely into place.
- 2. Attach the Floor Nozzle:** Connect the floor nozzle to the bottom of the main vertical unit. Ensure it is firmly attached.

3. Install the Handheld Unit: The handheld unit is typically pre-installed or easily slides into the main vertical frame. Ensure it is seated correctly.



Image: The fully assembled Electrolux Ergorapido ERG36 2-in-1 Vertical Vacuum Cleaner in its upright position.



Image: The Electrolux Ergorapido ERG36 showing the handheld unit detached from the main stick, highlighting its 2-in-1 functionality.

5. CHARGING THE BATTERY

Before first use, fully charge the vacuum cleaner for approximately 4 hours. The battery provides up to 45 minutes of runtime on a full charge.

1. Place the vacuum cleaner on its charging base or connect the power adapter directly to the charging port.
2. Plug the power adapter into a suitable wall outlet.
3. The charging indicator lights on the handle will illuminate, indicating that the unit is charging.

4. Once fully charged, the indicator lights will show a steady illumination or turn off, depending on the model.

Note: For optimal battery life, avoid completely draining the battery before recharging. Store the vacuum in a cool, dry place when not in use.

6. OPERATING INSTRUCTIONS

6.1. Vertical Vacuum Mode

1. Ensure the handheld unit is securely docked in the main vertical body.
2. Press the power button on the handle to turn on the vacuum cleaner.
3. Select the desired power setting (if available) for different cleaning tasks.
4. Maneuver the vacuum across hard floors. The ergonomic design and weight distribution make it easy to handle.



Image: The Electrolux Ergorapido ERG36 in operation on a hard floor, demonstrating its axial cyclonic technology for consistent suction.

6.2. Handheld Vacuum Mode

1. Press the release button to detach the handheld unit from the main vertical body.
2. Attach the desired accessory (e.g., crevice tool, brush tool, or turbo nozzle) to the handheld unit's suction opening.
3. Press the power button on the handheld unit to activate.
4. Use the handheld unit for cleaning upholstery, car interiors, shelves, or other hard-to-reach areas.



Image: The Electrolux Ergorapido ERG36 handheld unit equipped with the crevice tool, ideal for cleaning narrow gaps and corners.



Image: The Electrolux Ergorapido ERG36 handheld unit with the brush tool attached, suitable for cleaning delicate surfaces and upholstery.

6.3. Using the PET Nozzle (Turbo Nozzle)

The included turbo nozzle is specifically designed for efficient removal of pet hair and embedded dirt from carpets and upholstery.

- Attach the turbo nozzle to the handheld unit.
- Move the nozzle slowly over the surface to allow the rotating brush to agitate and lift pet hair and debris.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

7.1. Emptying the Dustbin

Empty the dustbin regularly, especially when it reaches the 'MAX' fill line, to maintain suction power.

1. Ensure the vacuum is turned off.

2. Detach the handheld unit.
3. Locate the dustbin release button and press it to open the dustbin.
4. Empty the contents into a waste bin.
5. Close the dustbin securely.

7.2. Cleaning the Filters

The ERG36 features a 5-stage HEPA filtration system, removing up to 99.99% of microparticles and allergens. Clean the filters regularly to maintain filtration efficiency.

1. Remove the dustbin as described above.
2. Carefully remove the filter assembly from the dustbin.
3. Tap the filters gently over a waste bin to remove loose dust.
4. If heavily soiled, rinse the filters under lukewarm running water. Do not use detergents.
5. Allow the filters to air dry completely for at least 24 hours before reinserting them. Do not use a hairdryer or other heating devices.
6. Reassemble the filters and dustbin, then reattach to the handheld unit.

7.3. BrushRollClean™ Function

The unique BrushRollClean™ function allows for easy cleaning of tangled hair and fibers from the brush roll.

1. Ensure the vacuum is turned on and in vertical mode.
2. Place the vacuum on a hard, flat surface.
3. Press the BrushRollClean™ pedal (located on the floor nozzle) with your foot.
4. Hold the pedal down for approximately 5-10 seconds. The internal blade will cut and vacuum up tangled hair.
5. Release the pedal. The brush roll is now clean.

8. TROUBLESHOOTING

If you encounter issues with your Electrolux Ergorapido ERG36, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is discharged Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Reduced suction power	Dustbin is full Filters are clogged Nozzle or hose is blocked Brush roll is tangled	Empty the dustbin Clean or replace the filters Check and clear any blockages Use BrushRollClean™ function or manually clean brush roll
Battery runtime is short	Battery not fully charged Using high power setting continuously Battery life degradation	Ensure battery is fully charged Use lower power settings when possible Contact customer support for battery replacement options

Problem	Possible Cause	Solution
Unusual noise during operation	Blockage in nozzle or hose Foreign object in brush roll	Check and clear any blockages Inspect brush roll and remove any foreign objects

If the problem persists after attempting these solutions, please contact Electrolux customer support.

9. SPECIFICATIONS

Feature	Detail
Model Number	ERG36
Brand	Electrolux
Color	Red
Form Factor	Vertical, 2-in-1 Handheld
Power Source	Battery Powered
Wattage	700 watts
Battery Runtime	Up to 45 minutes
Filter Type	HEPA Filter (5-stage filtration)
Dustbin Capacity	420ml (as per product description)
Special Features	BrushRollClean™, Axial Cyclonic Technology
Surface Recommendation	Hard floor
Product Weight	3050 Grams
EAN	7896347164009

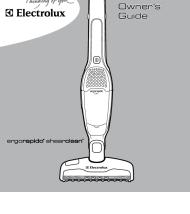
10. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Electrolux website for your region. Keep your proof of purchase for warranty claims.

For technical support, spare parts, or service inquiries, please contact Electrolux customer service. Contact details can typically be found on the Electrolux website or on the product packaging.

You can also visit the [Electrolux Store on Amazon](#) for more product information.

Related Documents - ERG36

	<p><u>Electrolux Pure A9 Air Purifier Instruction Manual</u></p> <p>Comprehensive instruction manual for the Electrolux Pure A9 air purifier, covering setup, operation, maintenance, troubleshooting, and warranty information.</p>
	<p><u>Electrolux Ergorapido Cordless Vacuum Cleaner Manual</u></p> <p>Instruction book for the Electrolux Ergorapido cordless vacuum cleaner, including EHVS2510AW and EHVS3510AR models. Provides important safety information, operating instructions, troubleshooting tips, and warranty details.</p>
	<p><u>Electrolux Ergorapido ShearClean Cordless Vacuum Cleaner Owner's Guide</u></p> <p>Official owner's guide for the Electrolux Ergorapido ShearClean cordless vacuum cleaner. Find instructions on setup, operation, maintenance, troubleshooting, and warranty information.</p>
	<p><u>Electrolux Ergorapido Cordless Vacuum Cleaner User Manual</u></p> <p>User manual for the Electrolux Ergorapido cordless vacuum cleaner, covering assembly, charging, operation, maintenance, and safety precautions.</p>
	<p><u>Electrolux Air Cleaner User Manual: Models ELAP15, ELAP30, ELAP40, ELAP45</u></p> <p>Comprehensive user manual for Electrolux Air Cleaner models ELAP15, ELAP30, ELAP40, and ELAP45. Includes setup instructions, features, control panel details, filter replacement, maintenance, troubleshooting, warranty information, and safety precautions.</p>
	<p><u>Electrolux Pure A9 Air Purifier User Manual</u></p> <p>User manual and operating details for the Electrolux Pure A9 HEPA filter air purifier, model PA91-606DG, including fan speed control and technical notes.</p>

